


---

## THE WIRELESS PRINTER

### HOLDING THE PRINTER

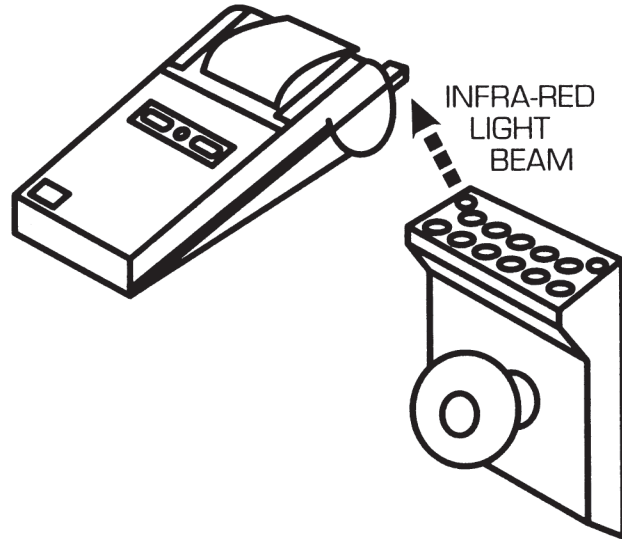


Because the printer couples to the OMNIBLOCK optically, you must take care to hold it as shown above and provide an unobstructed path along the dotted line. Do not let the printer paper block this path!

### INSTALLING BATTERIES

Remove the battery compartment door from the rear of the printer. Install 4 fresh 'AA' batteries in alternating directions, as marked in the printer. Replace the battery compartment door.

### PRINTER CONTROLS

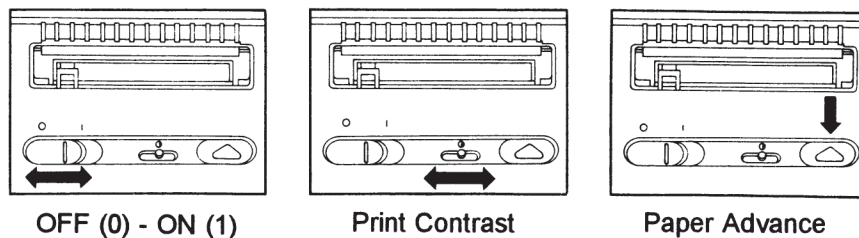

Turn the printer ON before entering the OMNIBLOCK master code. After about 10 minutes of inactivity, the printer will switch to low-power mode to conserve batteries. To further extend battery life, turn the printer OFF when not in use and set the contrast to the lowest comfortable setting.

## **THE WIRELESS PRINTER (Cont.)**

---

### **INSTALLING PAPER (Part No. WP 106)**

Tear or cut the end of a new roll of black thermal paper evenly at a slight angle. Do not use paper with folds or uneven edges.

Open the paper compartment door and position the paper with the curl *facing up*. Slip the angled cut into the paper slot. While applying slight pressure to the paper, press and hold the paper advance button until the paper is completely past the print head. If the paper jams, pull backwards **very slowly**. Place paper in the compartment and close the paper compartment door.

To avoid damage to the thermal print head:

- Do not operate the printer without paper
- Do not pull on the paper - use the paper advance button
- Do not pull the paper backward through the printer unless jammed

### **SELF TEST/BATTERY TEST**

If a printer problem is suspected (*most printing problems are the result of misalignment of the printer above the OMNILOCK*), or to check the printer batteries, perform the following:

- Turn the printer off
- Hold down the paper advance button and turn the printer on
- Release the paper advance button

The self test will run, and the battery life indicator will print from BAT:5 (new) to BAT:1 (replace)

### **ENVIRONMENTAL LIMITS**

- Do not use the Wireless Printer in the rain.
- Do not leave in direct sunlight or in a hot car - *This will melt the printer case and void the warranty!*