


PARTS LIST 9700/F9700 SERIES RIM EXIT DEVICE

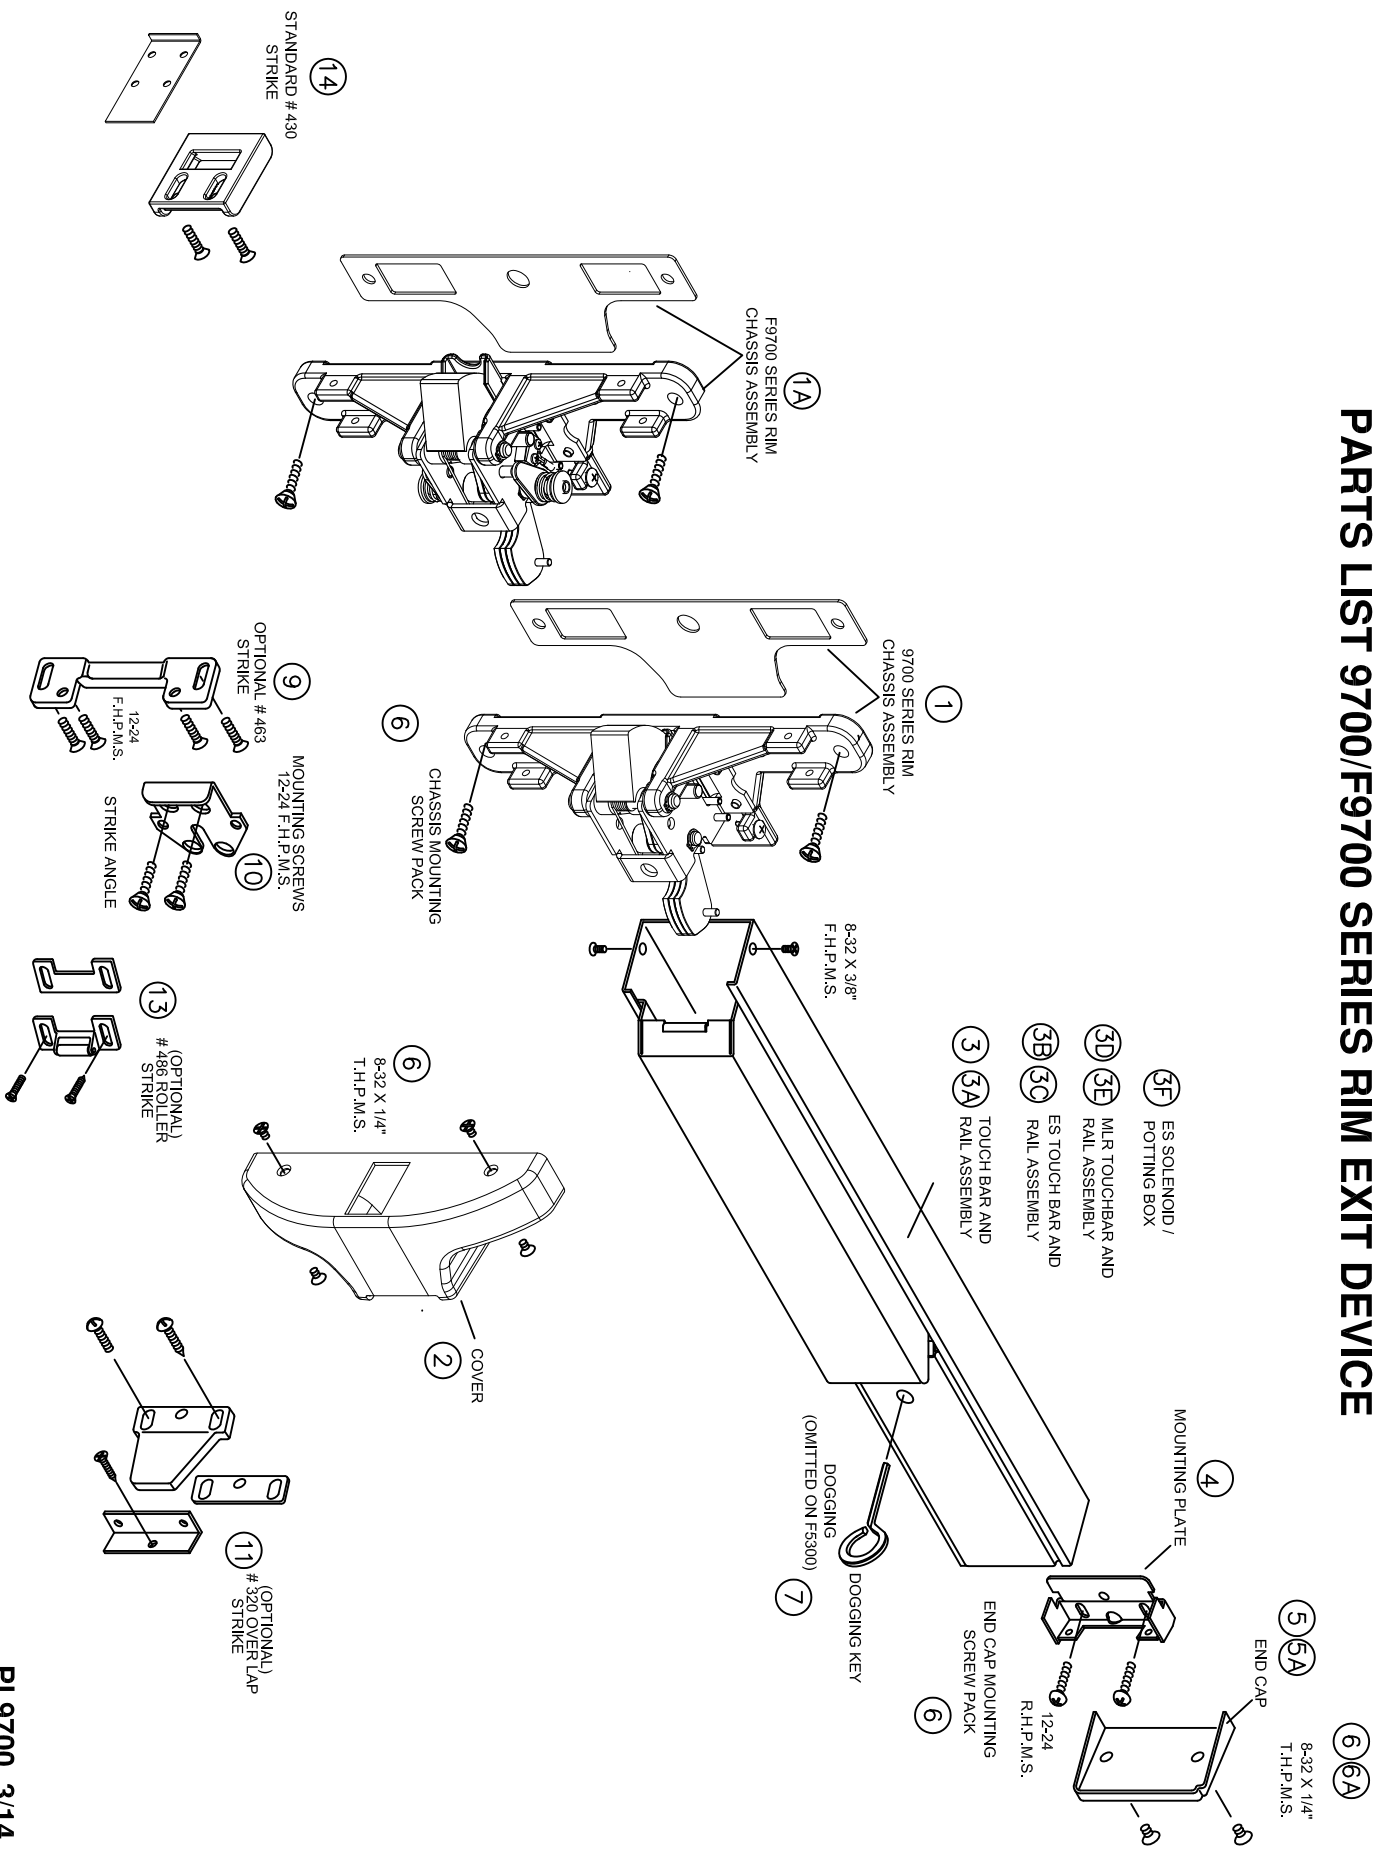

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
1	CHASASSY97	95059261	CHASSIS ASSEMBLY 9700 RIM EXIT DEVICE
1A	CHASASSYF97	95059621	CHASSIS ASSEMBLY F9700 RIM EXIT DEVICE
2	CHCOV 97 PNT	95065687	CHASSIS COVER 9700 689/691/693/695/696
2	CHCOV 97 605	95065688	CHASSIS COVER 9700 605
2	CHCOV 97 606	95065689	CHASSIS COVER 9700 606
2	CHCOV 97 611	95065690	CHASSIS COVER 9700 611
2	CHCOV 97 612	95065691	CHASSIS COVER 9700 612
2	CHCOV 97 613	95059262	CHASSIS COVER 9700 613
2	CHCOV 97 619	95065692	CHASSIS COVER 9700 619
2	CHCOV 97 625	95061141	CHASSIS COVER 9700 625
2	CHCOV 97 626	95065693	CHASSIS COVER 9700 626
2	CHCOV 97 630	95060065	CHASSIS COVER 9700 630
3	TBR AA 689	18002416	TOUCHBAR ASSY. 9000 AA 689
3	TBR AA 695	18002417	TOUCHBAR ASSY. 9000 AA 695
3	TBR AA 696	18002418	TOUCHBAR ASSY. 9000 AA 696
3	TBR AA 691	18002419	TOUCHBAR ASSY. 9000 AA 691
3	TBR AA 693	95071099	TOUCHBAR ASSY. 9000 AA 693
3	TBR AA 605	18002426	TOUCHBAR ASSY. 9000 AA 605
3	TBR AA 606	18002421	TOUCHBAR ASSY. 9000 AA 606
3	TBR AA 611	18002427	TOUCHBAR ASSY. 9000 AA 611
3	TBR AA 612	18002422	TOUCHBAR ASSY. 9000 AA 612
3	TBR AA 613	95071178	TOUCHBAR ASSY. 9000 AA 613
3	TBR AA 619	95061870	TOUCHBAR ASSY. 9000 AA 619
3	TBR AA 625	18002428	TOUCHBAR ASSY. 9000 AA 625
3	TBR AA 626	18002424	TOUCHBAR ASSY. 9000 AA 626
3	TBR AA 630	18002423	TOUCHBAR ASSY. 9000 AA 630
3	TBR BB 689	18002429	TOUCHBAR ASSY. 9000 BB 689
3	TBR BB 695	18002430	TOUCHBAR ASSY. 9000 BB 695
3	TBR BB 696	18002431	TOUCHBAR ASSY. 9000 BB 696
3	TBR BB 691	18002432	TOUCHBAR ASSY. 9000 BB 691
3	TBR BB 693	TBR BB 693	TOUCHBAR ASSY. 9000 BB 693
3	TBR BB 605	18002439	TOUCHBAR ASSY. 9000 BB 605
3	TBR BB 606	18002434	TOUCHBAR ASSY. 9000 BB 606
3	TBR BB 611	18002440	TOUCHBAR ASSY. 9000 BB 611
3	TBR BB 612	18002435	TOUCHBAR ASSY. 9000 BB 612
3	TBR BB 613	18002438	TOUCHBAR ASSY. 9000 BB 613
3	TBR BB 619	TBR BB 619	TOUCHBAR ASSY. 9000 BB 619
3	TBR BB 625	18002441	TOUCHBAR ASSY. 9000 BB 625
3	TBR BB 626	18002437	TOUCHBAR ASSY. 9000 BB 626
3	TBR BB 630	18002436	TOUCHBAR ASSY. 9000 BB 630
3A	FTBR AA 689	18002442	TOUCHBAR ASSY. F9000 AA 689
3A	FTBR AA 695	18002443	TOUCHBAR ASSY. F9000 AA 695
3A	FTBR AA 696	18002444	TOUCHBAR ASSY. F9000 AA 696
3A	FTBR AA 691	18002445	TOUCHBAR ASSY. F9000 AA 691
3A	FTBR AA 693	FTBR AA 693	TOUCHBAR ASSY. F9000 AA 693
3A	FTBR AA 605	18002452	TOUCHBAR ASSY. F9000 AA 605
3A	FTBR AA 606	18002447	TOUCHBAR ASSY. F9000 AA 606
3A	FTBR AA 611	18002453	TOUCHBAR ASSY. F9000 AA 611
3A	FTBR AA 612	18002448	TOUCHBAR ASSY. F9000 AA 612
3A	FTBR AA 613	18002451	TOUCHBAR ASSY. F9000 AA 613
3A	FTBR AA 619	FTBR AA 619	TOUCHBAR ASSY. F9000 AA 619
3A	FTBR AA 625	18002454	TOUCHBAR ASSY. F9000 AA 625
3A	FTBR AA 626	18002450	TOUCHBAR ASSY. F9000 AA 626
3A	FTBR AA 630	18002449	TOUCHBAR ASSY. F9000 AA 630
3A	FTBR BB 689	18002455	TOUCHBAR ASSY. F9000 BB 689
3A	FTBR BB 695	18002456	TOUCHBAR ASSY. F9000 BB 695
3A	FTBR BB 696	18002457	TOUCHBAR ASSY. F9000 BB 696
3A	FTBR BB 691	18002458	TOUCHBAR ASSY. F9000 BB 691
3A	FTBR BB 693	FTBR BB 693	TOUCHBAR ASSY. F9000 BB 693
3A	FTBR BB 605	18002465	TOUCHBAR ASSY. F9000 BB 605
3A	FTBR BB 606	18002460	TOUCHBAR ASSY. F9000 BB 606
3A	FTBR BB 611	18002466	TOUCHBAR ASSY. F9000 BB 611
3A	FTBR BB 612	18002461	TOUCHBAR ASSY. F9000 BB 612
3A	FTBR BB 613	18002464	TOUCHBAR ASSY. F9000 BB 613
3A	FTBR BB 619	FTBR BB 619	TOUCHBAR ASSY. F9000 BB 619
3A	FTBR BB 625	18002467	TOUCHBAR ASSY. F9000 BB 625
3A	FTBR BB 626	18002463	TOUCHBAR ASSY. F9000 BB 626

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
3A	FTBR BB 630	18002462	TOUCHBAR ASSY. F9000 BB 630
3B	ES TBR AA689	ES TBR AA689	ES TBRASSY,9000 AA 689 (REQUIRES PS501 Power Supply)
3B	ES TBR AA695	95059889	ES TBRASSY,9000 AA 695 (REQUIRES PS501 Power Supply)
3B	ES TBR AA696	ES TBR AA696	ES TBRASSY,9000 AA 696 (REQUIRES PS501 Power Supply)
3B	ES TBR AA691	ES TBR AA691	ES TBRASSY,9000 AA 691 (REQUIRES PS501 Power Supply)
3B	ES TBR AA693	ES TBR AA693	ES TBRASSY,9000 AA 693 (REQUIRES PS501 Power Supply)
3B	ES TBR AA605	ES TBR AA605	ES TBRASSY,9000 AA 605 (REQUIRES PS501 Power Supply)
3B	ES TBR AA606	ES TBR AA606	ES TBRASSY,9000 AA 606 (REQUIRES PS501 Power Supply)
3B	ES TBR AA611	ES TBR AA611	ES TBRASSY,9000 AA 611 (REQUIRES PS501 Power Supply)
3B	ES TBR AA612	ES TBR AA612	ES TBRASSY,9000 AA 612 (REQUIRES PS501 Power Supply)
3B	ES TBR AA613	95057351	ES TBRASSY,9000 AA 613 (REQUIRES PS501 Power Supply)
3B	ES TBR AA619	ES TBR AA619	ES TBRASSY,9000 AA 619 (REQUIRES PS501 Power Supply)
3B	ES TBR AA625	ES TBR AA625	ES TBRASSY,9000 AA 625 (REQUIRES PS501 Power Supply)
3B	ES TBR AA626	95061106	ES TBRASSY,9000 AA 626 (REQUIRES PS501 Power Supply)
3B	ES TBR AA630	95057764	ES TBRASSY,9000 AA 630 (REQUIRES PS501 Power Supply)
3B	ES TBR BB689	95060203	ES TBRASSY,9000 BB 689 (REQUIRES PS501 Power Supply)
3B	ES TBR BB695	95070831	ES TBRASSY,9000 BB 695 (REQUIRES PS501 Power Supply)
3B	ES TBR BB696	ES TBR BB696	ES TBRASSY,9000 BB 696 (REQUIRES PS501 Power Supply)
3B	ES TBR BB691	ES TBR BB691	ES TBRASSY,9000 BB 691 (REQUIRES PS501 Power Supply)
3B	ES TBR BB693	ES TBR BB693	ES TBRASSY,9000 BB 693 (REQUIRES PS501 Power Supply)
3B	ES TBR BB605	ES TBR BB605	ES TBRASSY,9000 BB 605 (REQUIRES PS501 Power Supply)
3B	ES TBR BB606	95057840	ES TBRASSY,9000 BB 606 (REQUIRES PS501 Power Supply)
3B	ES TBR BB611	ES TBR BB611	ES TBRASSY,9000 BB 611 (REQUIRES PS501 Power Supply)
3B	ES TBR BB612	95057702	ES TBRASSY,9000 BB 612 (REQUIRES PS501 Power Supply)
3B	ES TBR BB613	95057249	ES TBRASSY,9000 BB 613 (REQUIRES PS501 Power Supply)
3B	ES TBR BB619	ES TBR BB619	ES TBRASSY,9000 BB 619 (REQUIRES PS501 Power Supply)
3B	ES TBR BB625	18003135	ES TBRASSY,9000 BB 625 (REQUIRES PS501 Power Supply)
3B	ES TBR BB626	95056646	ES TBRASSY,9000 BB 626 (REQUIRES PS501 Power Supply)
3B	ES TBR BB630	95057259	ES TBRASSY,9000 BB 630 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA689	95071169	ES TBRASSY,F9000 AA 689 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA695	95061037	ES TBRASSY,F9000 AA 695 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA696	ES FTBR AA696	ES TBRASSY,F9000 AA 696 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA691	ES FTBR AA691	ES TBRASSY,F9000 AA 691 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA693	ES FTBR AA693	ES TBRASSY,F9000 AA 693 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA605	ES FTBR AA605	ES TBRASSY,F9000 AA 605 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA606	ES FTBR AA606	ES TBRASSY,F9000 AA 606 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA611	ES FTBR AA611	ES TBRASSY,F9000 AA 611 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA612	ES FTBR AA612	ES TBRASSY,F9000 AA 612 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA613	ES FTBR AA613	ES TBRASSY,F9000 AA 613 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA619	ES FTBR AA619	ES TBRASSY,F9000 AA 619 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA625	ES FTBR AA625	ES TBRASSY,F9000 AA 625 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA626	ES FTBR AA626	ES TBRASSY,F9000 AA 626 (REQUIRES PS501 Power Supply)
3C	ES FTBR AA630	95061026	ES TBRASSY,F9000 AA 630 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB689	ES FTBR BB689	ES TBRASSY,9000 BB 689 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB695	ES FTBR BB695	ES TBRASSY,9000 BB 695 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB696	ES FTBR BB696	ES TBRASSY,9000 BB 696 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB691	ES FTBR BB691	ES TBRASSY,9000 BB 691 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB693	ES FTBR BB693	ES TBRASSY,9000 BB 693 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB605	ES FTBR BB605	ES TBRASSY,9000 BB 605 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB606	ES FTBR BB606	ES TBRASSY,9000 BB 606 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB611	ES FTBR BB611	ES TBRASSY,9000 BB 611 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB612	ES FTBR BB612	ES TBRASSY,9000 BB 612 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB613	ES FTBR BB613	ES TBRASSY,9000 BB 613 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB619	ES FTBR BB619	ES TBRASSY,9000 BB 619 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB625	ES FTBR BB625	ES TBRASSY,9000 BB 625 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB626	95056621	ES TBRASSY,9000 BB 626 (REQUIRES PS501 Power Supply)
3C	ES FTBR BB630	95061934	ES TBRASSY,9000 BB 630 (REQUIRES PS501 Power Supply)
3D	MLR TBR AA689	MLR TBR AA689	MLR TBRASSY,9000 AA 689 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA695	MLR TBR AA695	MLR TBRASSY,9000 AA 695 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA696	MLR TBR AA696	MLR TBRASSY,9000 AA 696 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA691	MLR TBR AA691	MLR TBRASSY,9000 AA 691 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA693	MLR TBR AA693	MLR TBRASSY,9000 AA 693 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA605	MLR TBR AA605	MLR TBRASSY,9000 AA 605 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA606	MLR TBR AA606	MLR TBRASSY,9000 AA 606 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA611	MLR TBR AA611	MLR TBRASSY,9000 AA 611 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA612	MLR TBR AA612	MLR TBRASSY,9000 AA 612 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA613	MLR TBR AA613	MLR TBRASSY,9000 AA 613 (REQUIRES PS610 RF Power Supply)

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
3D	MLR TBR AA619	MLR TBR AA619	MLR TBRASSY,9000 AA 619 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA625	MLR TBR AA625	MLR TBRASSY,9000 AA 625 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA626	MLR TBR AA626	MLR TBRASSY,9000 AA 626 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR AA630	MLR TBR AA630	MLR TBRASSY,9000 AA 630 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB689	MLR TBR BB689	MLR TBRASSY,9000 BB 689 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB695	MLR TBR BB695	MLR TBRASSY,9000 BB 695 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB696	MLR TBR BB696	MLR TBRASSY,9000 BB 696 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB691	MLR TBR BB691	MLR TBRASSY,9000 BB 691 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB693	MLR TBR BB693	MLR TBRASSY,9000 BB 693 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB605	MLR TBR BB605	MLR TBRASSY,9000 BB 605 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB606	MLR TBR BB606	MLR TBRASSY,9000 BB 606 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB611	MLR TBR BB611	MLR TBRASSY,9000 BB 611 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB612	MLR TBR BB612	MLR TBRASSY,9000 BB 612 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB613	MLR TBR BB613	MLR TBRASSY,9000 BB 613 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB619	MLR TBR BB619	MLR TBRASSY,9000 BB 619 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB625	MLR TBR BB625	MLR TBRASSY,9000 BB 625 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB626	MLR TBR BB626	MLR TBRASSY,9000 BB 626 (REQUIRES PS610 RF Power Supply)
3D	MLR TBR BB630	95069073	MLR TBRASSY,9000 BB 630 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA689	MLR FTBR AA689	MLR TBRASSY,F9000 AA 689 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA695	MLR FTBR AA695	MLR TBRASSY,F9000 AA 695 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA696	MLR FTBR AA696	MLR TBRASSY,F9000 AA 696 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA691	MLR FTBR AA691	MLR TBRASSY,F9000 AA 691 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA693	MLR FTBR AA693	MLR TBRASSY,F9000 AA 693 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA605	MLR FTBR AA605	MLR TBRASSY,F9000 AA 605 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA606	MLR FTBR AA606	MLR TBRASSY,F9000 AA 606 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA611	MLR FTBR AA611	MLR TBRASSY,F9000 AA 611 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA612	MLR FTBR AA612	MLR TBRASSY,F9000 AA 612 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA613	MLR FTBR AA613	MLR TBRASSY,F9000 AA 613 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA619	MLR FTBR AA619	MLR TBRASSY,F9000 AA 619 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA625	MLR FTBR AA625	MLR TBRASSY,F9000 AA 625 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA626	MLR FTBR AA626	MLR TBRASSY,F9000 AA 626 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR AA630	MLR FTBR AA630	MLR TBRASSY,F9000 AA 630 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB689	MLR FTBR BB689	MLR TBRASSY,9000 BB 689 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB695	MLR FTBR BB695	MLR TBRASSY,9000 BB 695 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB696	MLR FTBR BB696	MLR TBRASSY,9000 BB 696 (REQUIRES PS610RF Power Supply)
3E	MLR FTBR BB691	MLR FTBR BB691	MLR TBRASSY,9000 BB 691 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB693	MLR FTBR BB693	MLR TBRASSY,9000 BB 693 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB605	MLR FTBR BB605	MLR TBRASSY,9000 BB 605 (REQUIRES PS610RF Power Supply)
3E	MLR FTBR BB606	MLR FTBR BB606	MLR TBRASSY,9000 BB 606 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB611	MLR FTBR BB611	MLR TBRASSY,9000 BB 611 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB612	MLR FTBR BB612	MLR TBRASSY,9000 BB 612 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB613	MLR FTBR BB613	MLR TBRASSY,9000 BB 613 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB619	MLR FTBR BB619	MLR TBRASSY,9000 BB 619 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB625	MLR FTBR BB625	MLR TBRASSY,9000 BB 625 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB626	MLR FTBR BB626	MLR TBRASSY,9000 BB 626 (REQUIRES PS610 RF Power Supply)
3E	MLR FTBR BB630	MLR FTBR BB630	MLR TBRASSY,9000 BB 630 (REQUIRES PS610 RF Power Supply)
3F	ESSLPOTBX	95059477	9000 SERIES SOLENOID & POTTING BOX
	PS610RF	33400018	POWER SUPPLY TO BE USED WITH MLR 9000 SERIES EXITS
	PS501	95008619	POWER SUPPLY USED FOR ES 9000 SERIES EXITS
	ES-2	95047135	ADDITIONAL OR REPLACEMENT CARD FOR PS501 POWER SUPPLY
	ES 105	95003871	POWER TRANSFER RECOMMENDED WITH ES 9000 SERIES EXITS
			Contact factory for availability of C & D length touchbar and rail assemblies. Dogging not available on D bar
4	9ECBRKT	95059476	END CAP MOUNTING PLATE WITH SCREW PACK 9000 (9A)
5	9EC 689	18002285	ENDCAP 9000 689 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 691	18002288	ENDCAP 9000 691 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 693	18002296	ENDCAP 9000 693 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 695	18002286	ENDCAP 9000 695 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 696	18002287	ENDCAP 9000 696 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 605	18002295	ENDCAP 9000 605 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 606	18002290	ENDCAP 9000 606 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 611	18002296	ENDCAP 9000 611 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 612	18002291	ENDCAP 9000 612 (Includes Endcap Mounting Bracket & Mounting Screws)

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
5	9EC 613	18002294	ENDCAP 9000 613 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 619	18002388	ENDCAP 9000 619 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 625	18002297	ENDCAP 9000 625 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 626	18002293	ENDCAP 9000 626 (Includes Endcap Mounting Bracket & Mounting Screws)
5	9EC 630	18002292	ENDCAP 9000 630 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 689	18002298	ENDCAP F9000 689 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 691	18002301	ENDCAP F9000 691 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 693	18002391	ENDCAP F9000 693 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 695	18002299	ENDCAP F9000 695 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 696	18002300	ENDCAP F9000 696 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 605	18002308	ENDCAP F9000 605 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 606	18002303	ENDCAP F9000 606 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 611	18002309	ENDCAP F9000 611 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 612	18002304	ENDCAP F9000 612 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 613	18002307	ENDCAP F9000 613 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 619	18002390	ENDCAP F9000 619 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 625	18002310	ENDCAP F9000 625 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 626	95071296	ENDCAP F9000 626 (Includes Endcap Mounting Bracket & Mounting Screws)
5A	F9EC 630	18002305	ENDCAP F9000 630 (Includes Endcap Mounting Bracket & Mounting Screws)
6	9HSCRPAK	95059919	9H SCREW PACK 9300, 695, 691, 613, 693
6	9ISCRPAK	95059536	9I SCREW PACK 9300 689, 628, 630,626,625
6	9JSCRPAK	95061024	9J SCREW PACK 9300 696, 605, 606
6	9KSCRPAK	95070386	9K SCREW PACK 9300 611, 612
7	DOGKEYPAK	95002638	DOGGING KEY PACK (10 Keys Pack)
8	9 CHASSCRPAK	95059479	9B SCREW PACK CHASSIS MOUNTING 9100 9300 9400 9500 9600, 9700, 9800
8A	F 9CHASSCRPAK	95059917	9CSCREW PACK CHASSIS MOUNTING F9100, F9300, F9400, F9500, F9600, F9700, F9800
9	463	18002400	STRIKE PACK 9700 EXTENDED LIP
10	97STRKANGLSCRPAK	95059569	STRIKE ANGLE SCREW PACK
11	320	95059645	9700 OVERLAP STRIKE
12	430	95060463	430 STRIKE PACK
13	486	95059599	9700 3/4" ROLLER STRIKE
	97CRKT	95065622	CHASSIS REPAIR KIT 9700
	9DRKIT	95052774	DOGGING REPAIR KIT 9000
	MSKIT	95059473	MICRO SWITCH REQUEST TO EXIT KIT
	CD KIT AA 689	95002343	CYLINDER DOGGING KIT 9000 AA 689
	CD KIT AA 691	95002335	CYLINDER DOGGING KIT 9000 AA 691
	CD KIT AA 693	95064816	CYLINDER DOGGING KIT 9000 AA 693
	CD KIT AA 695	95002339	CYLINDER DOGGING KIT 9000 AA 695
	CD KIT AA 696	95002347	CYLINDER DOGGING KIT 9000 AA 696
	CD KIT AA 605	95002353	CYLINDER DOGGING KIT 9000 AA 605
	CD KIT AA 606	95002357	CYLINDER DOGGING KIT 9000 AA 606
	CD KIT AA 611	95002361	CYLINDER DOGGING KIT 9000 AA 611
	CD KIT AA 612	95002365	CYLINDER DOGGING KIT 9000 AA 612
	CD KIT AA 613	95002369	CYLINDER DOGGING KIT 9000 AA 613
	CD KIT AA 619	CD KIT AA 619	CYLINDER DOGGING KIT 9000 AA 619
	CD KIT AA 625	95002373	CYLINDER DOGGING KIT 9000 AA 625
	CD KIT AA 626	95002377	CYLINDER DOGGING KIT 9000 AA 626
	CD KIT AA 630	95002385	CYLINDER DOGGING KIT 9000 AA 630
	CD KIT BB 689	95002345	CYLINDER DOGGING KIT 9000 BB 689
	CD KIT BB 691	95002335	CYLINDER DOGGING KIT 9000 BB 691
	CD KIT BB 693	95064817	CYLINDER DOGGING KIT 9000 BB 693
	CD KIT BB 695	95002341	CYLINDER DOGGING KIT 9000 BB 695
	CD KIT BB 696	95002349	CYLINDER DOGGING KIT 9000 BB 696
	CD KIT BB 605	95002355	CYLINDER DOGGING KIT 9000 BB 605
	CD KIT BB 606	95002359	CYLINDER DOGGING KIT 9000 BB 606
	CD KIT BB 611	95002363	CYLINDER DOGGING KIT 9000 BB 611
	CD KIT BB 612	95002367	CYLINDER DOGGING KIT 9000 BB 612
	CD KIT BB 613	95064815	CYLINDER DOGGING KIT 9000 BB 613
	CD KIT BB 619	CD KIT BB 619	CYLINDER DOGGING KIT 9000 BB 619
	CD KIT BB 625	95002375	CYLINDER DOGGING KIT 9000 BB 625
	CD KIT BB 626	95002379	CYLINDER DOGGING KIT 9000 BB 626

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
	CD KIT BB 630	95002387	CYLINDER DOGGING KIT 9000 BB 630
	CYL NUT	95060028	CYLINDER NUT
	CYL DOG BRKT	95060488	CYLINDER DOGGING BRACKET
	BPA KIT AA 689	BPA KIT AA 689	BATTERY POWERED ALARM 9000 AA 689
	BPA KIT AA 691	BPA KIT AA 691	BATTERY POWERED ALARM 9000 AA 691
	BPA KIT AA 693	BPA KIT AA 693	BATTERY POWERED ALARM 9000 AA 693
	BPA KIT AA 695	BPA KIT AA 695	BATTERY POWERED ALARM 9000 AA 695
	BPA KIT AA 696	BPA KIT AA 696	BATTERY POWERED ALARM 9000 AA 696
	BPA KIT AA 605	BPA KIT AA 605	BATTERY POWERED ALARM 9000 AA 605
	BPA KIT AA 606	BPA KIT AA 606	BATTERY POWERED ALARM 9000 AA 606
	BPA KIT AA 611	BPA KIT AA 611	BATTERY POWERED ALARM 9000 AA 611
	BPA KIT AA 612	BPA KIT AA 612	BATTERY POWERED ALARM 9000 AA 612
	BPA KIT AA 613	BPA KIT AA 613	BATTERY POWERED ALARM 9000 AA 613
	BPA KIT AA 619	BPA KIT AA 619	BATTERY POWERED ALARM 9000 AA 619
	BPA KIT AA 625	BPA KIT AA 625	BATTERY POWERED ALARM 9000 AA 625
	BPA KIT AA 626	BPA KIT AA 626	BATTERY POWERED ALARM 9000 AA 626
	BPA KIT AA 630	BPA KIT AA 630	BATTERY POWERED ALARM 9000 AA 630
	BPA KIT BB 689	BPA KIT BB 689	BATTERY POWERED ALARM 9000 BB 689
	BPA KIT BB 691	BPA KIT BB 691	BATTERY POWERED ALARM 9000 BB 691
	BPA KIT BB 693	BPA KIT BB 693	BATTERY POWERED ALARM 9000 BB 693
	BPA KIT BB 695	95057283	BATTERY POWERED ALARM 9000 BB 695
	BPA KIT BB 696	BPA KIT BB 696	BATTERY POWERED ALARM 9000 BB 696
	BPA KIT BB 605	BPA KIT BB 605	BATTERY POWERED ALARM 9000 BB 605
	BPA KIT BB 606	BPA KIT BB 606	BATTERY POWERED ALARM 9000 BB 606
	BPA KIT BB 611	BPA KIT BB 611	BATTERY POWERED ALARM 9000 BB 611
	BPA KIT BB 612	BPA KIT BB 612	BATTERY POWERED ALARM 9000 BB 612
	BPA KIT BB 613	BPA KIT BB 613	BATTERY POWERED ALARM 9000 BB 613
	BPA KIT BB 619	BPA KIT BB 619	BATTERY POWERED ALARM 9000 BB 619
	BPA KIT BB 625	BPA KIT BB 625	BATTERY POWERED ALARM 9000 BB 625
	BPA KIT BB 626	BPA KIT BB 626	BATTERY POWERED ALARM 9000 BB 626
	BPA KIT BB 630	BPA KIT BB 630	BATTERY POWERED ALARM 9000 BB 630
	BPAR KIT AA 689	BPAR KIT AA 689	BATTERY POWERED ALARM 9000 AUTO REARM AA 689
	BPAR KIT AA 691	BPAR KIT AA 691	BATTERY POWERED ALARM 9000 AUTO REARM AA 691
	BPAR KIT AA 693	BPAR KIT AA 693	BATTERY POWERED ALARM 9000 AUTO REARM AA 693
	BPAR KIT AA 695	BPAR KIT AA 695	BATTERY POWERED ALARM 9000 AUTO REARM AA 695
	BPAR KIT AA 696	BPAR KIT AA 696	BATTERY POWERED ALARM 9000 AUTO REARM AA 696
	BPAR KIT AA 605	BPAR KIT AA 605	BATTERY POWERED ALARM 9000 AUTO REARM AA 605
	BPAR KIT AA 606	BPAR KIT AA 606	BATTERY POWERED ALARM 9000 AUTO REARM AA 606
	BPAR KIT AA 611	BPAR KIT AA 611	BATTERY POWERED ALARM 9000 AUTO REARM AA 611
	BPAR KIT AA 612	BPAR KIT AA 612	BATTERY POWERED ALARM 9000 AUTO REARM AA 612
	BPAR KIT AA 613	BPAR KIT AA 613	BATTERY POWERED ALARM 9000 AUTO REARM AA 613
	BPAR KIT AA 619	BPAR KIT AA 619	BATTERY POWERED ALARM 9000 AUTO REARM AA 619
	BPAR KIT AA 625	BPAR KIT AA 625	BATTERY POWERED ALARM 9000 AUTO REARM AA 625
	BPAR KIT AA 626	BPAR KIT AA 626	BATTERY POWERED ALARM 9000 AUTO REARM AA 626
	BPAR KIT AA 630	BPAR KIT AA 630	BATTERY POWERED ALARM 9000 AUTO REARM AA 630
	BPAR KIT BB 689	95059774	BATTERY POWERED ALARM 9000 AUTO REARM BB 689
	BPAR KIT BB 691	BPAR KIT BB 691	BATTERY POWERED ALARM 9000 AUTO REARM BB 691
	BPAR KIT BB 693	BPAR KIT BB 693	BATTERY POWERED ALARM 9000 AUTO REARM BB 693
	BPAR KIT BB 695	95060930	BATTERY POWERED ALARM 9000 AUTO REARM BB 695
	BPAR KIT BB 696	BPAR KIT BB 696	BATTERY POWERED ALARM 9000 AUTO REARM BB 696
	BPAR KIT BB 605	BPAR KIT BB 605	BATTERY POWERED ALARM 9000 AUTO REARM BB 605
	BPAR KIT BB 606	BPAR KIT BB 606	BATTERY POWERED ALARM 9000 AUTO REARM BB 606
	BPAR KIT BB 611	BPAR KIT BB 611	BATTERY POWERED ALARM 9000 AUTO REARM BB 611
	BPAR KIT BB 612	BPAR KIT BB 612	BATTERY POWERED ALARM 9000 AUTO REARM BB 612
	BPAR KIT BB 613	BPAR KIT BB 613	BATTERY POWERED ALARM 9000 AUTO REARM BB 613
	BPAR KIT BB 619	BPAR KIT BB 619	BATTERY POWERED ALARM 9000 AUTO REARM BB 619
	BPAR KIT BB 625	BPAR KIT BB 625	BATTERY POWERED ALARM 9000 AUTO REARM BB 625
	BPAR KIT BB 626	BPAR KIT BB 626	BATTERY POWERED ALARM 9000 AUTO REARM BB 626
	BPAR KIT BB 630	BPAR KIT BB 630	BATTERY POWERED ALARM 9000 AUTO REARM BB 630
	DWA KIT AA 689	DWA KIT AA 689	DIRECT WIRED ALARM 9000 AA 689
	DWA KIT AA 691	DWA KIT AA 691	DIRECT WIRED ALARM 9000 AA 691
	DWA KIT AA 693	DWA KIT AA 693	DIRECT WIRED ALARM 9000 AA 693
	DWA KIT AA 695	DWA KIT AA 695	DIRECT WIRED ALARM 9000 AA 695
	DWA KIT AA 696	DWA KIT AA 696	DIRECT WIRED ALARM 9000 AA 696
	DWA KIT AA 605	DWA KIT AA 605	DIRECT WIRED ALARM 9000 AA 605

9700 / F9700 SERVICE PARTS LIST REV 03-14

Balloon #	Item #	Part #	DESCRIPTION
	DWA KIT AA 606	DWA KIT AA 606	DIRECT WIRED ALARM 9000 AA 606
	DWA KIT AA 611	DWA KIT AA 611	DIRECT WIRED ALARM 9000 AA 611
	DWA KIT AA 612	DWA KIT AA 612	DIRECT WIRED ALARM 9000 AA 612
	DWA KIT AA 613	DWA KIT AA 613	DIRECT WIRED ALARM 9000 AA 613
	DWA KIT AA 619	DWA KIT AA 619	DIRECT WIRED ALARM 9000 AA 619
	DWA KIT AA 625	DWA KIT AA 625	DIRECT WIRED ALARM 9000 AA 625
	DWA KIT AA 626	DWA KIT AA 626	DIRECT WIRED ALARM 9000 AA 626
	DWA KIT AA 630	DWA KIT AA 630	DIRECT WIRED ALARM 9000 AA 630
	DWA KIT BB 689	DWA KIT BB 689	DIRECT WIRED ALARM 9000 BB 689
	DWA KIT BB 691	DWA KIT BB 691	DIRECT WIRED ALARM 9000 BB 691
	DWA KIT BB 693	DWA KIT BB 693	DIRECT WIRED ALARM 9000 BB 693
	DWA KIT BB 695	DWA KIT BB 695	DIRECT WIRED ALARM 9000 BB 695
	DWA KIT BB 696	DWA KIT BB 696	DIRECT WIRED ALARM 9000 BB 696
	DWA KIT BB 605	DWA KIT BB 605	DIRECT WIRED ALARM 9000 BB 605
	DWA KIT BB 606	DWA KIT BB 606	DIRECT WIRED ALARM 9000 BB 606
	DWA KIT BB 611	DWA KIT BB 611	DIRECT WIRED ALARM 9000 BB 611
	DWA KIT BB 612	DWA KIT BB 612	DIRECT WIRED ALARM 9000 BB 612
	DWA KIT BB 613	DWA KIT BB 613	DIRECT WIRED ALARM 9000 BB 613
	DWA KIT BB 619	DWA KIT BB 619	DIRECT WIRED ALARM 9000 BB 619
	DWA KIT BB 625	DWA KIT BB 625	DIRECT WIRED ALARM 9000 BB 625
	DWA KIT BB 626	DWA KIT BB 626	DIRECT WIRED ALARM 9000 BB 626
	DWA KIT BB 630	95071206	DIRECT WIRED ALARM 9000 BB 630