

Installation Instructions for 93K-95K Cylindrical Locks

For factory-prepared doors only

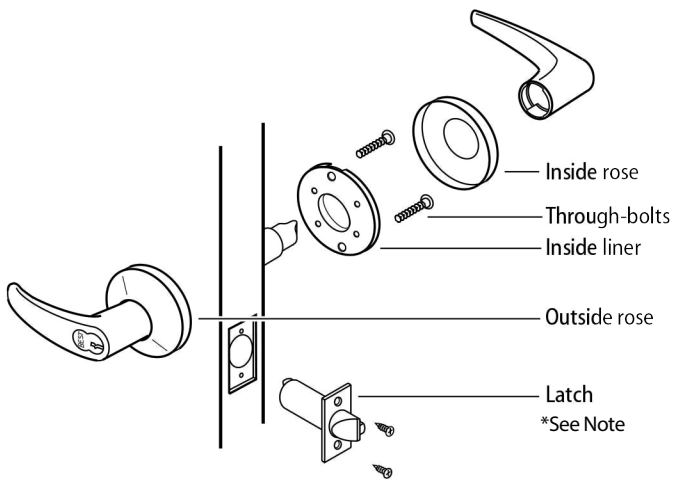


Figure 1 — Overview diagram

Caution: If you use hollow metal doors, determine whether the doors are reinforced enough to support the lock. If door reinforcement is not adequate, consult the door manufacturer for information on proper reinforcement.

Simplified instructions

- 1 Install the latch so that the bevel on the latchbolt faces the strike.
Note: If you are installing the 3/4" latch, please refer to the door preparation instructions A85391. The 3/4" throw latch will not fit the standard door prep.
- 2 Adjust the outside rose assembly so that the chassis is centered in the door. Install the chassis from the outside of the door.
- 3 Install the inside liner, through bolts, rose, lever and strike.

For field door preparation and detailed installation instructions, see the following tasks.

1 Position template

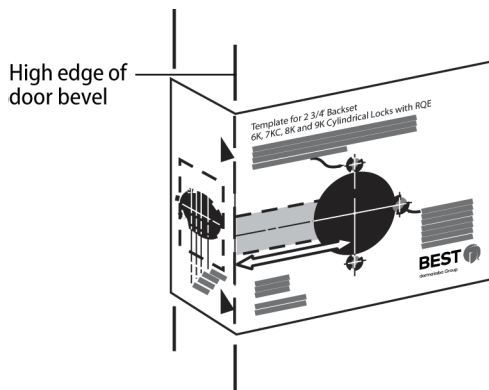


Figure 2 — Placing the template on the high side of the door bevel

- 1 Fold the template and place in position on the high edge of the door bevel as shown in Figure 2.
- 2 Mark the drill points.

Note: Suggested height from floor to centerline of the lock is 40 5/16". If steel frames are used, the latch centerline must be in line with the center of the strike preparation.

2 Bore two holes and install latch

- 1 Bore a 2 1/8" diameter hole from both sides of the door, to the center of the door.
- 2 Drill a 1" diameter hole from the edge of the door that intersects the 2 1/8" hole.
- 3 Mortise the door edge for the latch face.
- 4 Install the latch and check the door swing. Latch tabs should project into the 2 1/8" diameter hole. See figure 3 in task 3.

3 Install boring jig and drill two 5/16" diameter holes

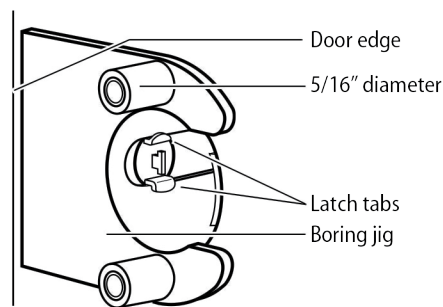


Figure 3 — Positioning the boring jig for drilling the 5/16" holes

- 1 Install the boring jig (KD303) onto the door and engage with latch tabs. Make sure the front edge of the jig is parallel with the door edge as shown in Figure 3.
- 2 Drill two 5/16" diameter holes halfway into the door.
- 3 Turn the boring jig over and repeat steps one and two from the opposite side of the door.

Note: Replace the boring jig after ten door preparations.

4 Adjust lockset to door thickness

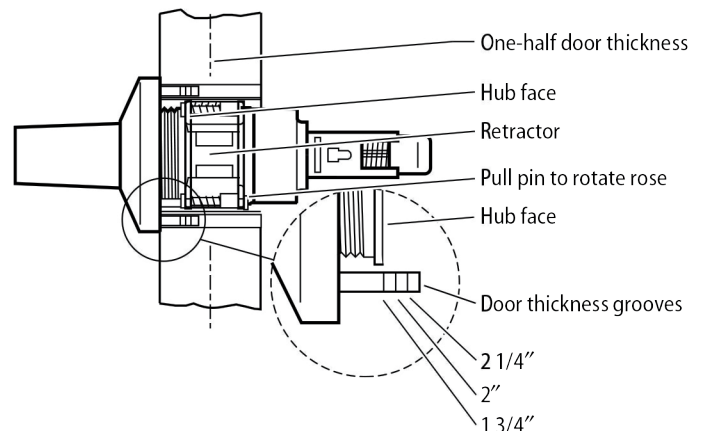


Figure 4 — Adjusting the lock chassis for door thickness

- Pull the rose locking pin and rotate the outside rose liner in or out

—Continued

until the proper door thickness groove on the through bolt stud, lines up with the hub face as shown in Figure 4—enlarged.

Note 1: Make sure the locking pin locks into the rose liner.

Note 2: Locksets will fit doors 1 3/4" to 2 1/4" thick. (A spacer is available for 1 3/8" doors.) See the enlarged view for the correct rose adjustment for these thicknesses.

5 Engage retractor in latch

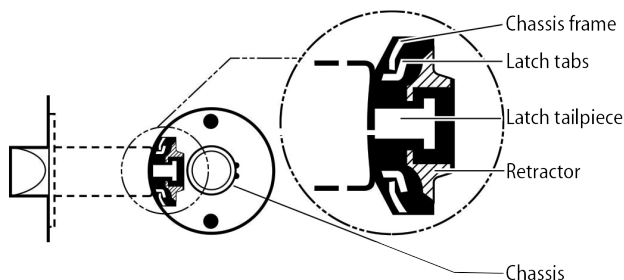


Figure 5 — Engaging the latch and retractor

- With the latch in place, install the chassis from the outside. Make sure the latch tabs engage the chassis frame and the latch tailpiece engages the retractor as shown in Figure 5.

6 Install liner, through-bolts, rose and lever

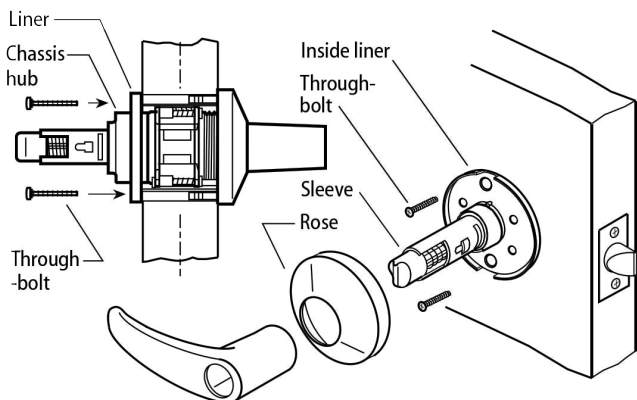


Figure 6 — Installing liner, through bolts, rose, and lever

Note: For lead-lined locksets, slide the lead shield (not shown) over the sleeve and into the 2 1/8" hole.

- Align the holes in the liner with the holes prepared in the door.
- Install through-bolts through the liner and door in the top and bottom holes as shown in Figure 6.
- Tighten the liner onto the door with the through-bolts.
- Slide the rose over the sleeve, then press the rose onto the liner. The rose should fit closely to the door surface.
- With the lever pointing toward the hinges, push the lever on firmly until seated.

7 Install strike plate

- In alignment with the center of the latchbolt, mortise the door jamb to fit the strike box and strike plate.



For assistance or warranty information:
Call 1-800-392-5209 or visit
<https://dhwsupport.dormakaba.com/hc/en-us>

Warning: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

Advertencia: Este fabricante hace saber que no hay cerraduras que puedan proporcionar seguridad completa por sí mismas. Esta cerradura puede fallar forzándola o utilizando medios técnicos o entrando por otra parte del edificio. No hay cerraduras que puedan sustituir precaución, estar al tanto de su entorno y sentido común. Este fabricante también ofrece cerraduras de diferentes grados y rendimientos para ajustarse a su aplicación. Para mejorar la seguridad y reducir riesgos, usted debe consultar con un cerrajero especializado u otro profesional de seguridad.



Si desea ayuda o información sobre la garantía:
llame al 1-800-392-5209 o visite
<https://dhwsupport.dormakaba.com/hc/en-us>

Caution: The deadlocking plunger of the latchbolt must not enter the strike plate opening. The plunger deadlocks the latchbolt and prevents forcing the latch when the door is closed. A gap of more than 1/8" may reduce security and/or cause improper operation of the latchbolt.

- Insert the strike box and secure the strike with screws provided as shown in Figure 7.


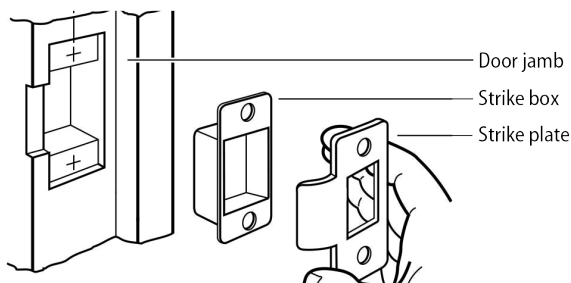


Figure 7 — Installing the strike

8 Assemble and install core

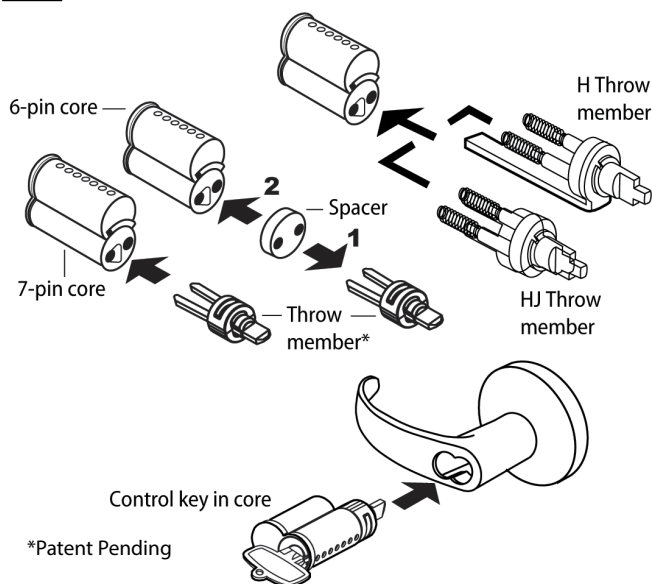

*Patent Pending

Figure 8 — Assembling and installing the core

For 6-pin core users only: Slide the spacer — supplied with your 6-pin cores — over the 7-pin throw member (see Figure 8, top).

For 'H' or 'HJ' functions only: Install the proper throw member shown in Figure 8, top right.

Note: If you have ordered 6-pin cores, you will get one spacer per core with your order. Spacers are not supplied with locks.

- Install the throw member into the back of the core as shown in Figure 8, top.
- Insert the control key into the core and rotate the key 15 degrees to the right.
- Insert the core and throw member into the lever with the control key as shown in Figure 8, bottom.
- Rotate the control key 15 degrees to the left and withdraw the key.

Caution: The control key can be used to remove cores and to access doors. Provide adequate security for the control key.



Pour de l'aide ou des informations sur la garantie:
Veuillez appeler le 1-800-392-5209 ou visiter
<https://dhwsupport.dormakaba.com/hc/en-us>

Advertissement: Le fabricant tient à vous aviser qu'aucun verrou ne peut à lui seul offrir une sécurité complète. Ce verrou peut être mis hors d'état par la force ou des moyens techniques ou être évité par l'utilisation d'une autre entrée sur la propriété. Aucun verrou ne peut remplacer la surveillance de votre environnement et le bon sens. La qualification pour le constructeur est offerte selon différents grades de performance pour différentes applications. Afin d'augmenter la sécurité et de réduire le risque, vous devez consulter un serrurier qualifié ou un autre professionnel de la sécurité.