Installation Instructions: Double Cylinder (10 Function) - Rim Series RDC-10



For online instructions, assistance or warranty information: Call 1-800-392-5209 or visit https://dhwsupport.dormakaba.com/hc/en-us **RIM CYLINDER** CYLINDER BRACKET COLLAR CYLINDER CAM YOKE FINGER On Child and TAIL COVER **REMOVE TAIL EXTENDING** OUTSIDE CYLINDER CAM SURFACE INSIDE FACE **CYLINDER SCREWS** OF DOOR (BY OTHERS) FIG. 1 1" TO 1-1/16" -FIG. 4 LOCKSTILE CASE DO NOT REMOVE Ø THESE SCREWS FIG. 3 **RHRB SHOWN** I - Assemble the Cylinder Assembly, Fig.I The Cylinder Tail must engage the Cylinder Cam, but not protrude outside Cam. 2 - Remove the 2 screws and install the Trim Locking assembly by mounting the screws at location "B" . Fig.2 2 SCREWS REMOVED SCREWS (A) 3 - Secure the Cylinder Assembly to the Lock Stile Case with two screws at -LOCKING ARM CYLINDER location "A". Fig. 3 SCREWS (B) ASSEMBLY 4- Attach lock stile case to door Note: Trim finger must not be longer than I-I/I6" past door surface. Fig. 4 **TRIM LOCKING** ASSEMBLY 5. Assemble cover. FIG. 2 NOTE: 1705,3908, or V3908 Trim- See installation instructions packaged with trim