

8K H & HJ Function - Key Instructions

H Function description

Latch operated by:

- inside knob
- outside key except when blocked by the push button
- emergency key

Key is blocked and visual indicator† is extended by:


- inside push button

†The visual indicator feature is available on the H function only.

Key block and push button released by:


- inside knob
- closing the door

Outside knob is always locked

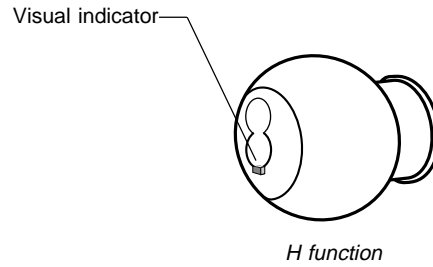

To use the emergency key


1. Remove the core and throw member.
2. Insert the blade of the emergency key into the slot.
3. Turn the key and retract the latch.

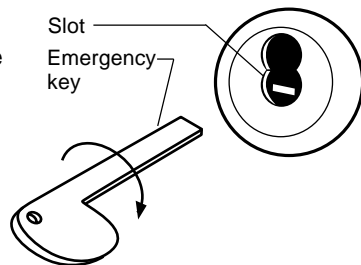

BEST is a trademark of dormakaba USA Inc. ©2021 All rights reserved.

If you cannot remove the operating key

Key is turned 180°

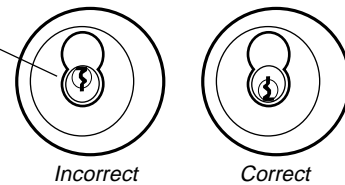

1. Push the inside button.
2. Make sure the key is in the correct position.
3. Remove the key.

T56070_B

8K H & HJ Function - Key Instructions

H Function description

Latch operated by:

- inside knob
- outside key except when blocked by the push button
- emergency key

Key is blocked and visual indicator† is extended by:


- inside push button

†The visual indicator feature is available on the H function only.

Key block and push button released by:


- inside knob
- closing the door

Outside knob is always locked

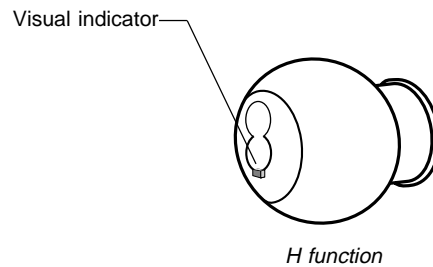

To use the emergency key


1. Remove the core and throw member.
2. Insert the blade of the emergency key into the slot.
3. Turn the key and retract the latch.

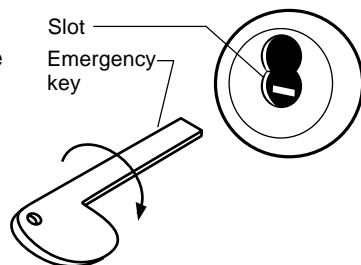

BEST is a trademark of dormakaba USA Inc. ©2021 All rights reserved.

If you cannot remove the operating key

Key is turned 180°

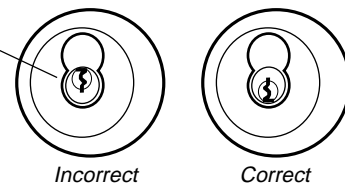

1. Push the inside button.
2. Make sure the key is in the correct position.
3. Remove the key.

T56070_B