

45H series mortise hook spindles


Installation Instructions

1 Installing upper hook spindle

- 1.1 Insert upper hook spindle into hub cavity with hook towards latch.

NOTE: Hook spindle can be installed on either side of door.

NOTE: Use inside lever with hook spindle.

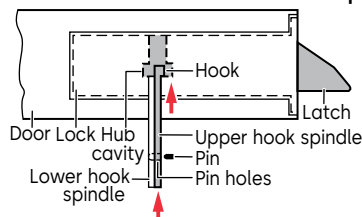

Document translations available.

Scan for product details and downloads.


Call 1-800-392-5209 or visit

<https://dhwsupport.dormakaba.com/hc/en-us> for assistance and warranty information.

WARNING! This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.

2 Installing lower hook spindle

- 2.1 Insert lower hook spindle beside upper spindle and align pin holes.

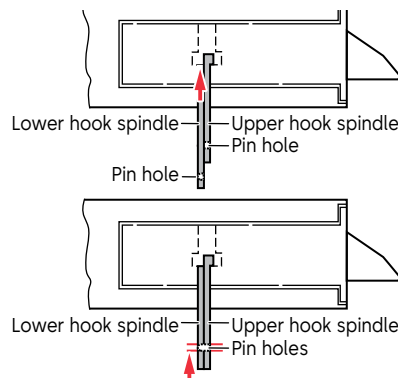

3 Installing and removing pin

- 3.1 Push pin into holes making sure pin is fully inserted.
3.2 To remove pin, push pin out through hole.

NOTE: See 45H/ 47H Installation Instructions, T81162 for mounting trim.

