


Fold along the dotted line and place on the high edge of door bevel.

Template for 2 3/8" and 2 3/4" Backsets for 72KC and 73KC/93K Cylindrical Locks with Alternate Through-Bolt Pattern

Door edge centerline (based on door thickness)

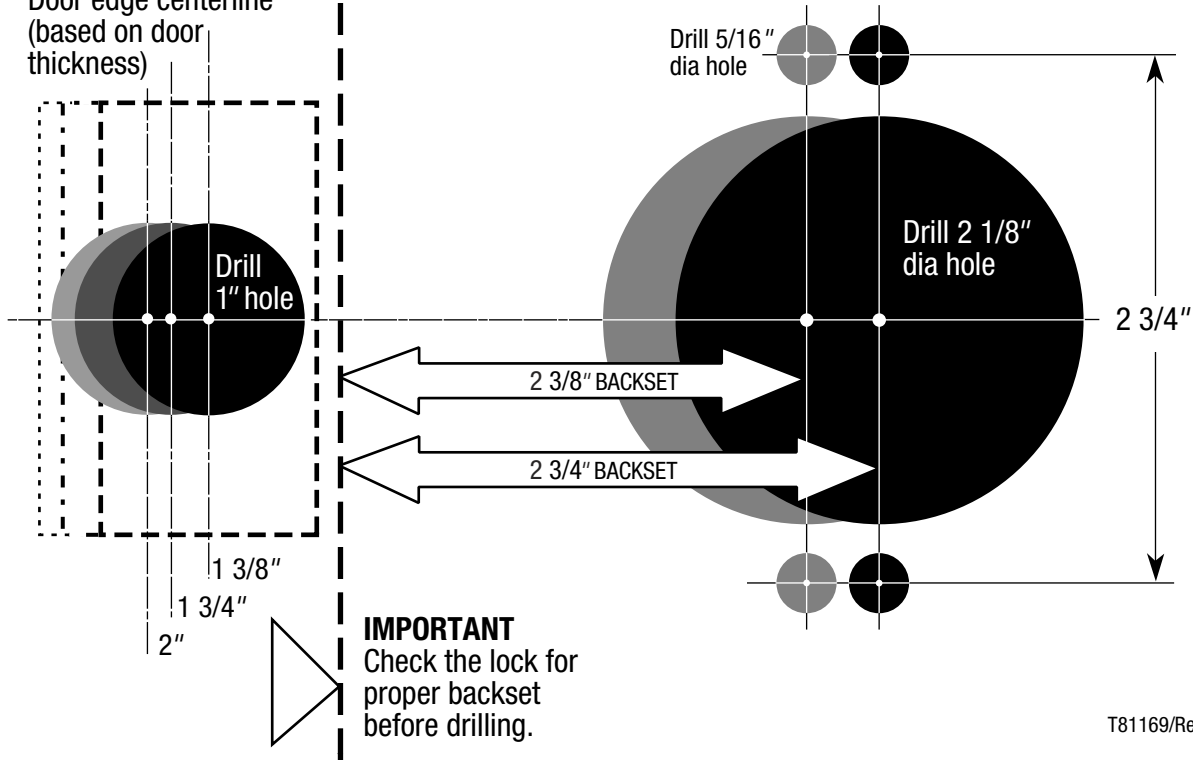

Drill 1" hole

Drill 5/16" dia hole

Drill 2 1/8" dia hole

2 3/4"

2 3/8" BACKSET

2 3/4" BACKSET

1 3/8"

1 3/4"

2"

IMPORTANT
Check the lock for proper backset before drilling.

