


Installation Instructions

9030/9230 Dummy Bar and 9030MS/9230MS Dummy Bar with Micro Switch

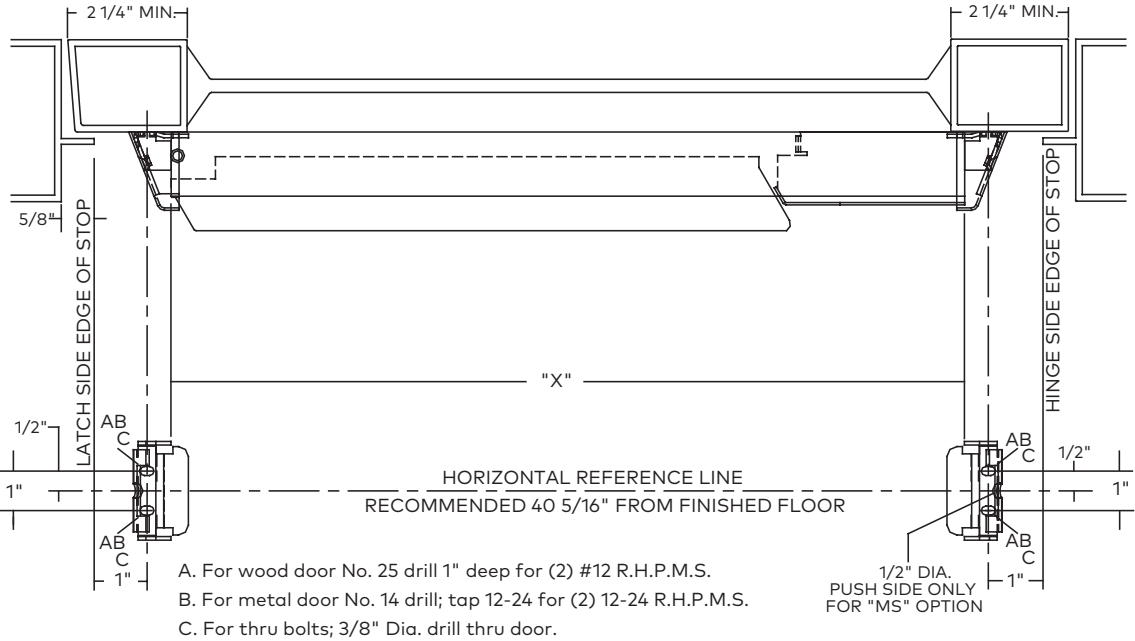

STEP 1

Measure and mark horizontal reference line on push side of door. 40 5/16" from finished floor recommended. Measure and mark vertical referenced line on push side of door. See dimension above.

STEP 2

Drill door for mounting plates. See illustration above, and install with proper screws per above.

STEP 3


Verify door width. If no cutting is required, proceed to Step 4. If cutting is required; Determine length by measuring dimension "X". Mark and cut bar per detail below.

STEP 4

Remove hinge side mounting plate. Slide touch bar and rail assembly under lip of push side mounting plate. Re-install hinge side mounting plate and secure with proper screws.

STEP 5

Install end cover(s) with (4) #8 x 1/4" F.H.P.U.C.M.S.

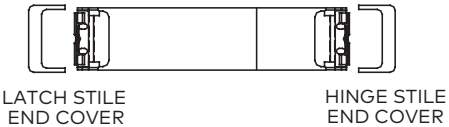

NOTE: GK9030/GK9230 shim kit required on doors with raised glass bead or when surface of door is not flat.

