


Door Closer Models: EHD9016 SPA SP-6 Parallel Arm Installation [Push Side Mount] Optional NFHD Bracket and BSHD Blade Stop Spacer Block Drilling Instructions


For online instructions, assistance or warranty information:
Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

NOTES:

1. DRAWING IS NOT TO SCALE.
2. DIMENSIONS ARE IN INCHES / [MM].
3. RIGHT HAND DOOR SHOWN.
7. MAXIMUM OPENING 180° SHOWN.
4. CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.

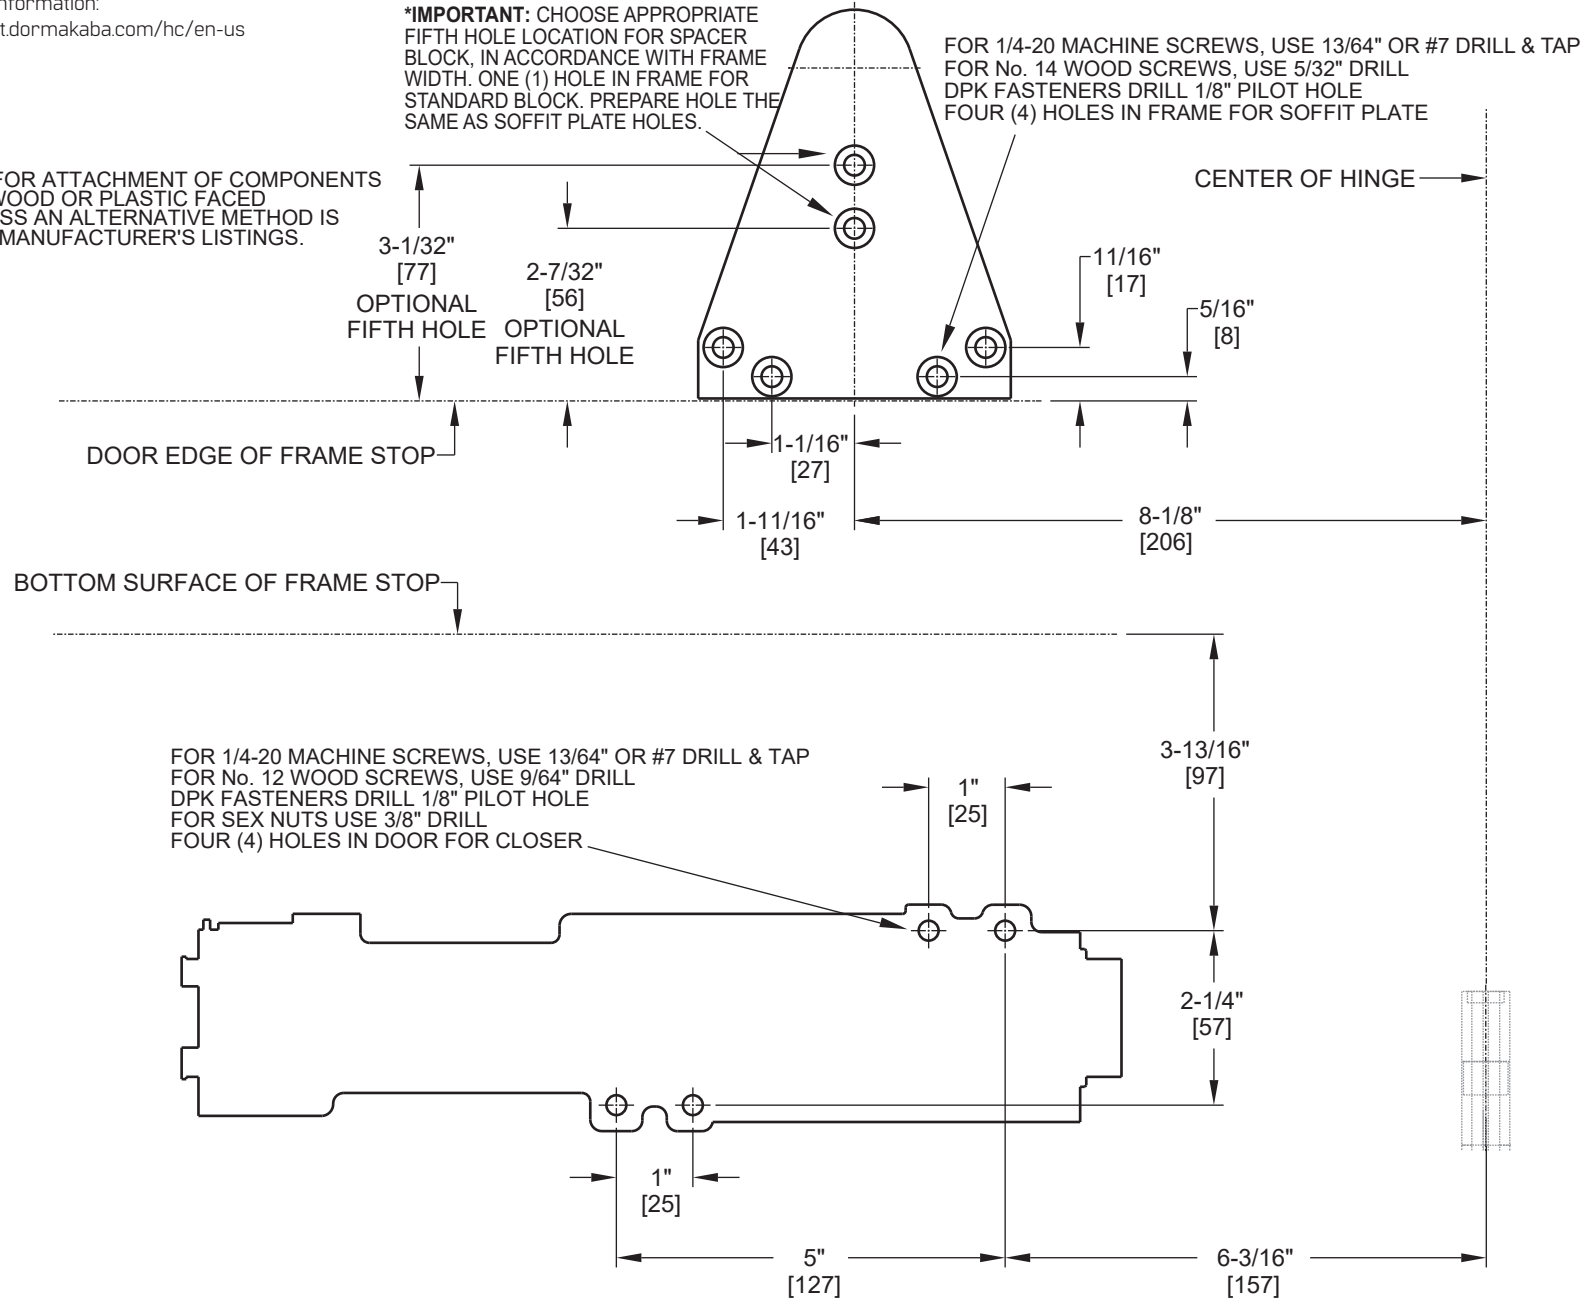

LEFT HAND DOOR ORIENTATION:

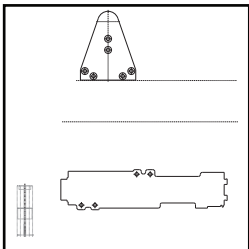

Not to scale. Measurements are for reference only.
Not a drilling template.