

7300 PA08 right hand

PARALLEL TEMPLATE

VERIFY EXACTLY
1" [25.4].




MEASURE SCALE
AFTER PRINTING.

TEMPLATE TO SCALE 1:1, FULL SIZE




METAL - 7/32" & 1/4-20 TAP, FOR WOOD 5/32",
(FOR SEX NUTS USE 3/8")
OPTIONAL SELF TAPPING SCREWS 7/32"

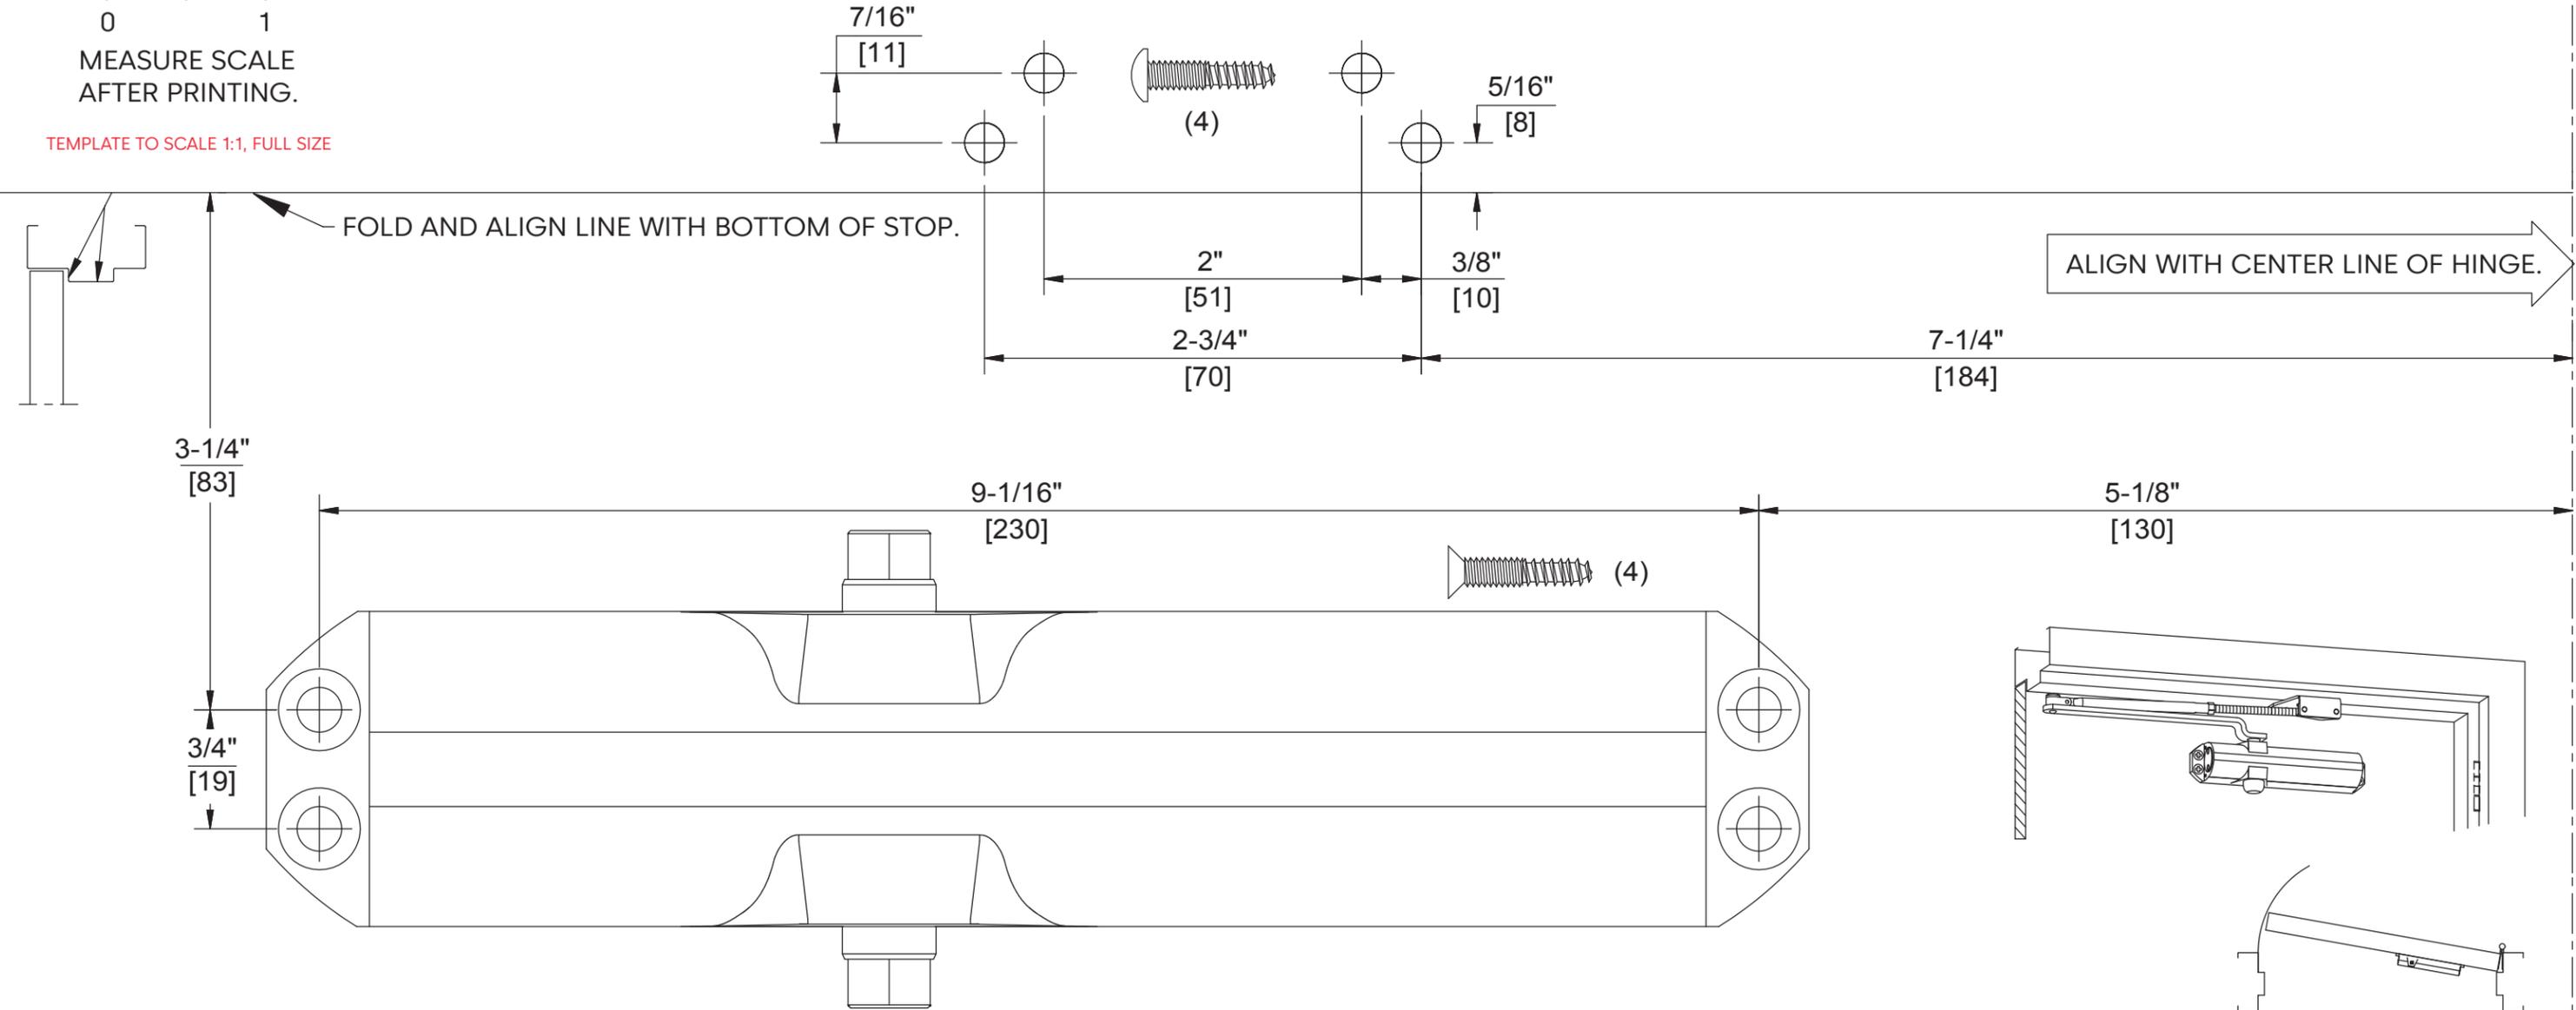

7300 PA08 left hand

PARALLEL TEMPLATE

VERIFY EXACTLY
1" [25.4].



MEASURE SCALE
AFTER PRINTING.

TEMPLATE TO SCALE 1:1, FULL SIZE



METAL - 7/32" & 1/4-20 TAP, FOR WOOD 5/32",
(FOR SEX NUTS USE 3/8")
OPTIONAL SELF TAPPING SCREWS 7/32"

