



9000 Series Y or Z Rigid Trim Instructions


See proper trim template when required. Several lever styles available see catalog.

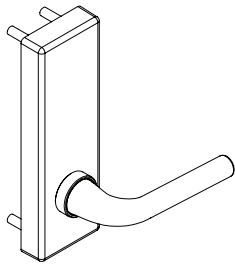


Y*02R

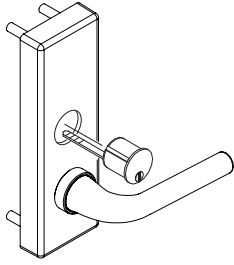


Y*03R

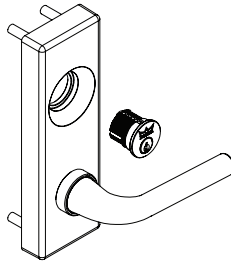

Y*03MR

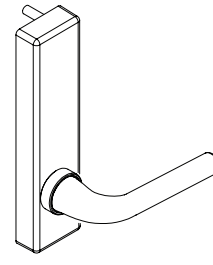

Z*02R

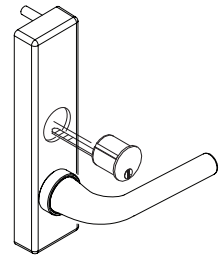


Z*03R

Cylinder specifications, & installation of rigid plate and lever/knob.

Insert sleeve into lever or knob with slots vertical as shown.
 Place nylon washer over sleeve if not done.
 Insert sleeve through collar on trim.
 Place rigid plate over slots of sleeve.
 Place large steel washer on top of rigid plate.
 Insert 10-24 x 2 1/2" Cap head screw through hole in center of rigid plate, through sleeve and secure tightly into lever. (Loc-tite suggested.)

DORMA No. 13 Accepts standard
 For 03 function: 1 1/8" cylinder.

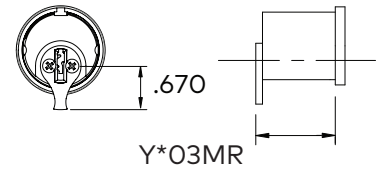

If using "03" trim install rim cylinder using supplied 80CK cylinder mounting cup. Separate instructions supplied with kit.

Mortise "03" trim uses standard 1 1/8" mortise cylinder with Dorma No. 13 cam.

