

# 6K Series Template and Drilling Instructions



dormakaba Group


For online instructions, assistance or warranty information:

Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

Verify exactly  
1" [25.4 mm].



Drill 1"  
[25.4]  
dia. hole for  
all latches.

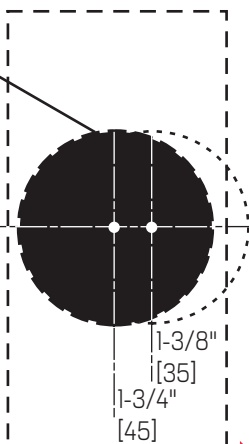

Fold along the dotted line and  
place on high edge of door bevel.

### IMPORTANT:

Check lock for proper  
backset before drilling.

