


REFERENCE UNIT CARTON LABEL FOR UNIT TYPE
 DETERMINE UNIT TYPE SUPPLIED AND ACTIVE DOOR (RH or LH).
 PREPARE DOOR AND FRAME FOR FASTENERS ACCORDING TO TEMPLATE 08281030
 ALSO PREPARE FOR WIRE ACCESS HOLE.

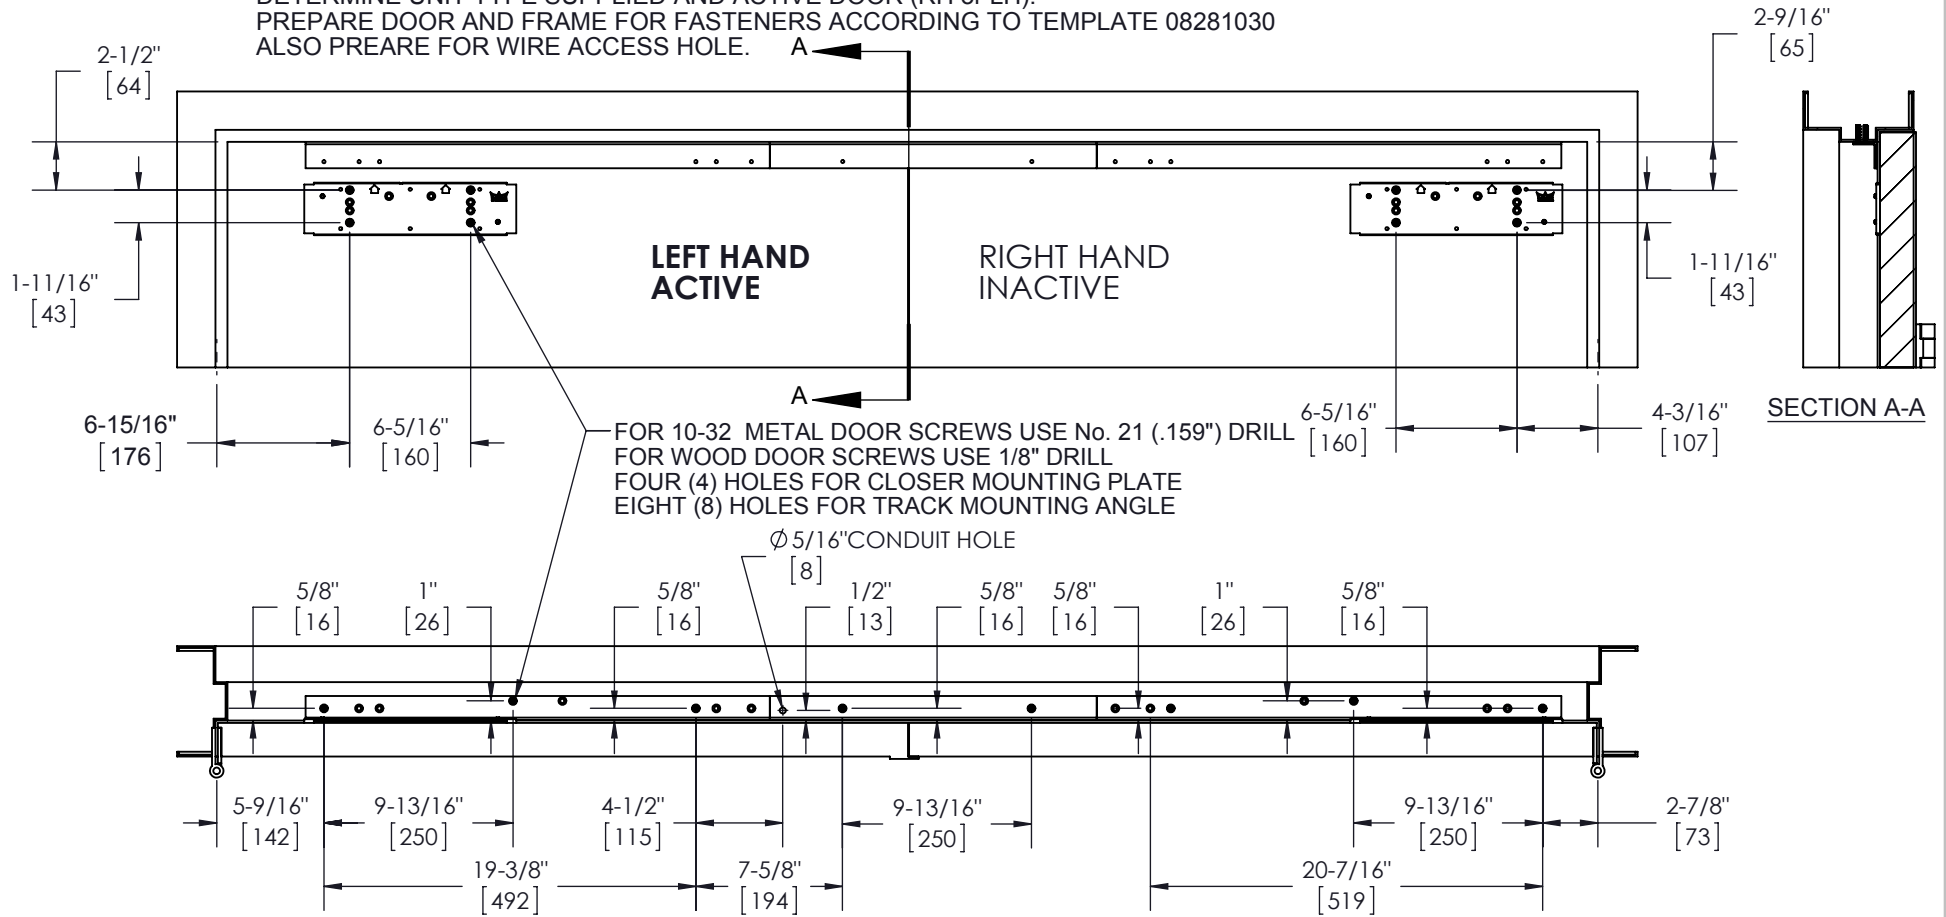

NOTE:


- 1) DO NOT SCALE DRAWING
- 2) DIMENSION ARE IN INCHES [MM]
- 3) SEX NUTS ARE RECOMMENDED FOR ATTACHMENT OF COMPONENTS ON UNREINFORCED DOORS, AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS. UNLESS AN ALTERNATE METHOD IS IDENTIFIED IN THE DOOR MANUFACTURE'S LISTING.
- 4) MAX DEGREE OPENING 102 DEG ACTIVE HAND/ 130 INACTIVE HAND.
- 5) TEMPLATE IS FOR 4-1/2" x 4-1/2" BUTT HINGES AND 3/4" OFFSET PIVOTS.

DOOR CLOSER MODEL: TS93 GSR, GSR/EMF
 TRACK INSTALLATION (PUSH SIDE MOUNT LEFT HAND ACTIVE)
 ELECTRICAL HOLD OPEN WITH DOOR COORDINATOR



DORMA Architectural Hardware
 Reamstown, PA 17567

REFERENCE UNIT CARTON LABEL FOR UNIT TYPE
 DETERMINE UNIT TYPE SUPPLIED AND ACTIVE DOOR (RH or LH).
 PREPARE DOOR AND FRAME FOR FASTENERS ACCORDING TO TEMPLATE 08281030
 ALSO PREPARE FOR WIRE ACCESS HOLE.

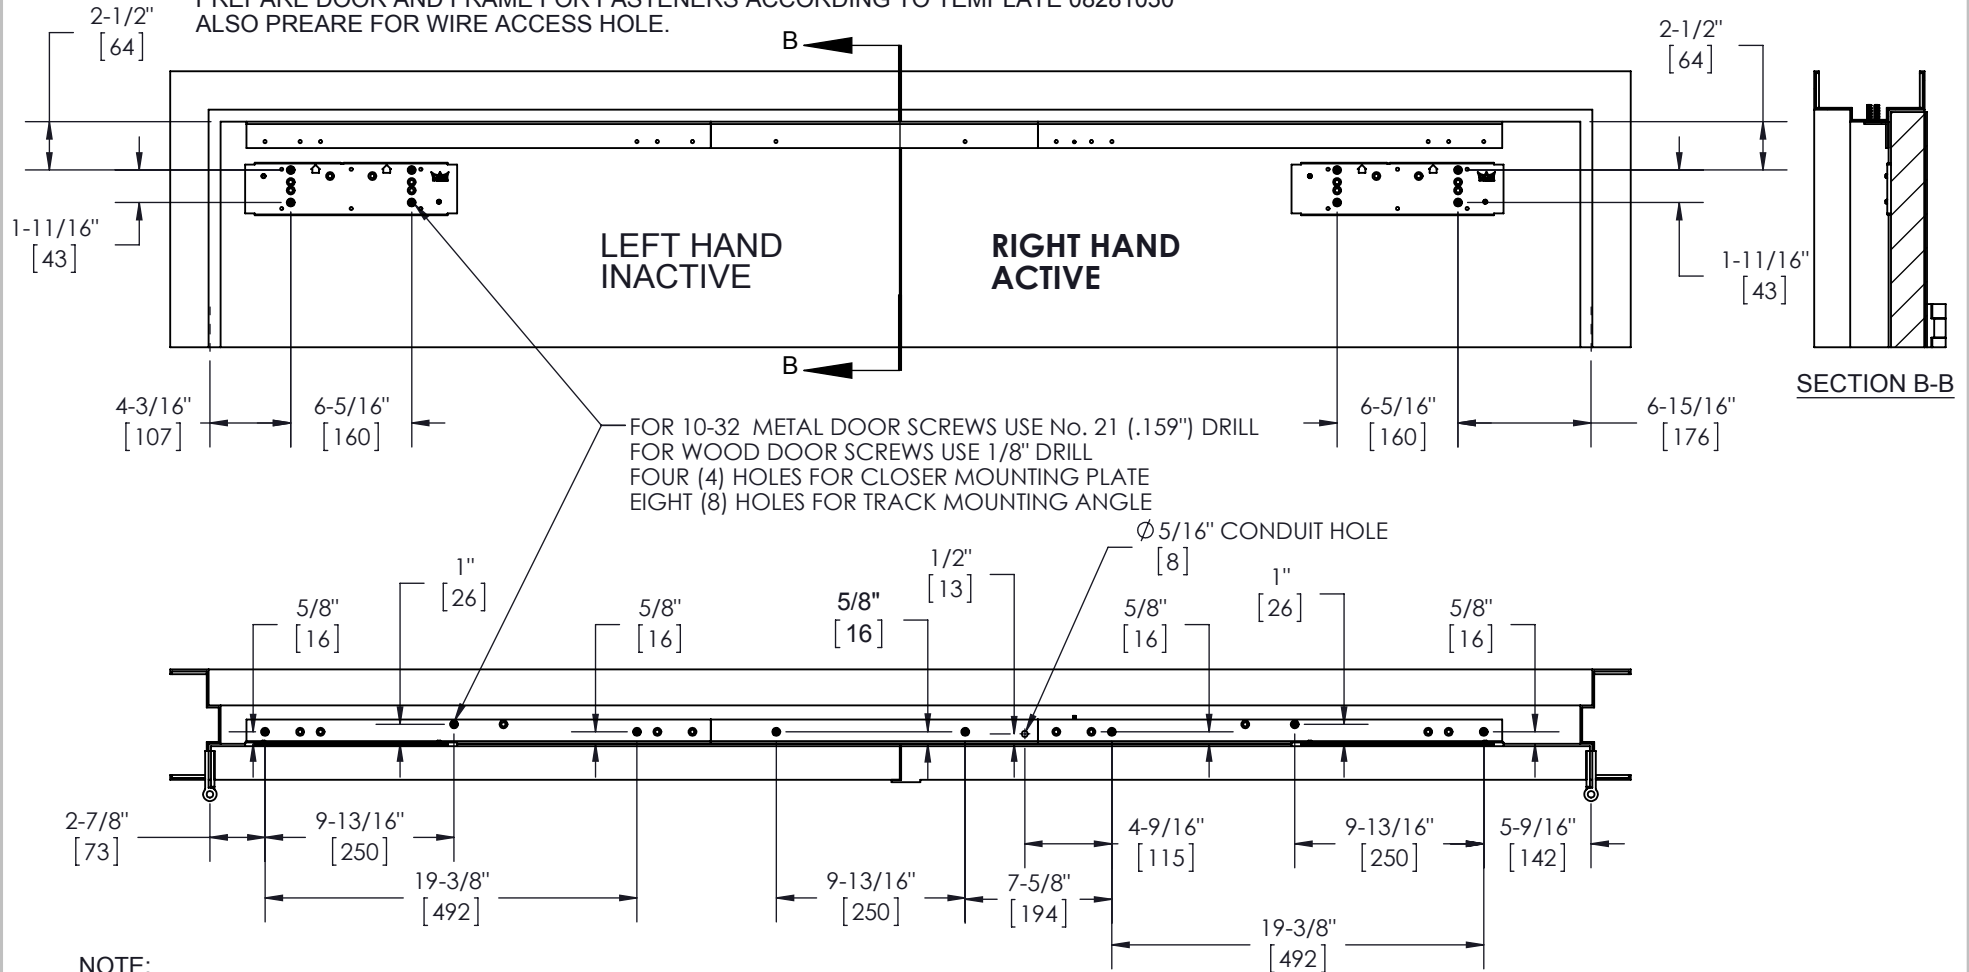

NOTE:

- 1) DO NOT SCALE DRAWING
- 2) DIMENSION ARE IN INCHES [MM]
- 3) SEX NUTS ARE RECOMMENDED FOR ATTACHMENT OF COMPONENTS ON UNREINFORCED DOORS, AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS. UNLESS AN ALTERNATE METHOD IS IDENTIFIED IN THE DOOR MANUFACTURE'S LISTING.
- 4) MAX DEGREE OPENING 102 DEG ACTIVE HAND/ 130 INACTIVE HAND.
- 5) TEMPLATE IS FOR 4-1/2" x 4-1/2" BUTT HINGES AND 3/4" OFFSET PIVOTS.

DOOR CLOSER MODEL: TS93 GSR, GSR/EMF
 TRACK INSTALLATION (PUSH SIDE MOUNT RIGHT HAND ACTIVE)
 ELECTRICAL HOLD OPEN WITH DOOR COORDINATOR



DORMA Architectural Hardware
 Reamstown, PA 17567