



NOTES:

- 1) DO NOT SCALE DRAWING
- 2) DIMENSIONS ARE IN INCHES/[MM]
- 3) LEFT HAND DOOR SHOWN
- 4) CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.
- 5) MAXIMUM OPENING IS 180°
- 6) OPTIONAL DPK FASTENERS (DPK86) FOR STEEL DOOR & FRAME ONLY

FOR 1/4-20 MACHINE SCREWS, USE 13/64" OR #7 DRILL & TAP
 FOR No. 14 WOOD SCREW, USE 5/32" DRILL
 FOR DPK FASTENERS, USE 1/8" DRILL
 THREE (3) HOLES IN SOFFIT FOR BRACKET (SHOWN)

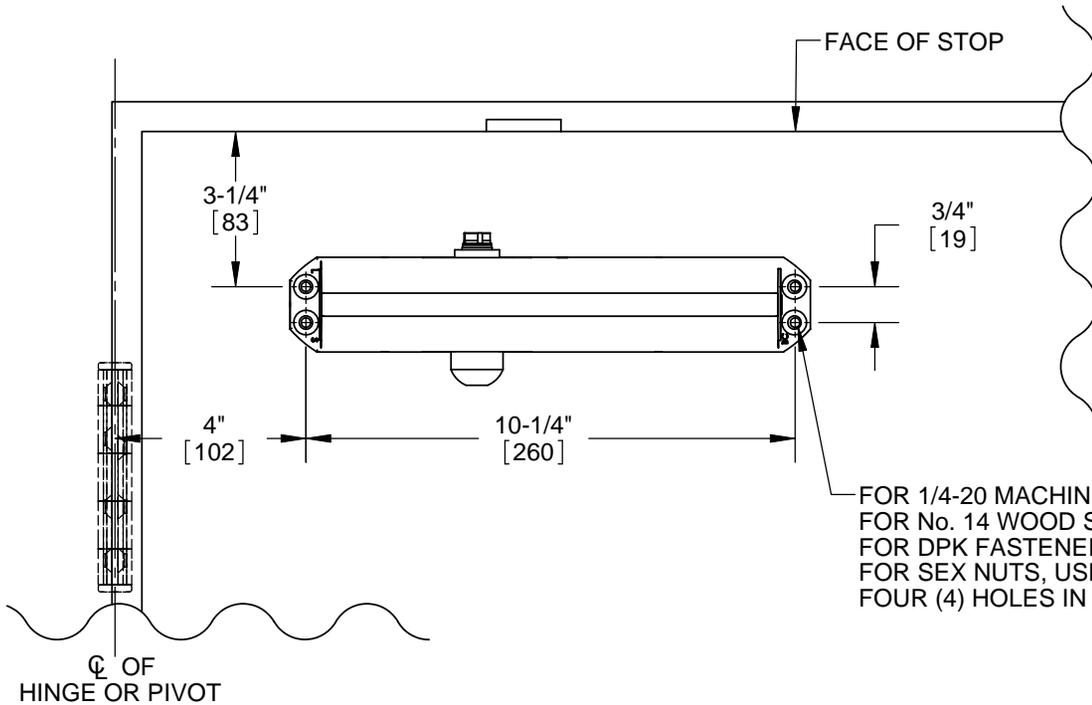


FOR 1/4-20 MACHINE SCREWS, USE 7/32" DRILL & TAP
 FOR No. 14 WOOD SCREWS, USE 5/32" DRILL
 FOR DPK FASTENERS, USE 1/8" DRILL
 FOR SEX NUTS, USE 3/8" DRILL
 FOUR (4) HOLES IN DOOR FOR PLATE (SHOWN)

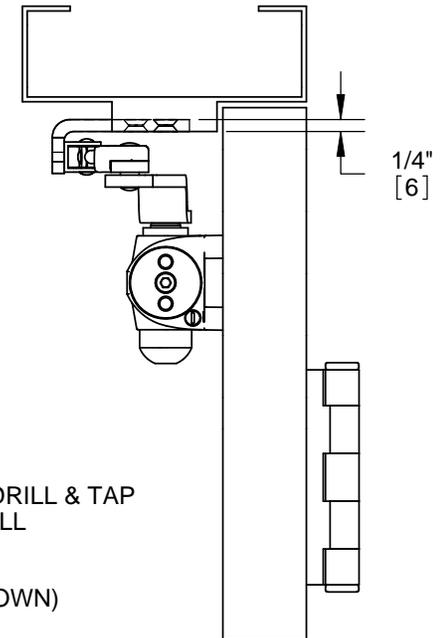

DOOR CLOSER MODELS: 7414 & 7436 ARP x MJ
 PARALLEL ARM INSTALLATION (PUSH SIDE MOUNT)




DORMA Architectural Hardware
 Reamstown, PA 17567

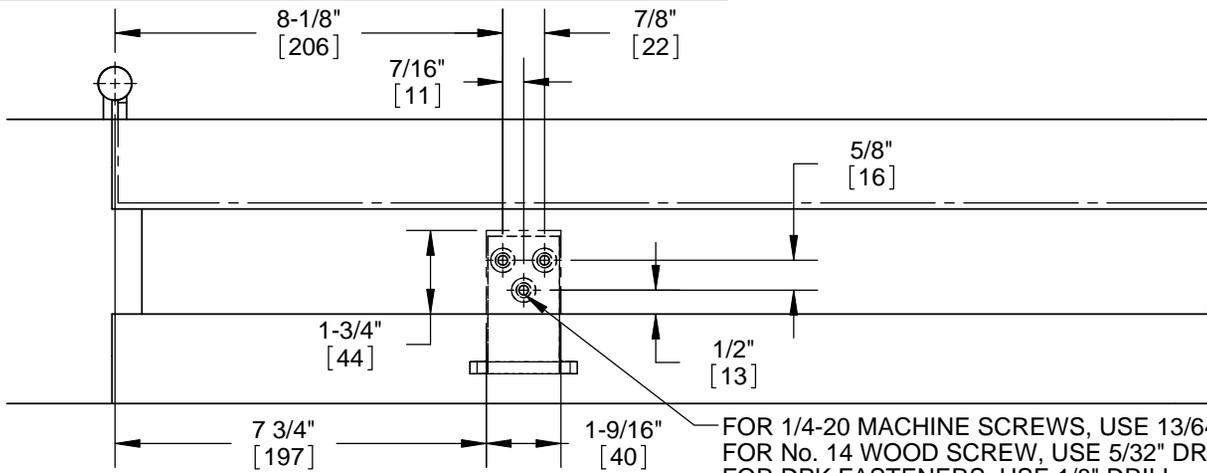


FOR 1/4-20 MACHINE SCREWS, USE 13/64" OR #7 DRILL & TAP
 FOR No. 14 WOOD SCREW, USE 5/32" DRILL
 FOR DPK FASTENERS, USE 1/8" DRILL
 THREE (3) HOLES IN SOFFIT FOR BRACKET (SHOWN)

NOTES:

- 1) DO NOT SCALE DRAWING
- 2) DIMENSIONS ARE IN INCHES/[MM]
- 3) LEFT HAND DOOR SHOWN
- 4) CAUTION: SEX NUTS ARE REQUIRED FOR ATTACHMENT OF COMPONENTS TO UNREINFORCED DOORS AND TO WOOD OR PLASTIC FACED COMPOSITE TYPE FIRE DOORS, UNLESS AN ALTERNATIVE METHOD IS IDENTIFIED IN THE INDIVIDUAL DOOR MANUFACTURER'S LISTINGS.
- 5) MAXIMUM OPENING IS 180°
- 6) OPTIONAL DPK FASTENERS (DPK86) FOR STEEL DOOR & FRAME ONLY

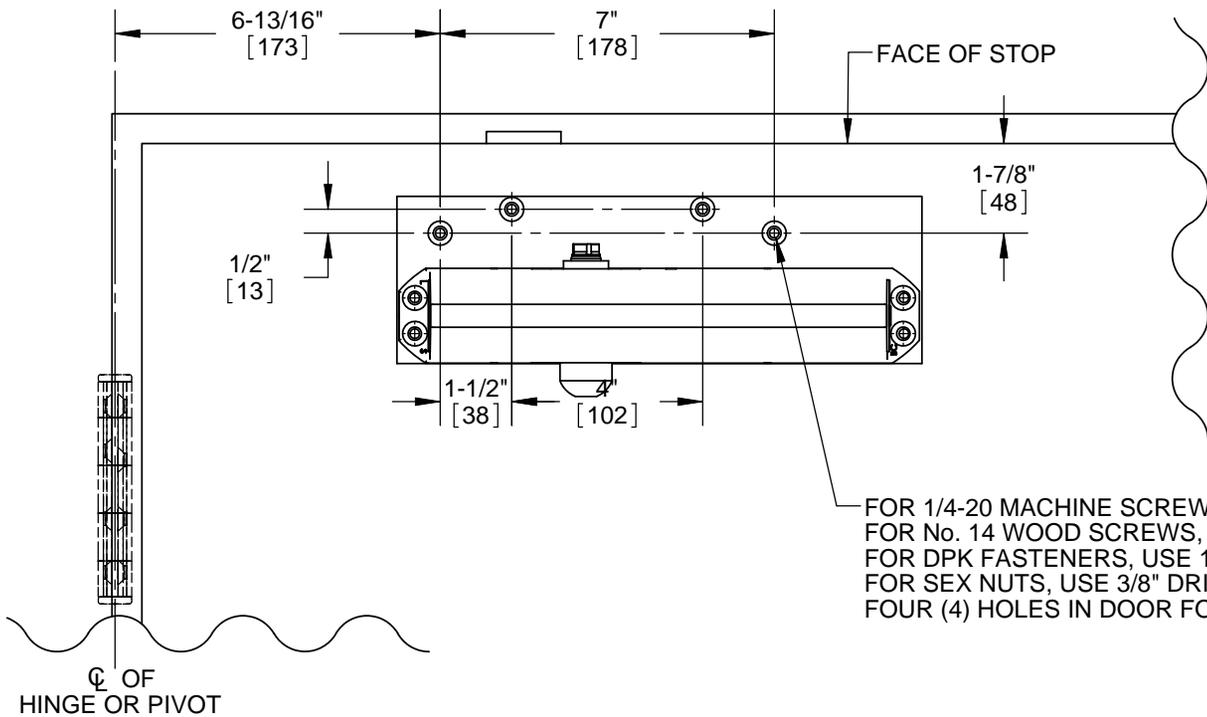

FOR 1/4-20 MACHINE SCREWS, USE 7/32" DRILL & TAP
 FOR No. 14 WOOD SCREWS, USE 5/32" DRILL
 FOR DPK FASTENERS, USE 1/8" DRILL
 FOR SEX NUTS, USE 3/8" DRILL
 FOUR (4) HOLES IN DOOR FOR PLATE (SHOWN)

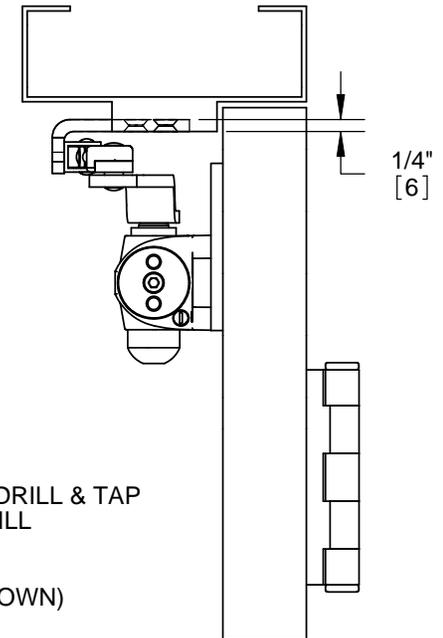

DOOR CLOSER MODELS: 7414 & 7436 ARP x MJ
 PARALLEL ARM INSTALLATION (PUSH SIDE MOUNT)
 WITH PLATES DP74, DP86 & DP86FC



DORMA Architectural Hardware
 Reamstown, PA 17567