

3/4" OFFSET BOTTOM ARM




MODEL No.

1) Prepare door according to template.


75323

LH RH

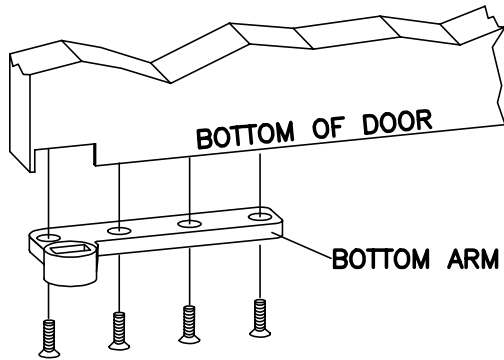

2) Fasten arm to door.

FINISH

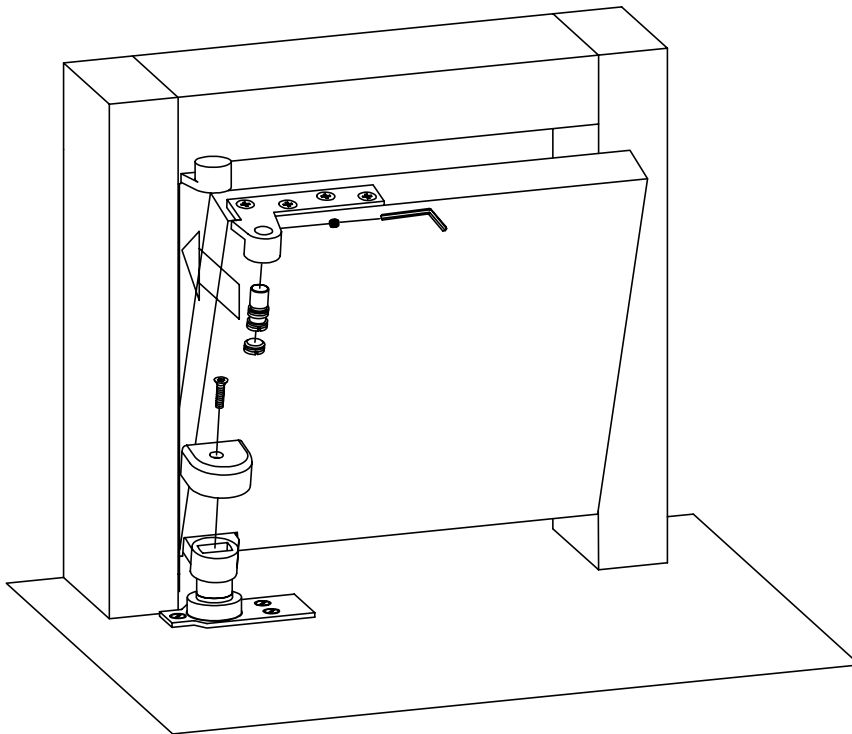

3) Install door.

4) Attach cover cap with screw provided.