


- NOTES:
1. DIMENSIONS ARE IN INCHES/[MM].
 2. DO NOT SCALE DRAWING.
 3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
 4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
 FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

WOOD DOORS - H Escutcheon Trim
 M9082EL, M9082EU, M9082ELLM, M9082EULM
 DORMA USA, Inc.
 Reamstown, PA 17567

Toll-Free: (800) 523-8483
 Facsimile: (800) 274-9724

Always consult DORMA's web site for latest
 template at www.dorma.com.

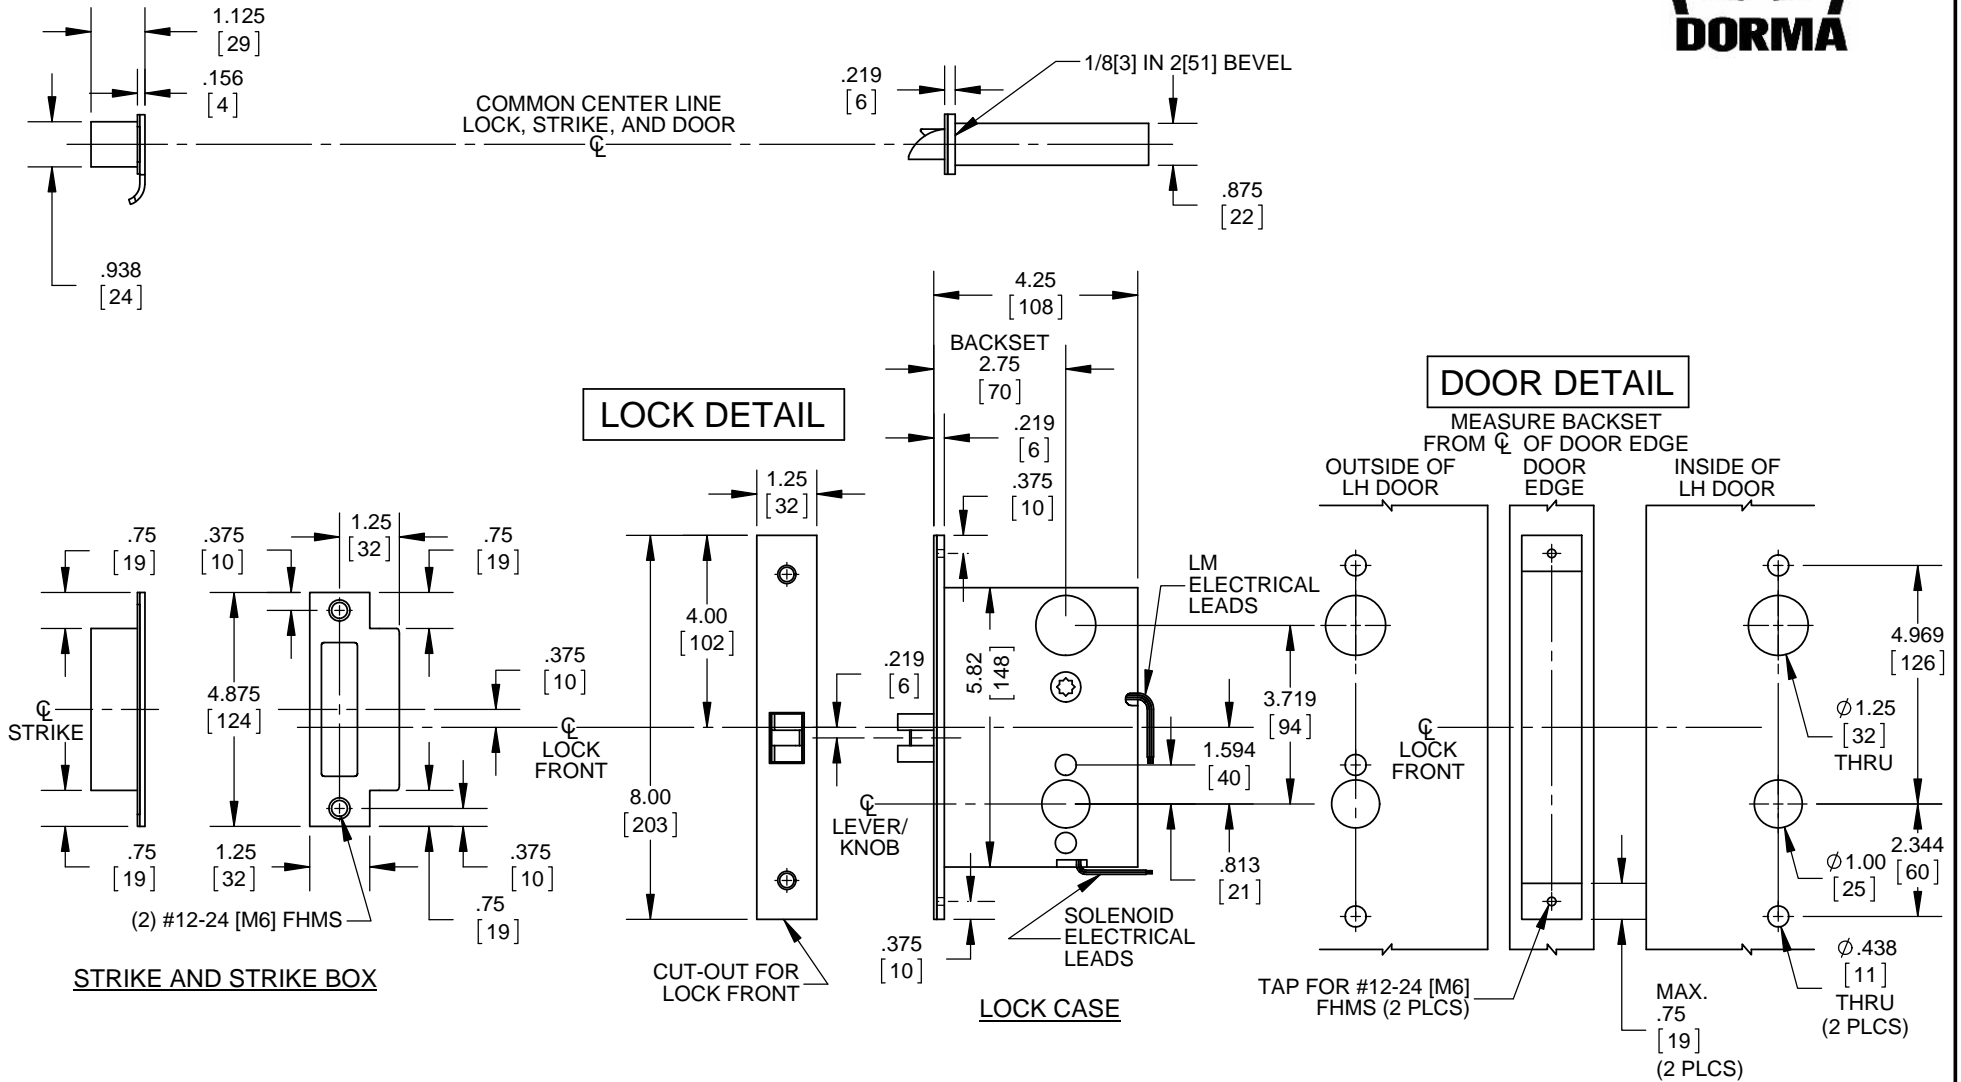

- NOTES:
1. DIMENSIONS ARE IN INCHES/[MM].
 2. DO NOT SCALE DRAWING.
 3. FOR #12 FHWS, USE 9/64" (.140") DRILL.
 4. FOR #12-24 FHMS, USE #16 (.177") DRILL & TAP.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
 FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

STEEL DOORS - H Escutcheon Trim

M9082EL, M9082EU, M9082ELLM, M9082EULM DORMA USA, Inc.
 Reamstown, PA 17567

Toll-Free: (800) 523-8483
 Facsimile: (800) 274-9724

Always consult DORMA's web site for latest
 template at www.dorma.com.