


RHR SHOWN  
LHR OPPOSITE

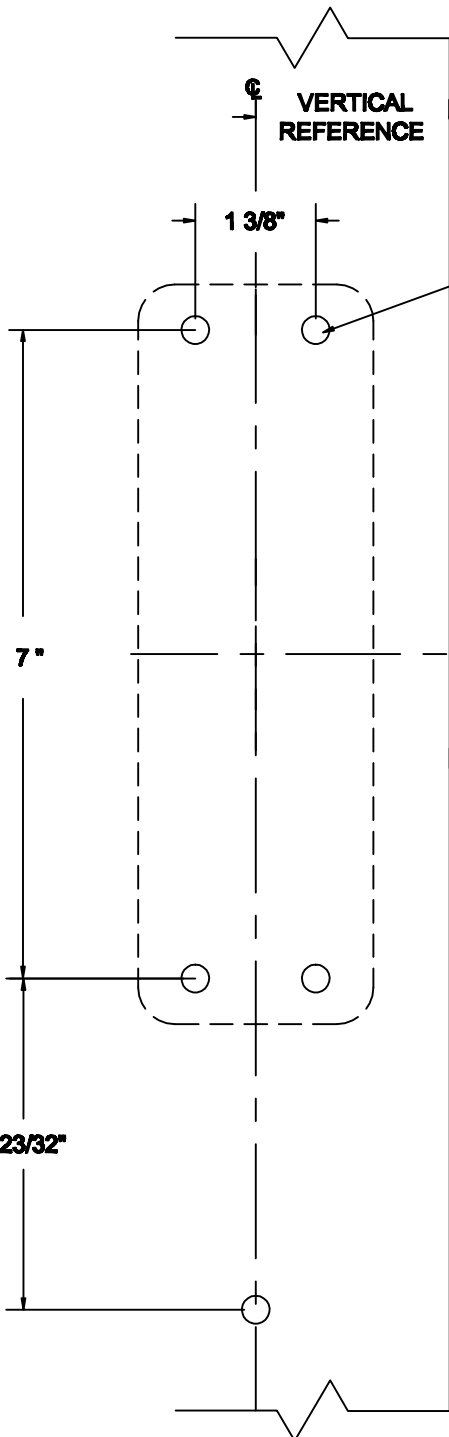


SEE DETAILS  
TO RIGHT


EXISTING  
VON DUPRIN  
HOLE LOCATION  
(5) PLACES  
DRILL (5) 3/8"  
DIA. HOLE

**IMPORTANT NOTE:  
SHIMS REQUIRED  
UNDER STRIKE FOR  
PROPER BOLT  
ENGAGEMENT WHEN  
USING VON DUPRIN  
PREP.**


HORIZONTAL  
REF. LINE

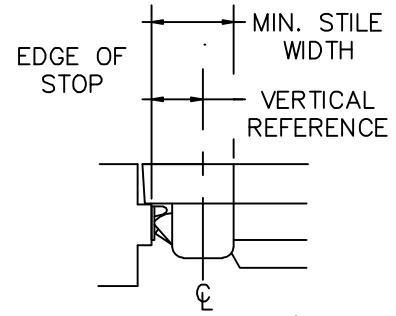

STOP	STRIKE	VERT. REF.	MIN. STILE
	486 463	2 3/8"	4 1/4"

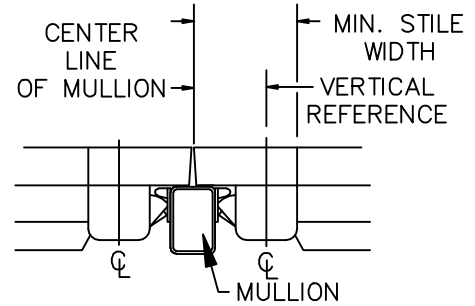


VON DUPRIN MULLION	STRIKE	VERT. REF.	MIN. STILE
4954 9954	463 486	3 3/8"	4 5/8"

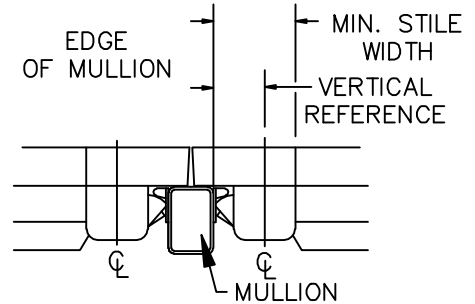

DORMA MULLION	STRIKE	VERT. REF.	MIN. STILE
1330	ALL	2 1/4"	4 1/4"
F1300	ALL	2 1/4"	4 1/2"
1340KR F1340KR	ALL	2 1/4"	4 1/2"

SEE ADDITIONAL TRIM TEMPLATE WHEN REQUIRED.

REV. No. 0	REVISION:	DATE: 8-1-09
	9300 & F9300 x VODTR1 OR NPTDTR1	TEMPLATE NUMBER T-9302R1 ©
	9300 & F9300 x V102R1 OR V302R1	
	9300 & F9300 x PTT02R1 OR PRT02R1	
	WITH VON DUPRIN 98/99 PREP	