



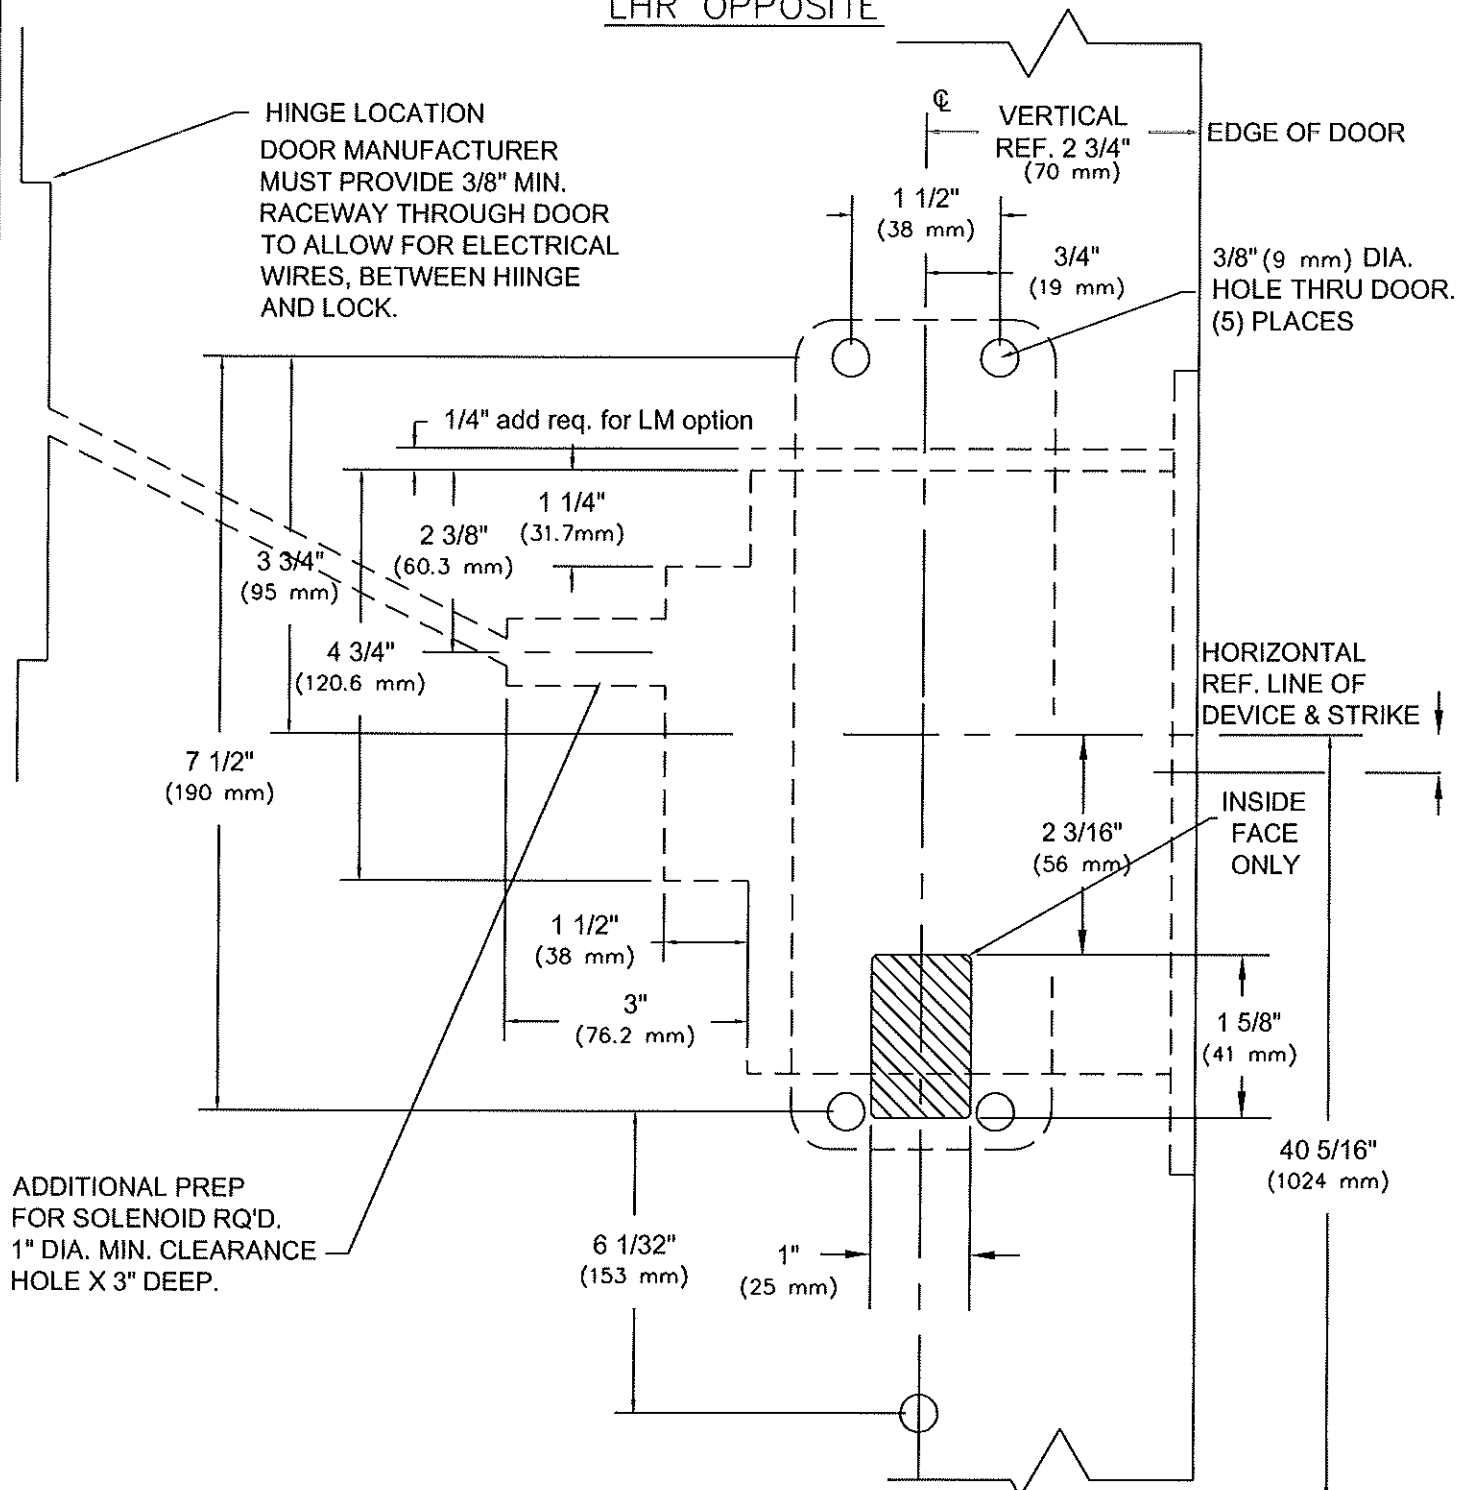
RHR SHOWN
LHR OPPOSITE

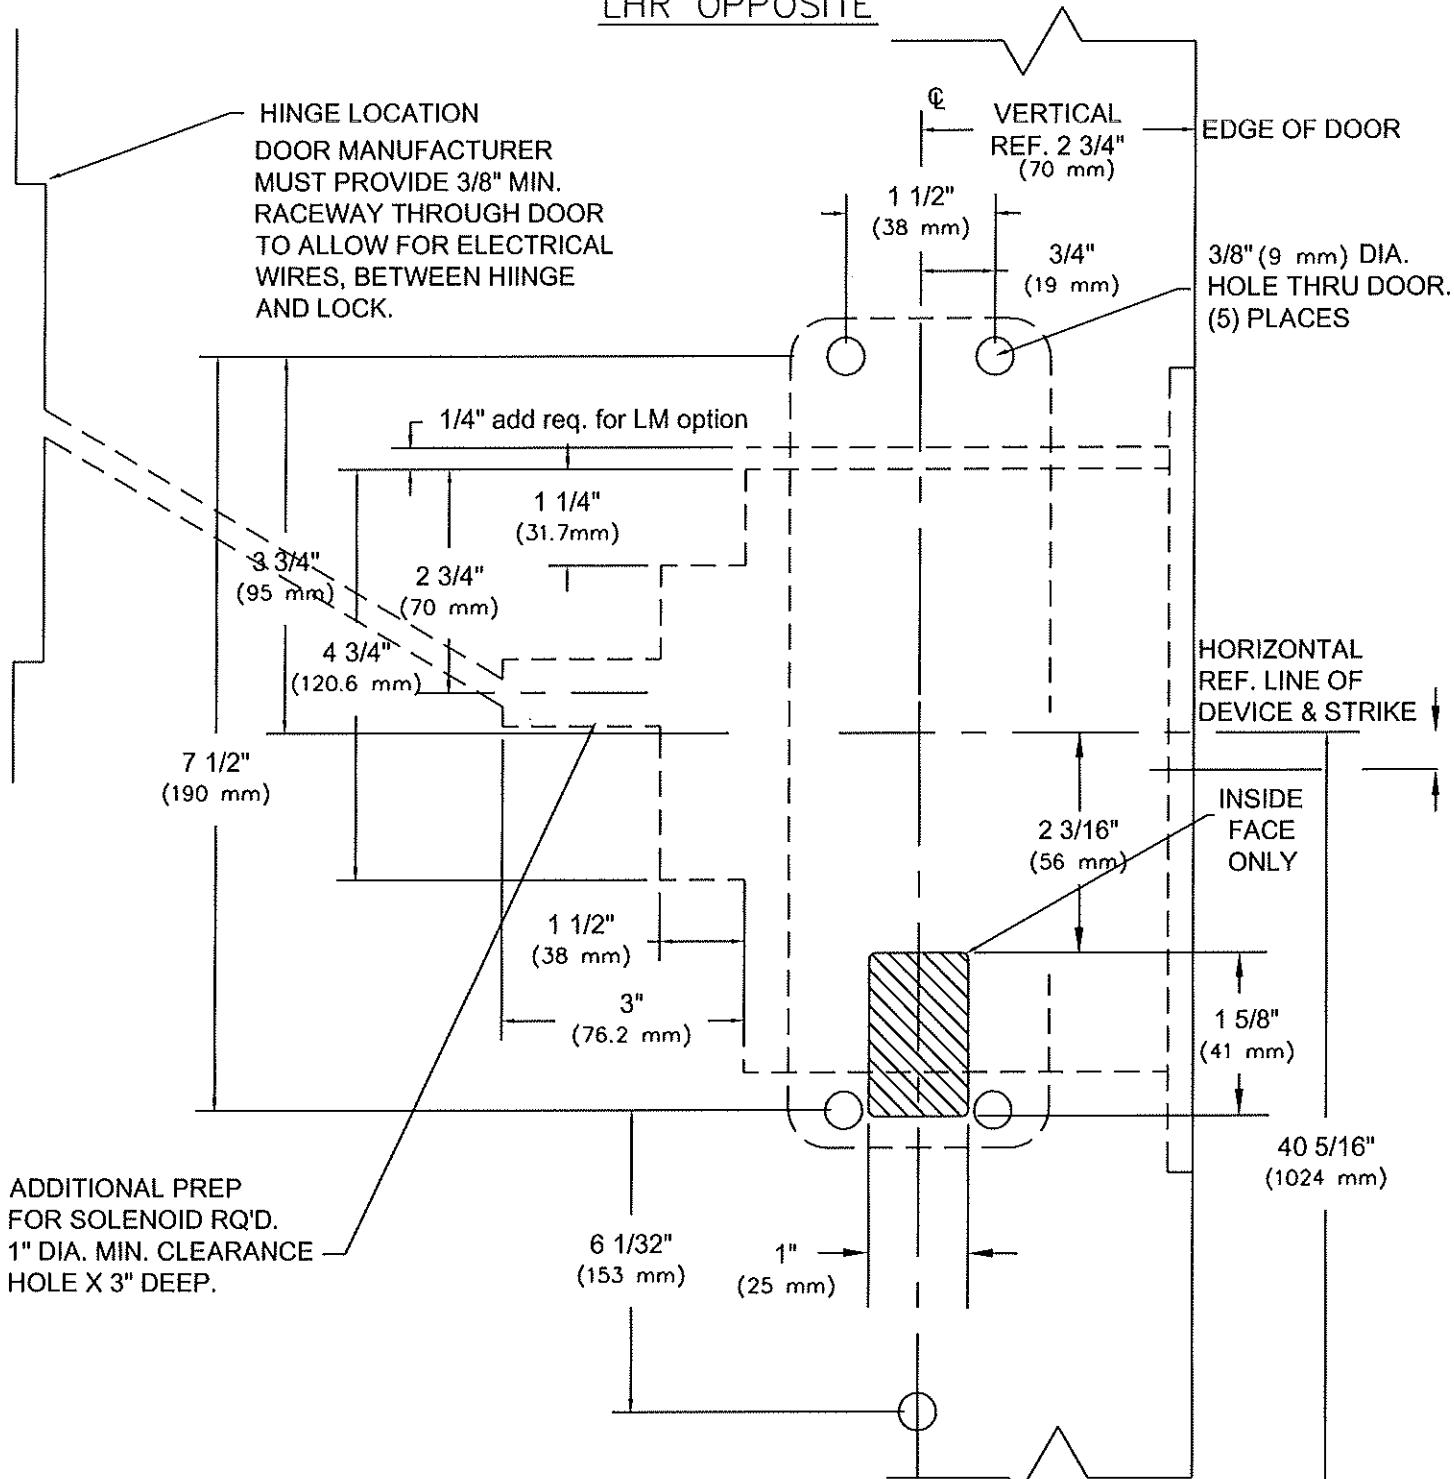

- NOTES: FINISHED FLOOR LINE OR TOP OF THRESHOLD
1. SEE MASTER SHEET #T-0001 FOR SUGGESTED DOOR REINFORCEMENT.
 2. SEE ADDITIONAL TRIM TEMPLATE WHEN REQUIRED.

REV. No. 0	REVISION: Seperate LFSC and LFSF templates	DATE: 7-18-2011
	<p>9500 & F9500 x LFSF FUNCTION MORTISE TYPE EXIT DEVICE</p>	<p>TEMPLATE NUMBER T-9504©</p>

RHR SHOWN
LHR OPPOSITE



- NOTES: FINISHED FLOOR LINE OR TOP OF THRESHOLD
1. SEE MASTER SHEET #T-0001 FOR SUGGESTED DOOR REINFORCEMENT.
 2. SEE ADDITIONAL TRIM TEMPLATE WHEN REQUIRED.

REV. No. 3

REVISION: Create seperate templates for each function

DATE: 7-18-11



9500 & F9500 x LFSC FUNCTION
MORTISE TYPE EXIT DEVICE

TEMPLATE NUMBER

T-9503③