

# Installation Instructions

## #443 Strike with 1310 Mullion





### Important Installation Note:

DORMA made a change to the #443 strike implemented on production of 1310 series mullions manufactured after 3-1-2010 to accommodate the 9700 narrow stile rim exit device and the 9300 series rim exit device. Due to the horizontal center line of the 9300 and 9700 exit devices being 1/4" higher than the 5300 series the "cut out" prep in the mullion had to be raised. To accept the larger latch bolts and dead latch design of the 9300 and 9700 series exit devices the "cut out" also had to be increased. The 443 strike manufactured after 3-1-2010 will still accept the latch bolt of the 5300 series exit device for strike replacement (new mounting holes required).



### For retro fit of 9700 from 5300:

Use existing center line. Machining of the existing mullion will be required. See details below:

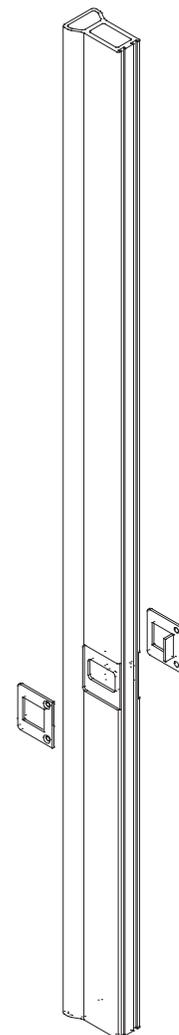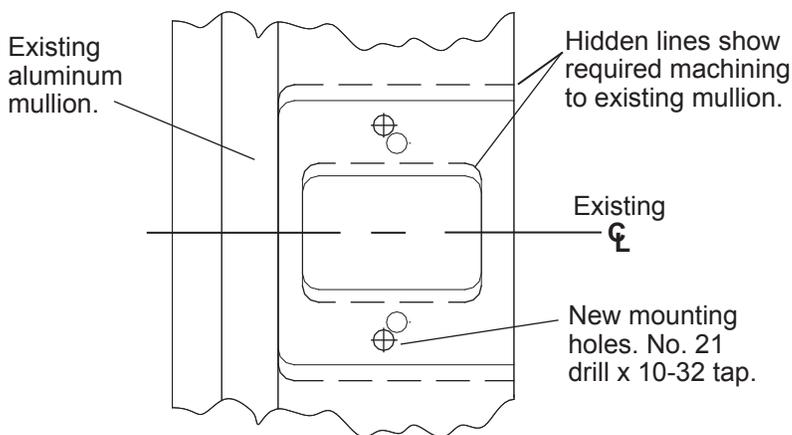

1310 x 443 Factory Prep prior to 3-1-2010 for 5300 rim exit device

1310 x 443 Factory Prep after 3-1-2010 for 9300 and 9700 rim exit device

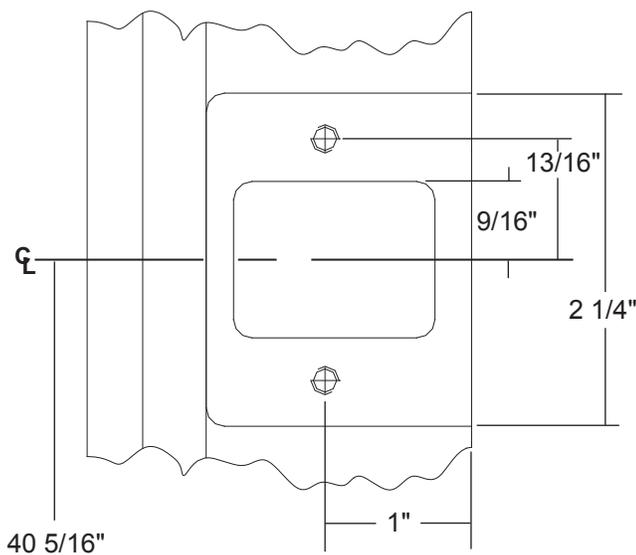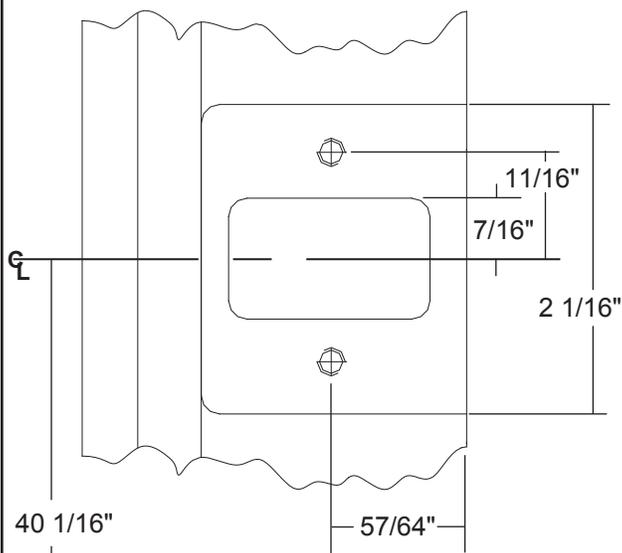

Do not scale

Finished Floor or top of threshold to horizontal mounting reference height.