


# BACKSIDE ANTENNA KIT

## Installation Instructions

## Installation

... read and follow these instructions:

1. Place mounting bracket on door face in desired location. **[Note: Take length of antenna jumper cable into consideration when locating bracket.]**
2. Mark 2 mounting hole locations on door face using bracket as template.
3. Remove bracket from door face and drill 2 marked holes, 5/32" in diameter. For hollow metal doors, drill through near side only. For wood doors, drill 7/8" deep.
4. Disconnect existing antenna from circuit board and connect antenna jumper cable to circuit board.
5. Drill additional hole(s) in door as appropriate to route antenna jumper cable from circuit board into bracket area. Carefully route jumper cable, being sure not to damage it.
6. Install bracket to door with 2 screws provided.
7. Connect antenna cable from cover to jumper cable from circuit board.
8. Carefully curl antenna cable inside bracket and place cover over bracket.
9. Secure cover to bracket with 2 screws.

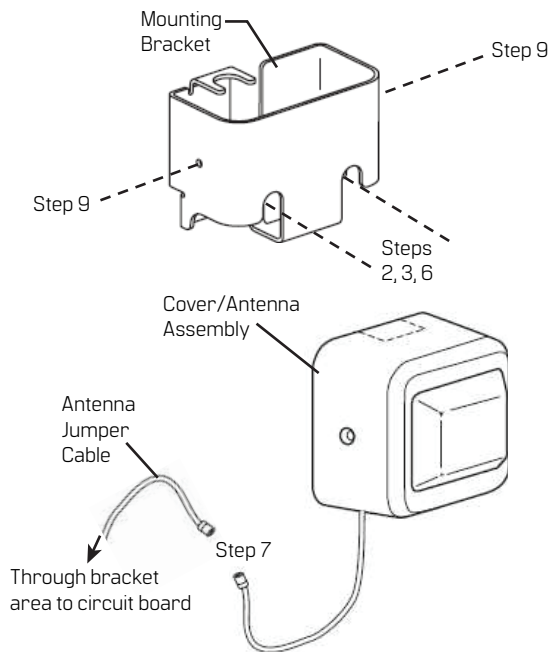



For Complete Online Instructions Visit:  
<https://dhwsupport.dormakaba.com/hc/en-us>  
**For Assistance or Warranty Information:**  
Call 1-800-392-5209 or visit  
<https://dhwsupport.dormakaba.com/hc/en-us>