


Template for 2 3/4" Backset 6K, 7KC, 8K & 9K Cylindrical Locks with RQE

Caution: FOR 7KC AND 9K LOCKS ONLY, drill a 5/16" dia hole above and below the 2 1/8" hole. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K and 8K locks will NOT cover these holes.

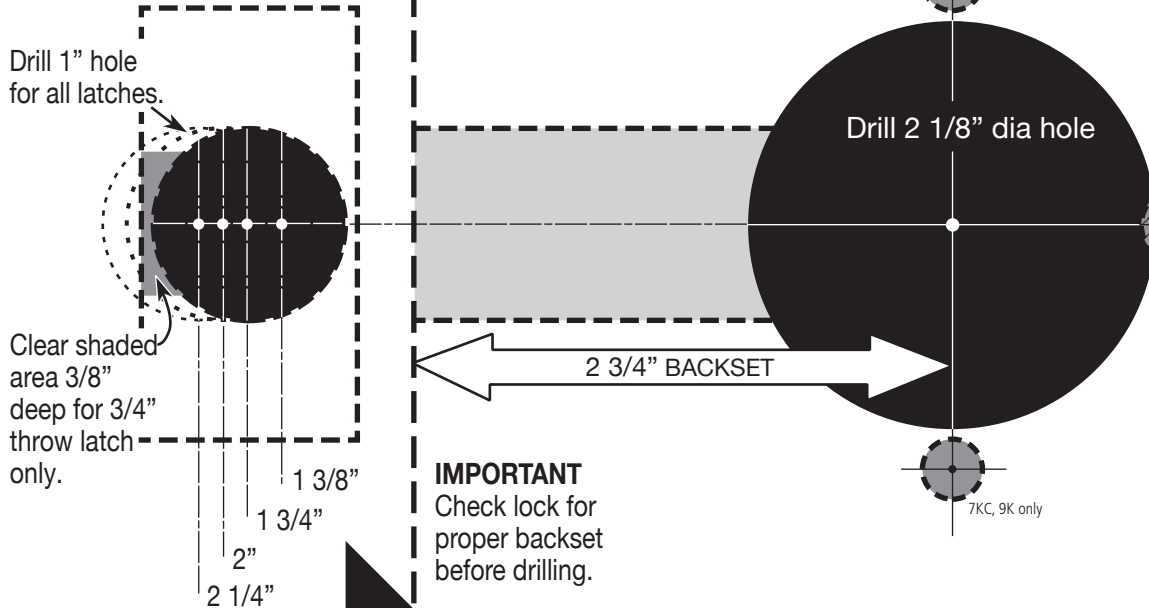

Note: For 8K & 9K ELECTRIFIED locks or request-to-exit (RQE) wires ONLY, drill a 3/8" dia hole as shown. If needed, drill this hole before all others.

IMPORTANT

Check lock for proper backset before drilling.

Fold along the dotted line and place on high edge of door bevel.