

# Series: 2100, FL2100 – Trim Series: 2000 – Strike: S300, S301, S458 – Wood & Hollow Metal Door Preparation







For online instructions, assistance or warranty information:  
Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

**Reinforcement requirements**  
Provide adequate reinforcement to metal-covered composite and hollow metal doors for drilling and tapping for machine screws.

**Sex nuts and bolts**  
Sex bolts are required for plastic, wood, metal-covered composite and hollow metal doors without reinforcement.

**Sex bolt machining**  
Drill 1/4" [6.35] dia. inside.  
Drill 3/8" [9.53] dia. outside.

**NOTE: "LETTER" at end of trim model number designates grip style. Except as noted, grip style has no effect on stile machining.**

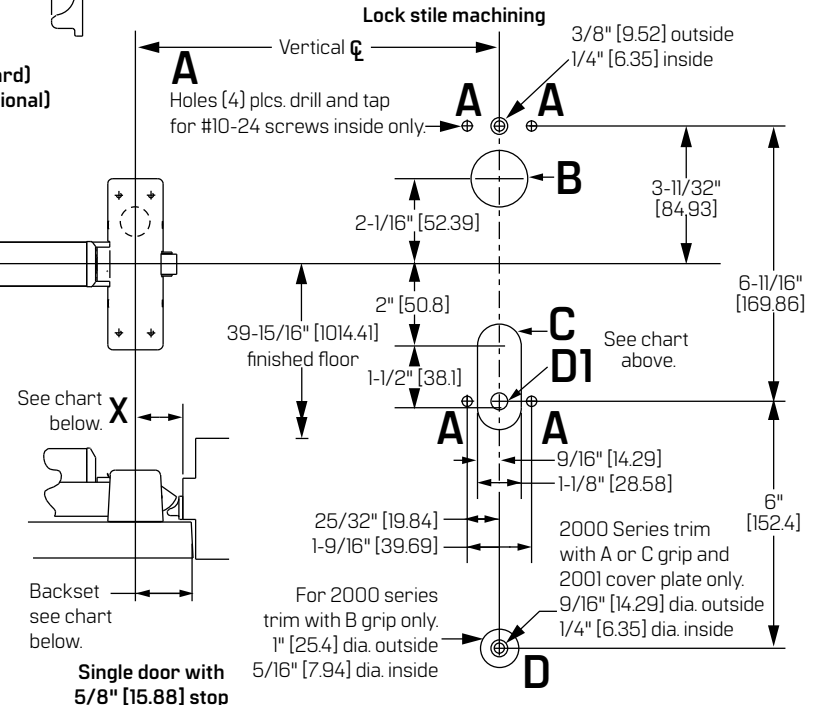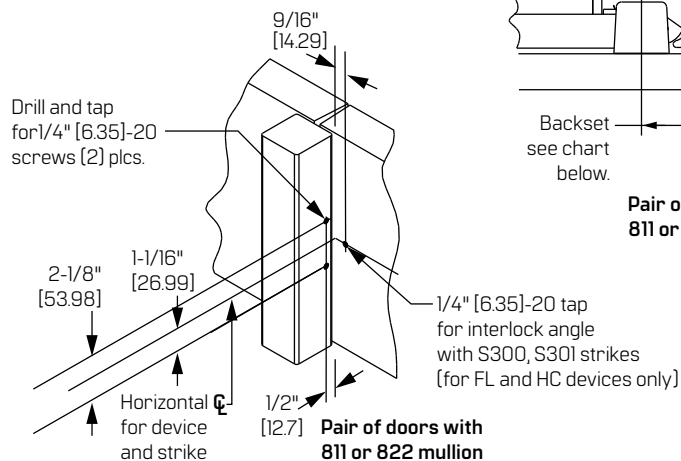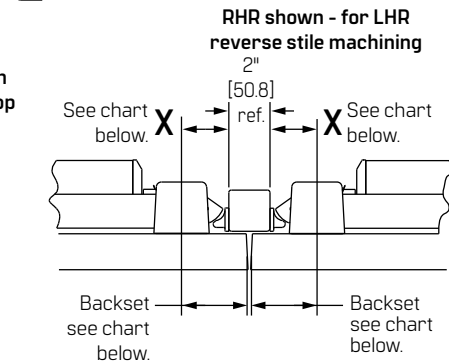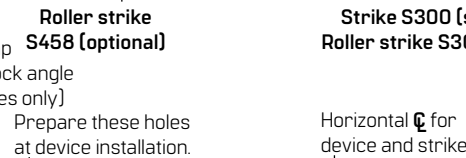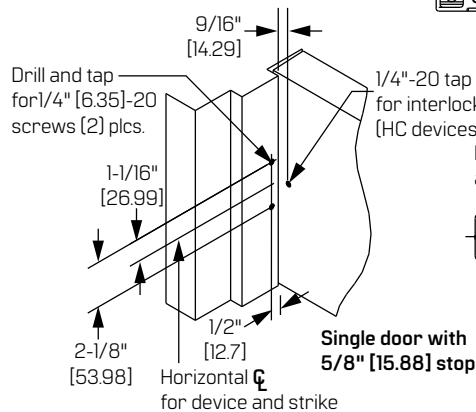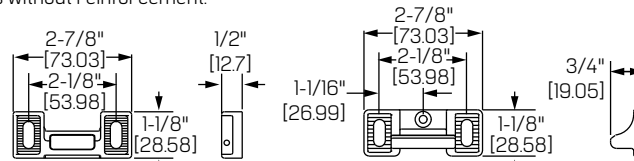

Devices	Trims	B-hole 1-3/8" [34.93] dia. through door	C-hole through door	D1
2101, FL2101	2001	No	No	3/8" [9.53] dia. outside 1/4" [6.35] dia. inside
2102, FL2102	2002			
2103, FL2103	2003	Yes	Yes	No
E2103, FLE2103	2005			
2105, FL2105		No		
2110, FL2110	N/A			
2115, FL2115	2015			

Strike	Application	Backset	Min. stile	"X" dim.
S300 S301	Single door	2-3/4" [69.85]	4-1/4" [107.95]	2-1/4" [57.15]
	Pair of doors	3-1/8" [79.38]	4-5/8" [117.48]	
S 458	Single door	2-9/16" [65.09]	4" [101.60]	2-1/16" [52.39]
	Pair of doors	2-15/16" [74.61]	4-3/8" [111.13]	