




**Full Mortise Butt Hinge (Size 5 x 4-1/2") Drilling Instructions/Template**  
**Standard Weight - CECB 179-12C & 191-12C**  
**Heavy Weight - CECB 168-12C & 199-12C**



Tools Needed  
 Herramientas necesarias  
 Outils nécessaires




 Wood Door  
 7/8" (22.2 mm)  
 Drill Bit

 Wood Door  
 7/32" (5.6 mm)  
 Drill Bit

 Metal Door  
 #12-24




**1**

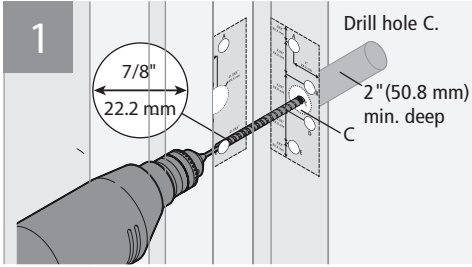


Drill hole C.  
 7/8" (22.2 mm)  
 2" (50.8 mm) min. deep

**2**

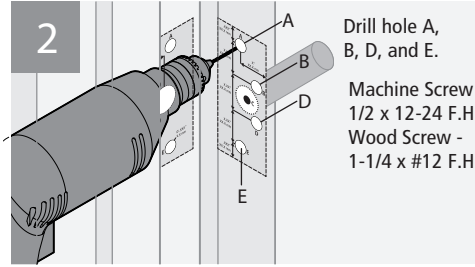

Drill hole A, B, D, and E.  
 Machine Screw - 1/2 x 12-24 F.H.  
 Wood Screw - 1-1/4 x #12 F.H.

**3**

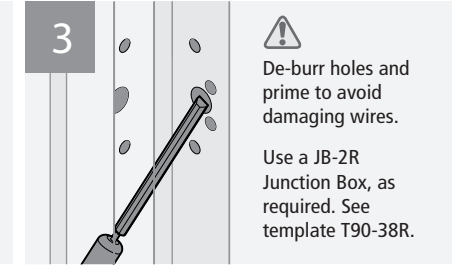

De-burr holes and prime to avoid damaging wires.  
 Use a JB-2R Junction Box, as required. See template T90-38R.

