





Full Mortise Butt Hinge (Size 5 x 5") Drilling Instructions/Template
Standard Weight - CECB 179-12C & 191-12C
Heavy Weight - CECB 168-12C & 199-12C


Tools Needed
 Herramientas necesarias
 Outils nécessaires




 Wood Door
 7/8" (22.2 mm)
 Drill Bit

 Wood Door
 7/32" (5.6 mm)
 Drill Bit

 Metal Door
 #12-24




1

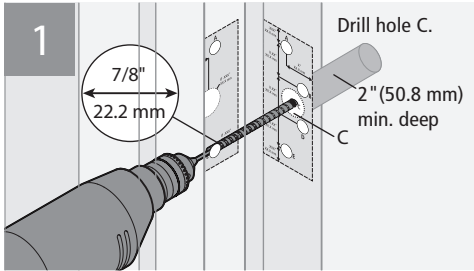


Drill hole C.
 7/8" (22.2 mm)
 2" (50.8 mm) min. deep


2

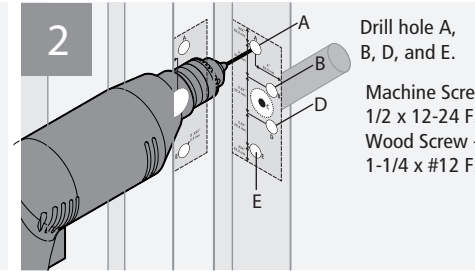

Drill hole A, B, D, and E.
 Machine Screw - 1/2 x 12-24 F.H.
 Wood Screw - 1-1/4 x #12 F.H.

3

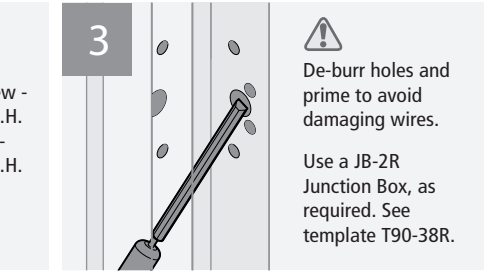

 De-burr holes and prime to avoid damaging wires.
 Use a JB-2R Junction Box, as required. See template T90-38R.

