


# Installation Specification for Wi-Q™ Technology EXQ Exit Hardware Trim for Use with Von Duprin 98/99 Series Exit Devices



dormakaba Group

Template Number: 009  
 Series: EXQ  
 Backset: SEE NOTE #3.  
 Trim Style: DV, MS, PM, PH

Door Thickness: 1-3/4" to 2-1/4"  
 \*Template not to scale

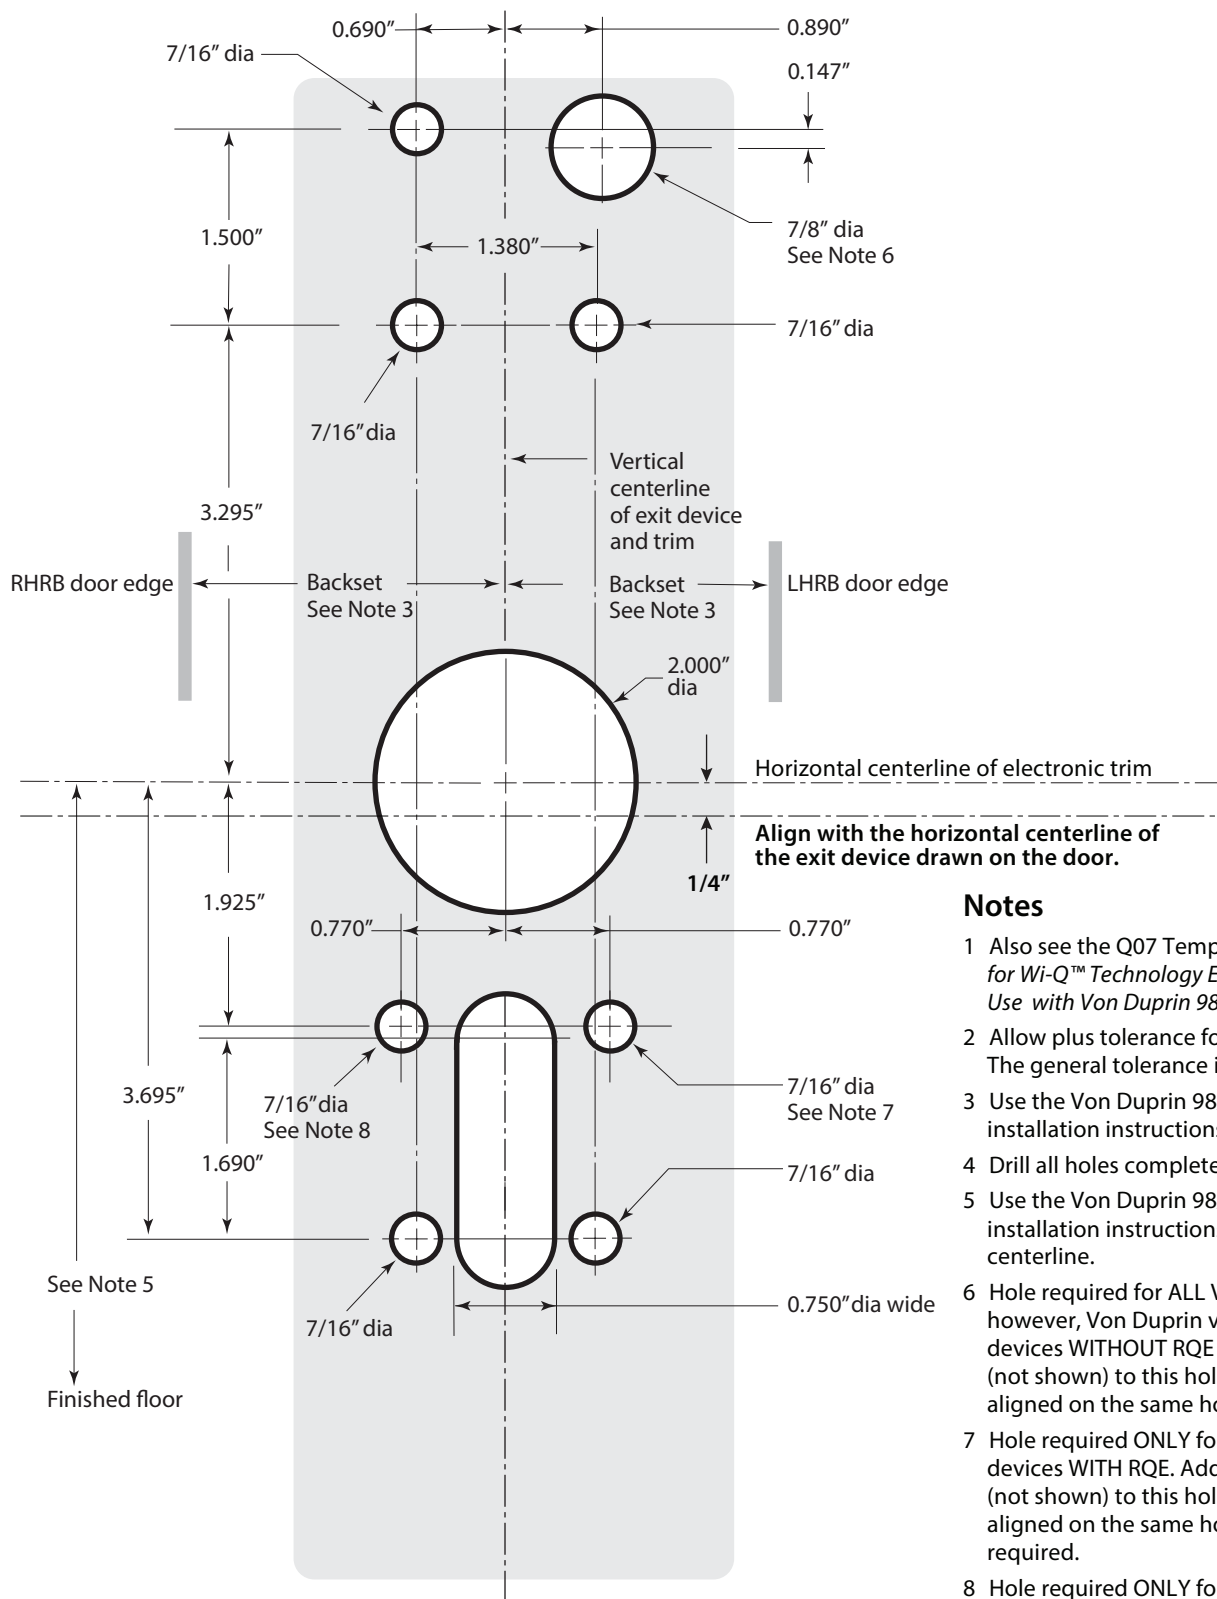

**Exit Hardware Trim Escutcheon Footprint**  
 [Looking at door from trim side]  
 \*Template not to scale

## Notes

- 1 Also see the Q07 Template — *Installation Template for Wi-Q™ Technology EXQ Exit Hardware Trim for Use with Von Duprin 98/99 Series Exit Devices.*
- 2 Allow plus tolerance for clearance per ANSI A115.5. The general tolerance is  $\pm 1/64$ ".
- 3 Use the Von Duprin 98/99 Series exit device installation instructions for backset dimensions.
- 4 Drill all holes completely through.
- 5 Use the Von Duprin 98/99 Series exit device installation instructions to locate the horizontal centerline.
- 6 Hole required for ALL Von Duprin exit devices, however, Von Duprin vertical rod devices and rim devices WITHOUT RQE also require a 1" dia channel (not shown) to this hole from the door edge, aligned on the same horizontal centerline.
- 7 Hole required ONLY for LHRB Von Duprin rim exit devices WITH RQE. Additionally, a 1" dia channel (not shown) to this hole from the door edge, aligned on the same horizontal centerline, is required.
- 8 Hole required ONLY for RHRB Von Duprin rim exit devices WITH RQE. Additionally, a 1" dia channel (not shown) to this hole from the door edge, aligned on the same horizontal centerline, is required.