


**Installation Template for Wi-Q Technology™ EXQ Exit Hardware Trim for Use with Von Duprin 98/99 Series Exit Devices**

**Template Number:** Q07 **Door Thickness:** 1-3/4" to 2-1/4"  
**Series:** EXG **\*Template to scale 1:1, full size**  
**Backset:** NA.  
**Strike:** MS, PH, PM, DV

- 1 Tape the template to the aligned with the centerlines.
- 2 Drill all applicable holes completely through the door (note the exception for the cylinder hole with a mortise device).


Note: Drill holes through device shim if using one.

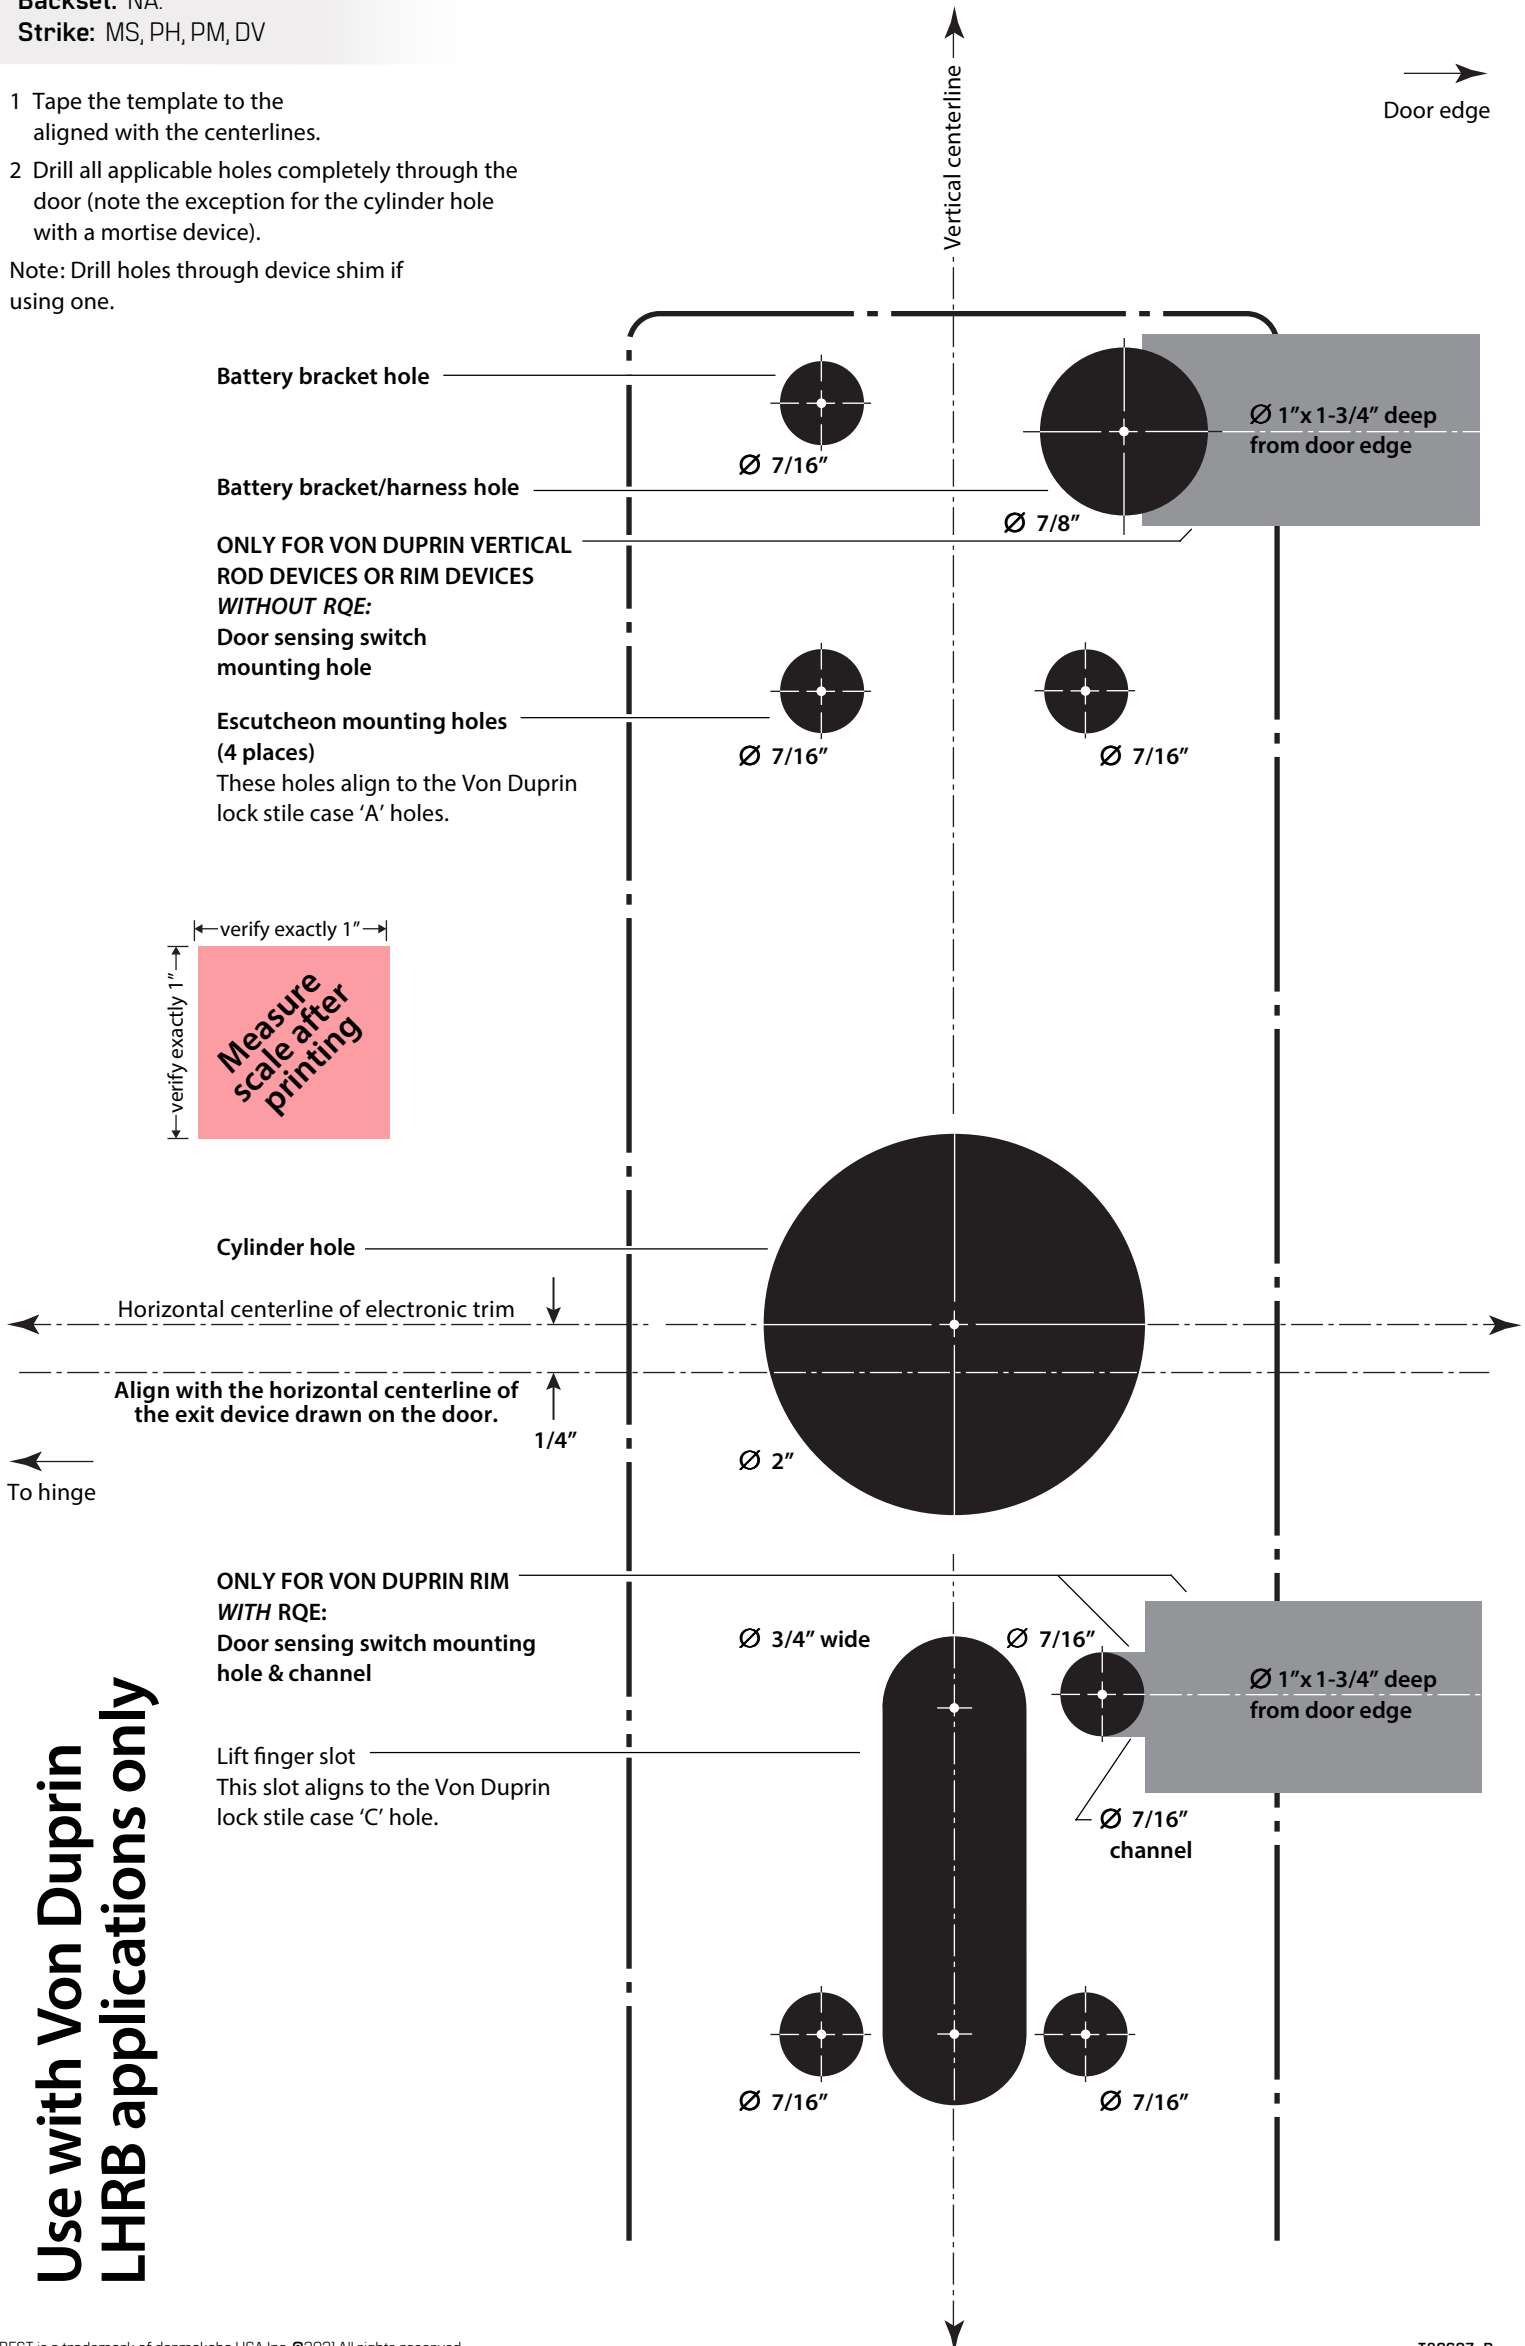

**Use with Von Duprin LHRB applications only**

←  
Door edge

↑  
Vertical centerline

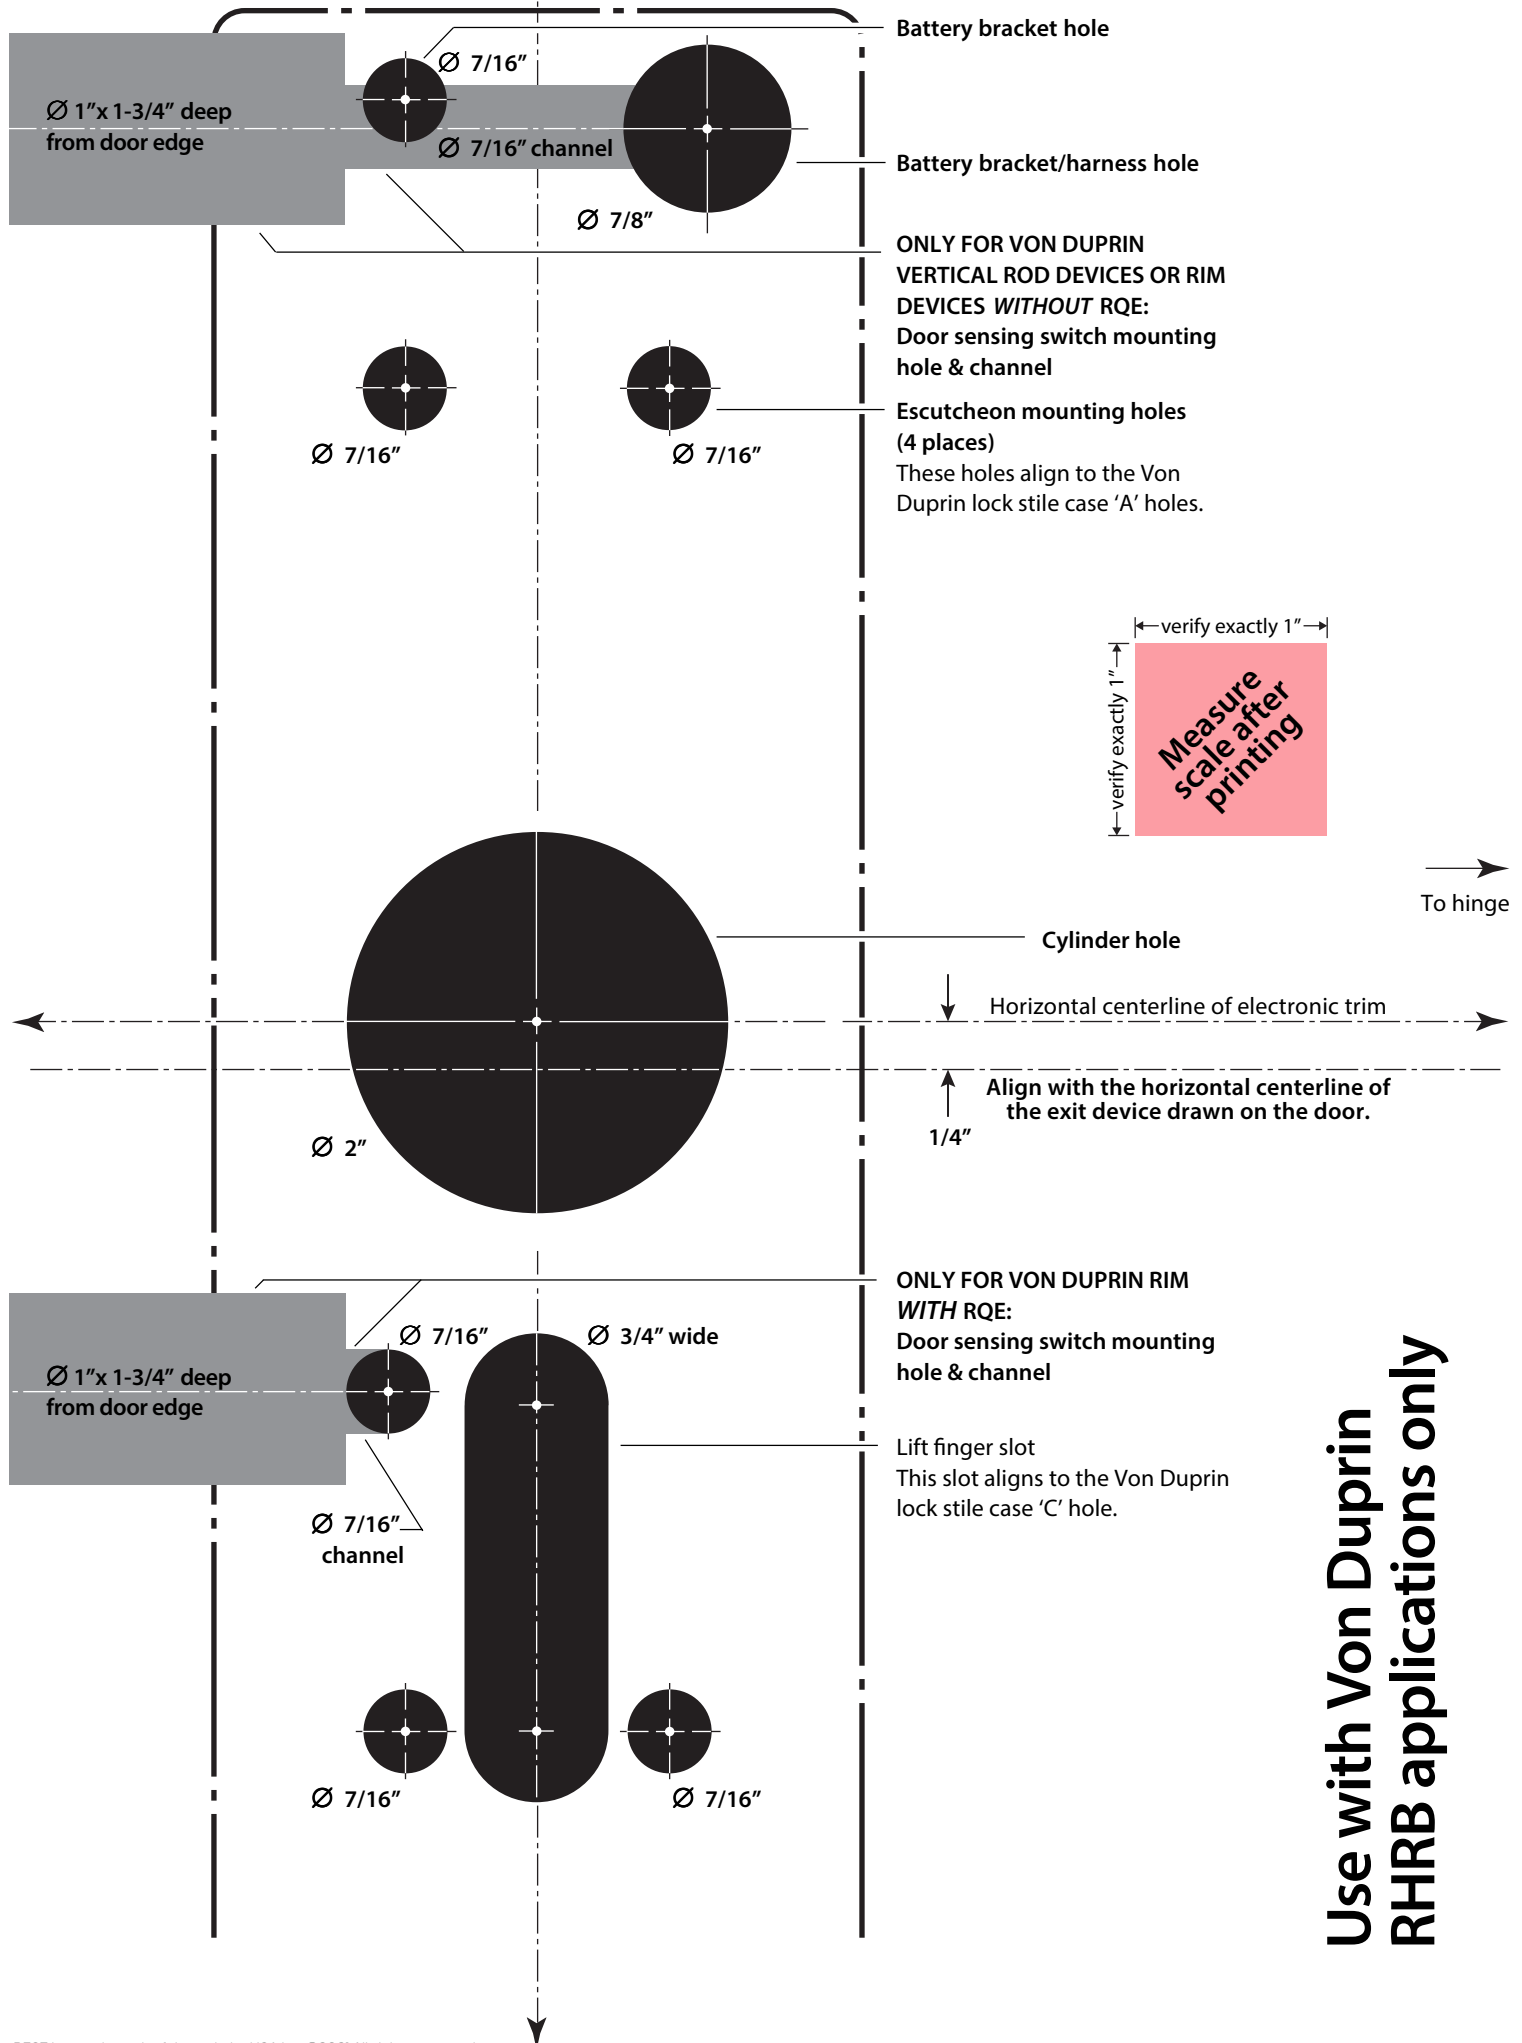

**Use with Von Duprin  
RHRB applications only**