

Installation Template for Wi-Q™ Technology EXQ Exit Hardware Trim for Use with Precision Hardware 2000 Series Exit Devices

Template Number: Q08 Trim Style: MS, PH, PM, DV
 Series: EXG Door Thickness: 1-3/4" - 2-1/4" [57.1mm]
 Backset: NA *Template scale is 100%

- 1 Tape the template to the **outside** of the door, aligned with the centerlines.
- 2 Drill all applicable holes completely through the door (note the exception for the cylinder hole with a mortise device).

Note: Drill holes through device shim if using one.

ONLY FOR PRECISION 2300 SERIES EXIT DEVICES:

Door sensing switch mounting hole

Battery bracket hole

Battery bracket/harness hole

ONLY FOR PRECISION 2100 SERIES EXIT DEVICES : Door sensing switch mounting hole & channel

Escutcheon mounting holes (4 places)

Align to the Precision Hardware lock stile case 'A' holes.

Cylinder hole

For mortise exit devices, drill this hole into the mortise cavity only, **not** through the door.


ONLY FOR PRECISION 2200, 2700, and 2800 SERIES EXIT DEVICES : Door sensing switch mounting hole & channel

Lift finger slot


Aligns to the Precision lock stile case 'C' hole.

← To hinge

→ Door edge

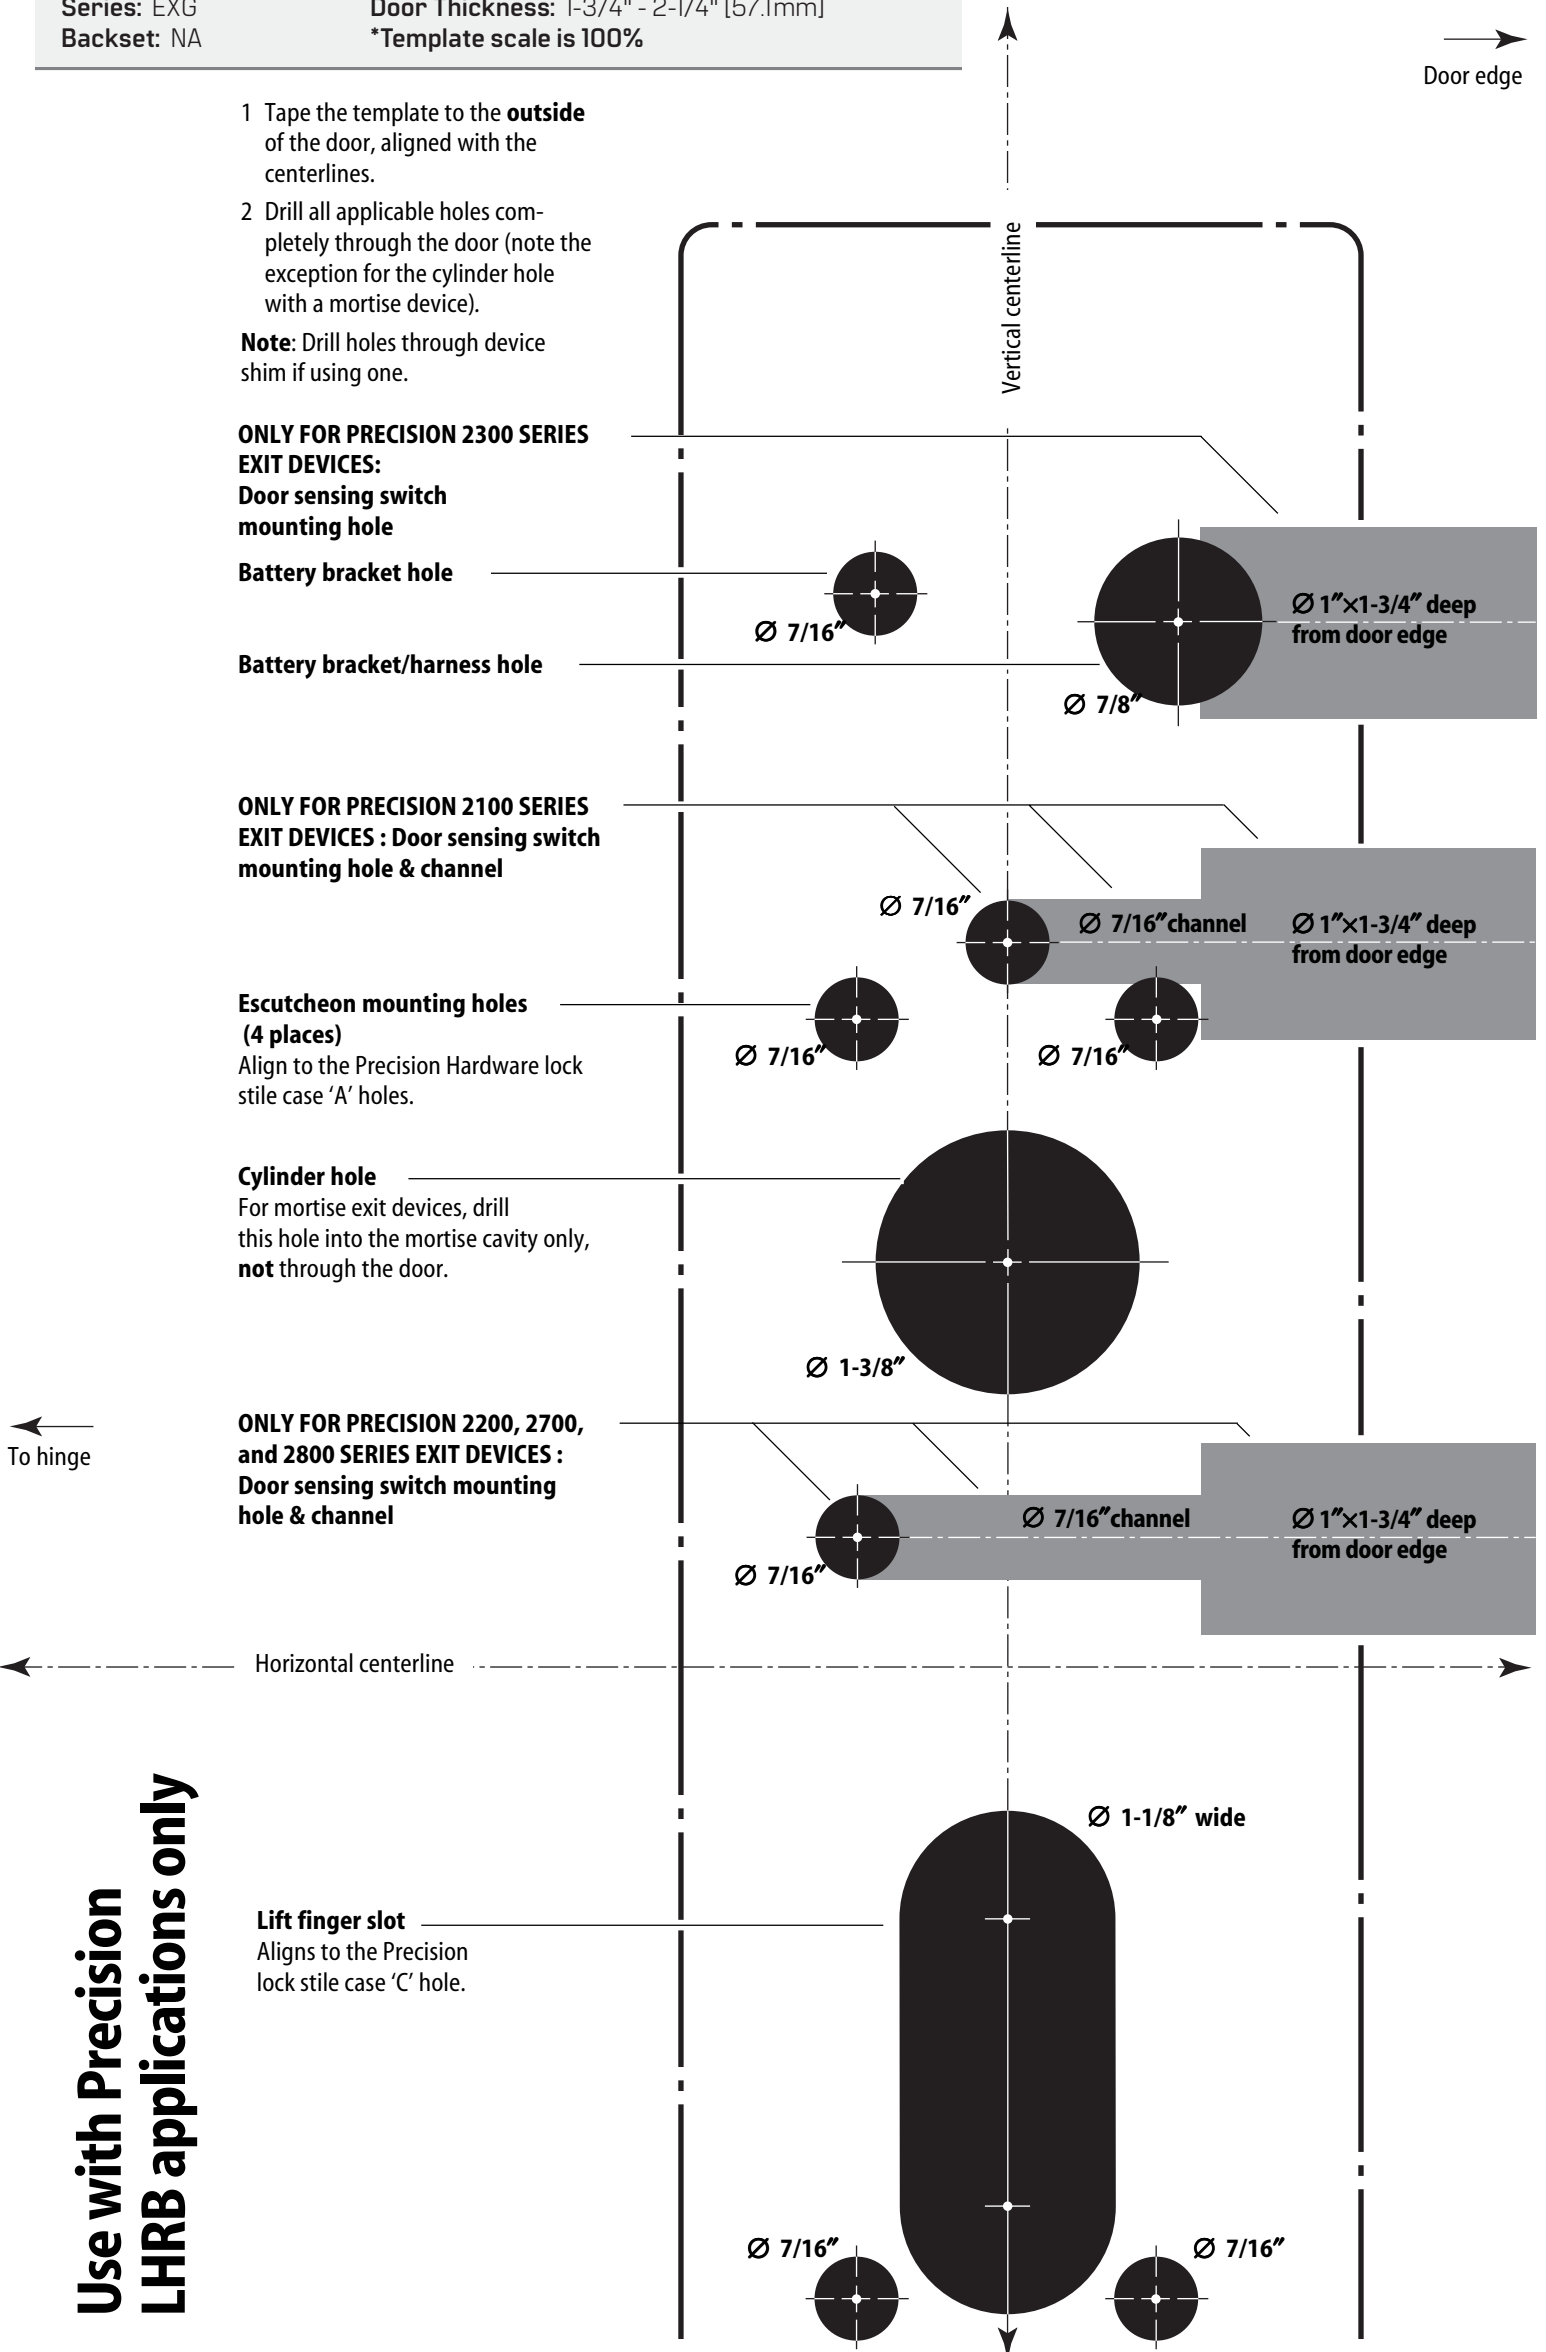

Use with Precision LHRB applications only

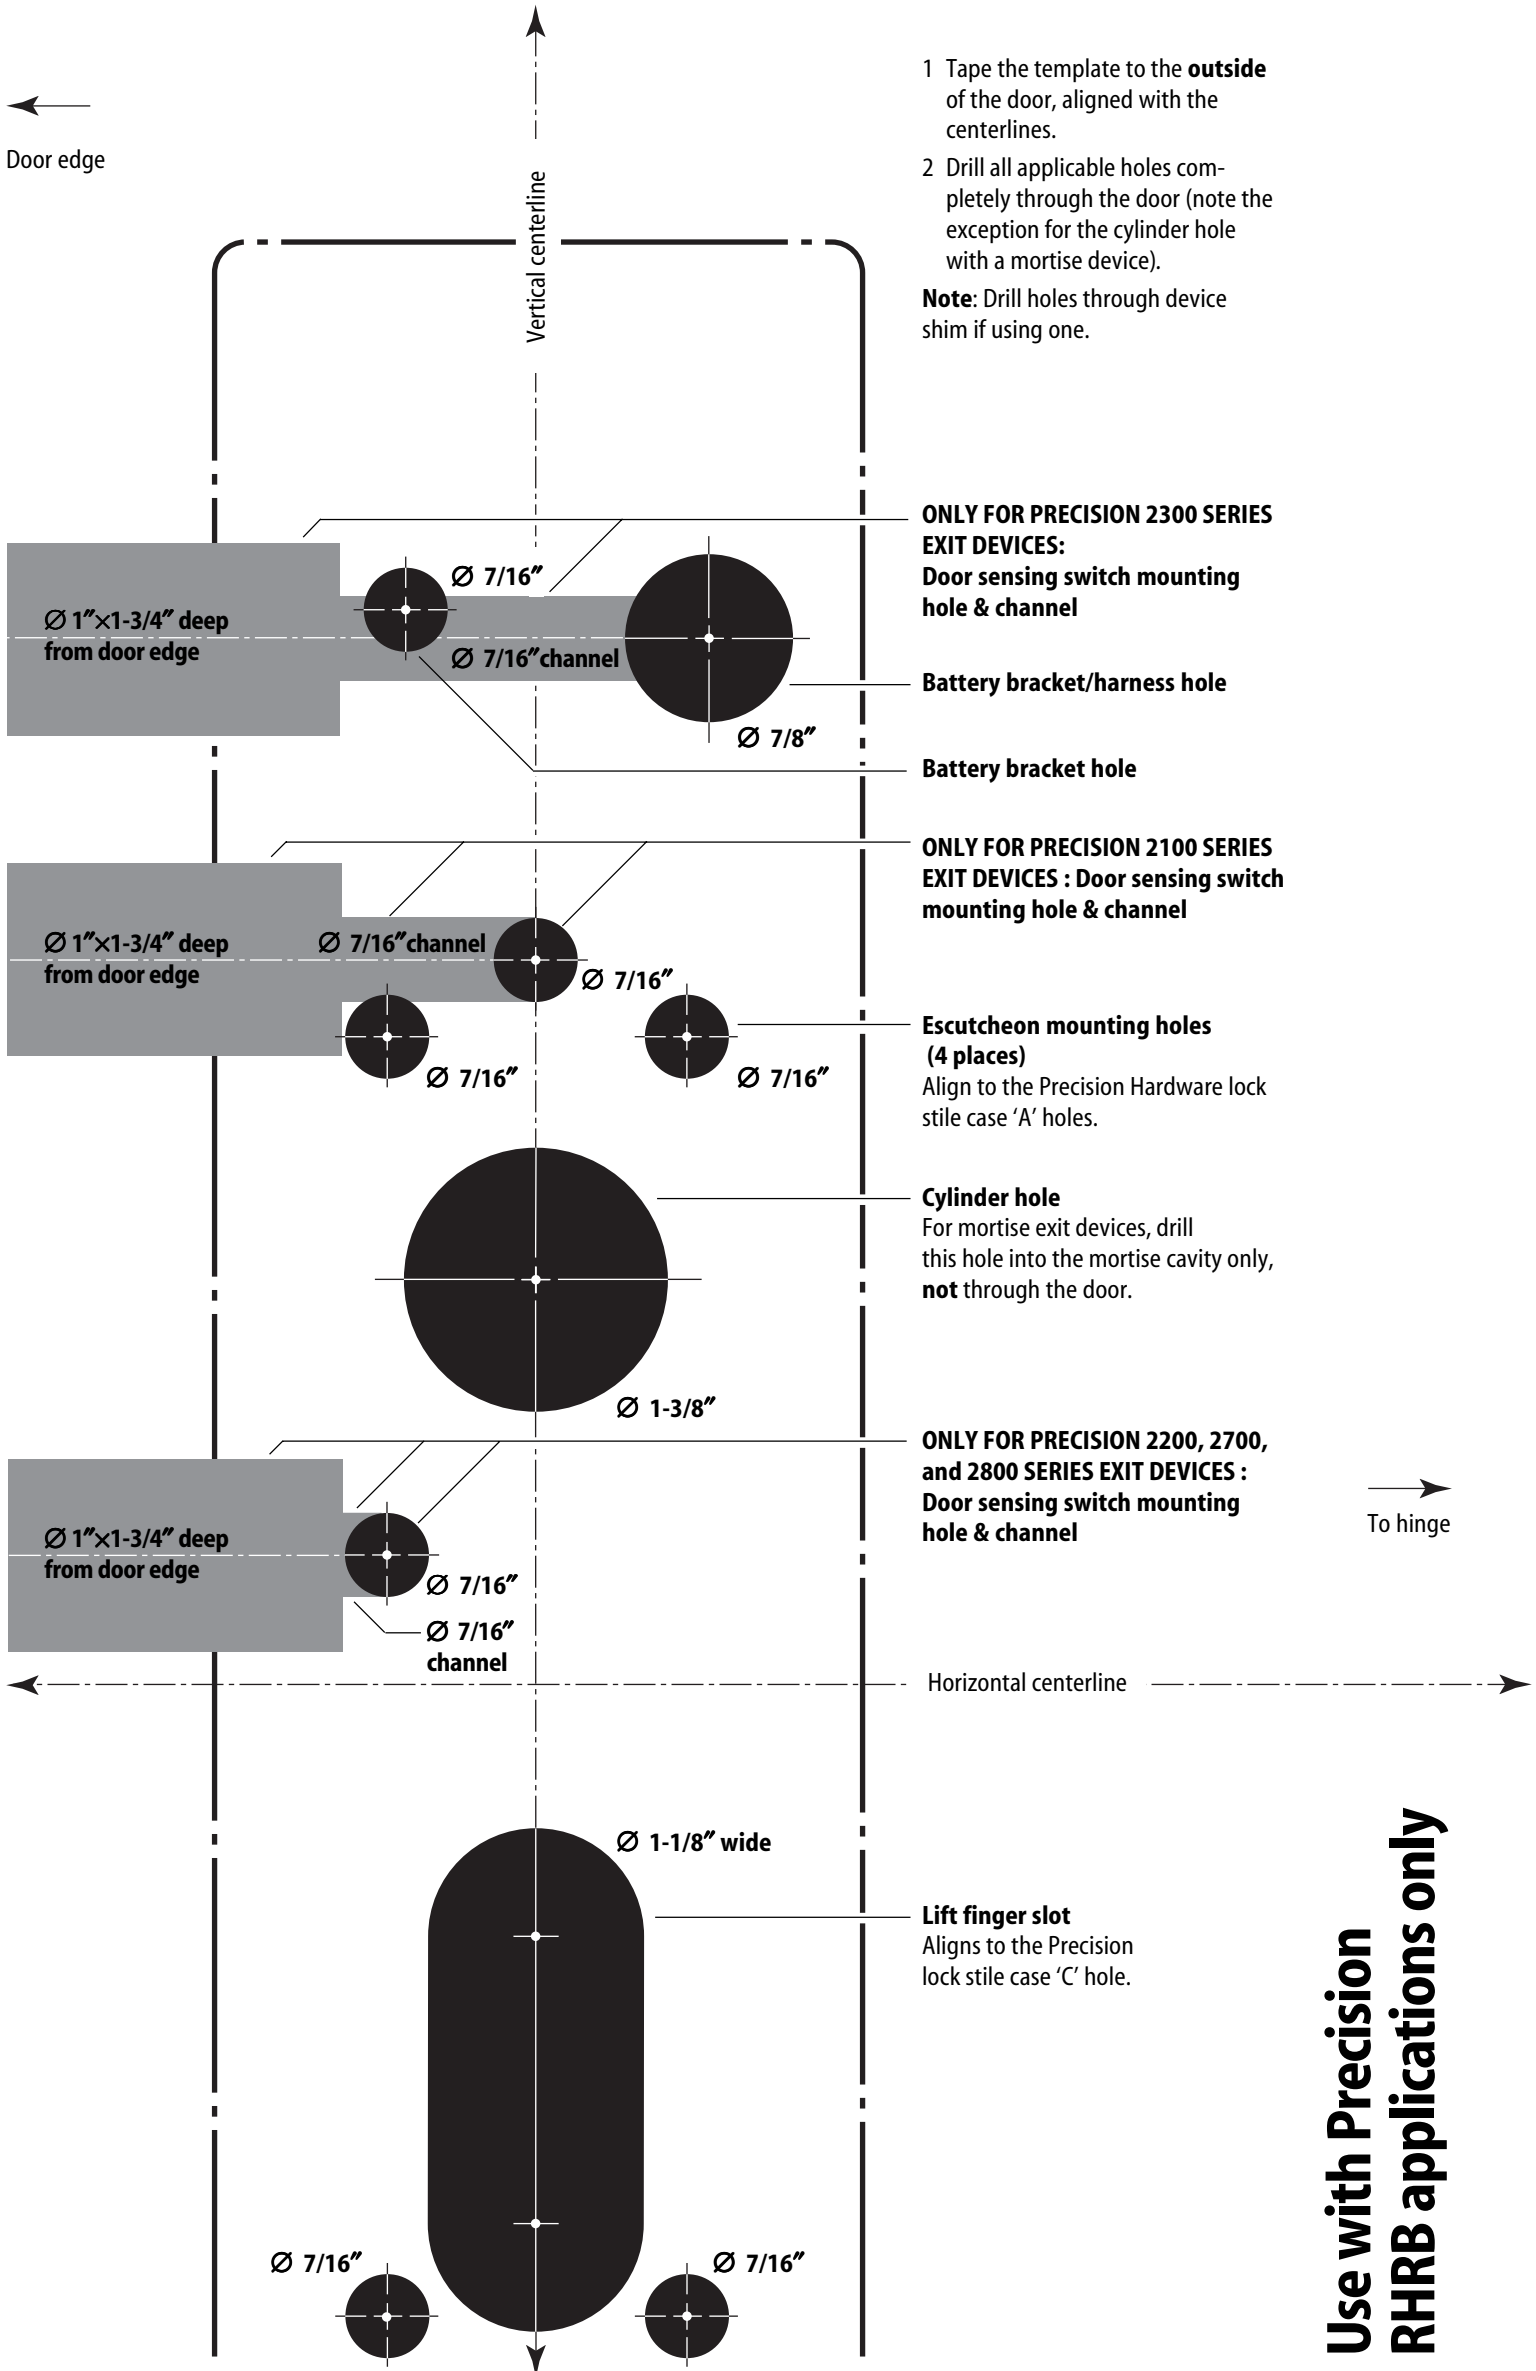

1 Tape the template to the **outside** of the door, aligned with the centerlines.

2 Drill all applicable holes completely through the door (note the exception for the cylinder hole with a mortise device).

Note: Drill holes through device shim if using one.

ONLY FOR PRECISION 2300 SERIES EXIT DEVICES:
Door sensing switch mounting hole & channel

Battery bracket/harness hole

Battery bracket hole

ONLY FOR PRECISION 2100 SERIES EXIT DEVICES : Door sensing switch mounting hole & channel

Escutcheon mounting holes (4 places)

Align to the Precision Hardware lock stile case 'A' holes.

Cylinder hole

For mortise exit devices, drill this hole into the mortise cavity only, **not** through the door.

ONLY FOR PRECISION 2200, 2700, and 2800 SERIES EXIT DEVICES : Door sensing switch mounting hole & channel

→
To hinge

Horizontal centerline →

Lift finger slot

Aligns to the Precision lock stile case 'C' hole.

Use with Precision RHRB applications only