


# Installation Specifications for 2S75 x TBM Push Lock

Template Number: S14  
Series: 2S  
Door Thickness: 7/8" - 1 5/8"

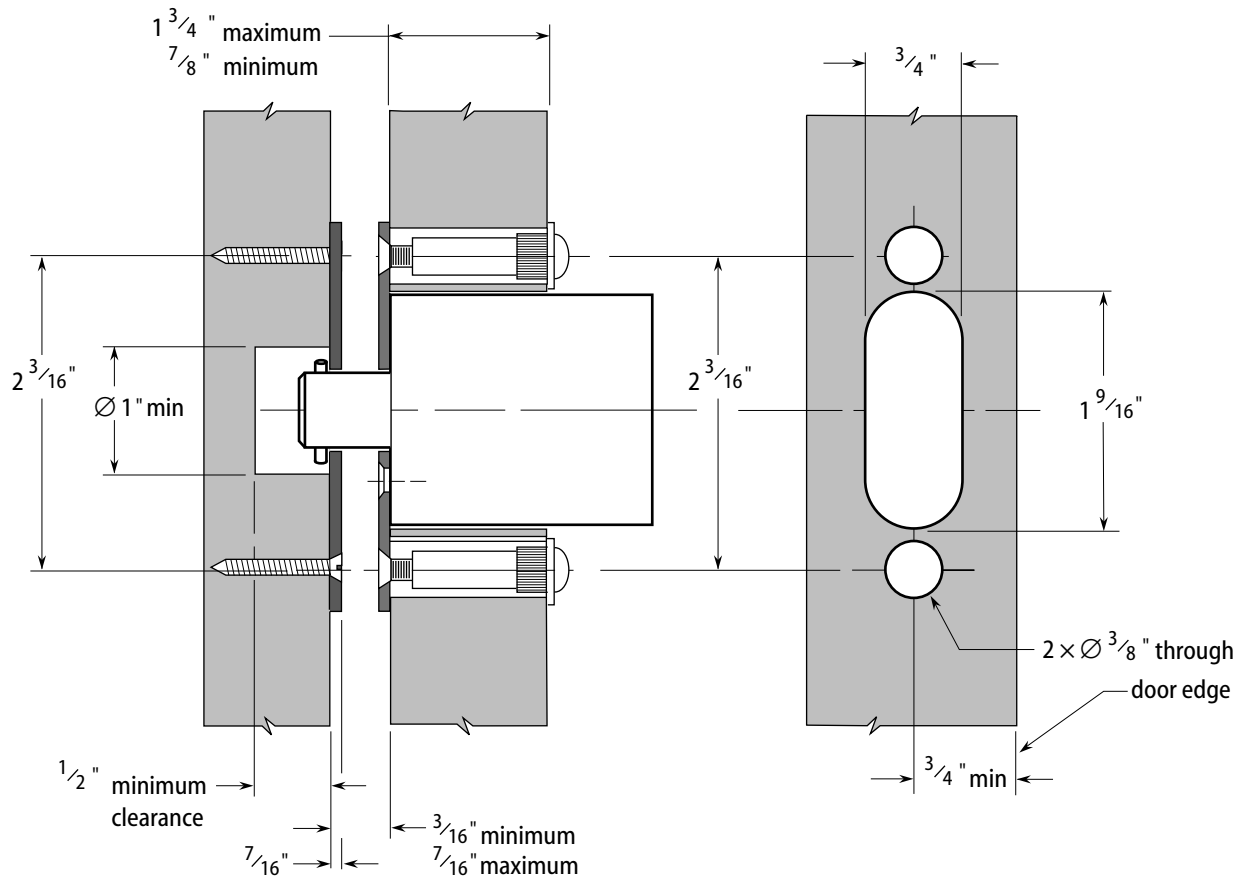

## Notes

- 1 Attach the strike with #6 × 3/4" FHWS on wood doors.  
Use #6-32 × 1/4" FHMS on metal doors.
- 2 Allow +1/32" tolerance for clearance.