


Installation Specifications for 2S73 x TBM & 2S74 x TBM Push Lock

Template Number: S08
Series: 2S
Door Thickness: 7/8" - 1 5/8"

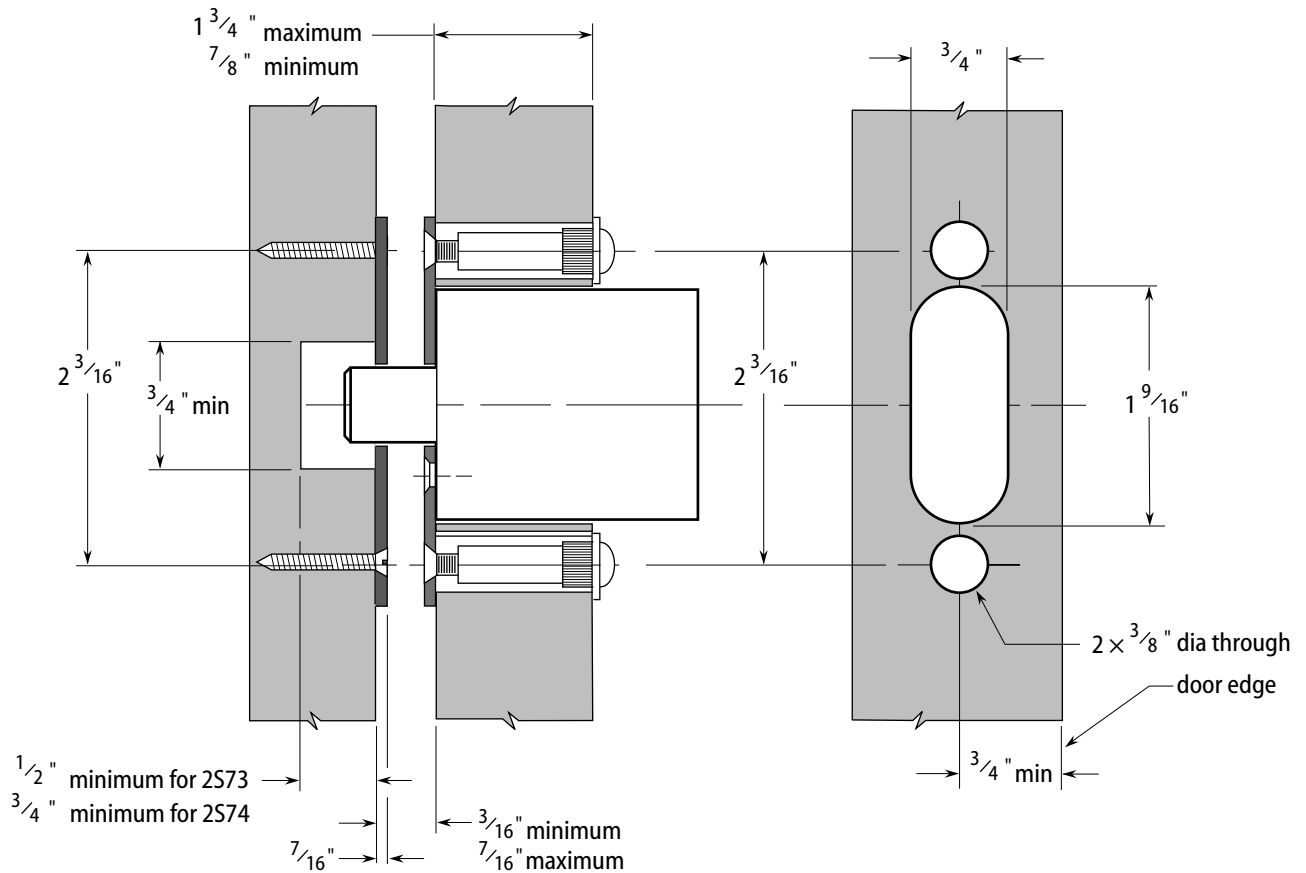

Notes

- 1 Attach the strike with #6 x 3/4" FHWS on wood doors.
Use #6-32 x 1/4" FHMS on metal doors.
- 2 Oval slot for keeper plate and bolt is 21/32" x 1 9/32".
- 3 Slot through door is 3/4" x 1 9/16".
- 4 2S73: 1/2" bolt throw
2S74: 3/4" bolt throw
- 5 Allow +1/32" tolerance for clearance.