Installation Specifications for Door and Frame Preparation for 63K, 83K, 73KC and 93K Cylindrical Locks with Small Strike (STK)

Template Number: K08 Series: 63K, 83K, 73KC, 93K

Backset: 2-3/4" [70]


Strike: Small ANSI Strike (STK) **Door Thickness:** 1-3/4" [44]



For online instructions, assistance or warranty information: Call 1-800-392-5209 or visit https://dhwsupport.dormakaba.com/hc/en-us

NOTES

- 1 Allow plus tolerance for clearance per ANSI A115.2.
- 2 Lock and latch case support by door manufacturer.
- 3 Plaster guard by door manufacturer.
- 4 Prepare for a #8-32 screw.
- 5 For 73KC and 93K ONLY! The 63K and 83K "C" style roses will NOT cover these holes.
- 6 For 63K and 73KC only, a 1" [25.4] latch face is available.
- 7 For 73KC locks, use the KD303 drill jig to ensure that through-bolts and levers are properly aligned.

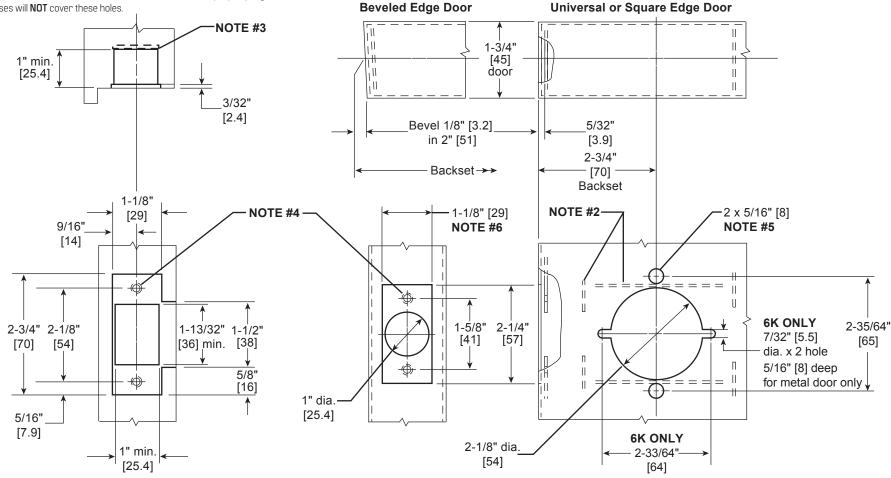

Frame Preparation

2-3/4" [70] Backset Door Preparation