


Template for 2 3/4" Backset 6K, 7KC, 8K, and 9K Cylindrical Locks with RQE

Caution: For 7KC and 9K locks ONLY, drill a 5/16" dia hole above and below the 2 1/8" hole. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K and 8K locks will NOT cover these holes.

Drill 1 1/8" hole for all latches.

Clear shaded area 3/8" deep for 3/4" throw latch only.

1 3/8"
1 3/4"
2"
2 1/4"

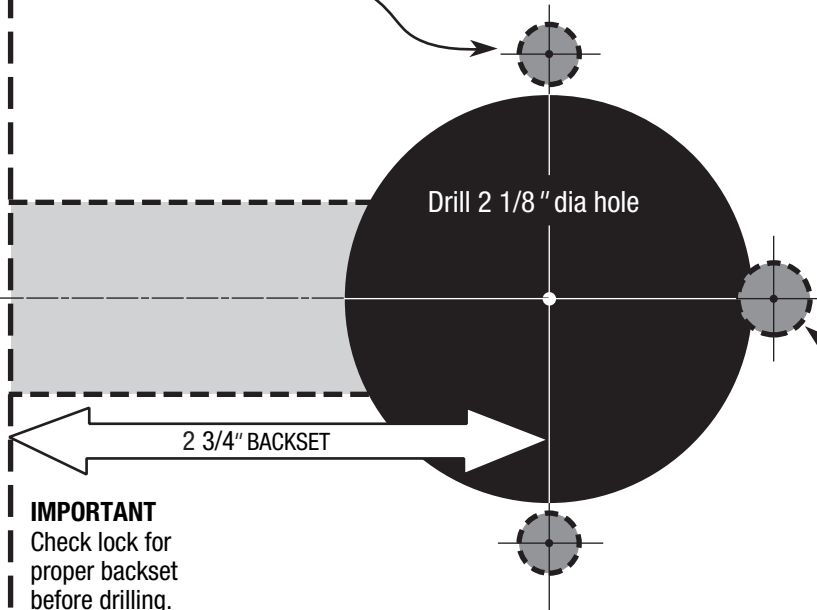

IMPORTANT

Check lock for proper backset before drilling.

Fold along the dotted line and place on high edge of door bevel.

Template to scale 1:1, full size.