


Template for 2 3/8" Backset 6K and 7KC Cylindrical Locks

Caution: For 7KC ONLY, drill a 5/16" dia. holes in the position shown. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K locks will NOT cover these holes.

Drill 1" hole
for all latches.

Clear shaded
area 3/8"
deep for 3/4"
throw latch
only.

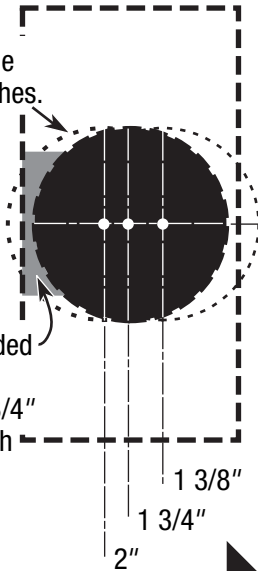

Drill 2 1/8" dia hole

2 3/8" BACKSET

IMPORTANT

Check lock for
proper backset
before drilling.

Fold along the dotted line and place
on high edge of door bevel.

Template to scale 1:1, full size.