



# Template for 2 3/8" and 2 3/4" Backset 72T/82T & 73T/83T Tubular Deadbolt Locks



Drill 1" hole for  
all latches

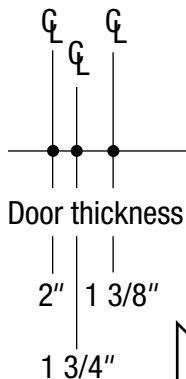

Fold along the dotted line and place on  
the high edge of bevel.

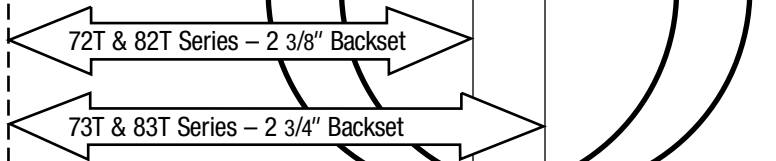

Mark center  
and drill  
2 1/8" dia. hole

**IMPORTANT**  
Check the lock backset  
before drilling.

Template to scale 1:1, full size.