


# Installation Template for 8K and 9K Dummy Trim

Template Number: K18

Series: 8K, 9K

Door Thickness: See note 3

**NOTE:** To ensure accurate door preparation, use only factory-printed or laser-printed templates. Do not use copies or facsimiles.

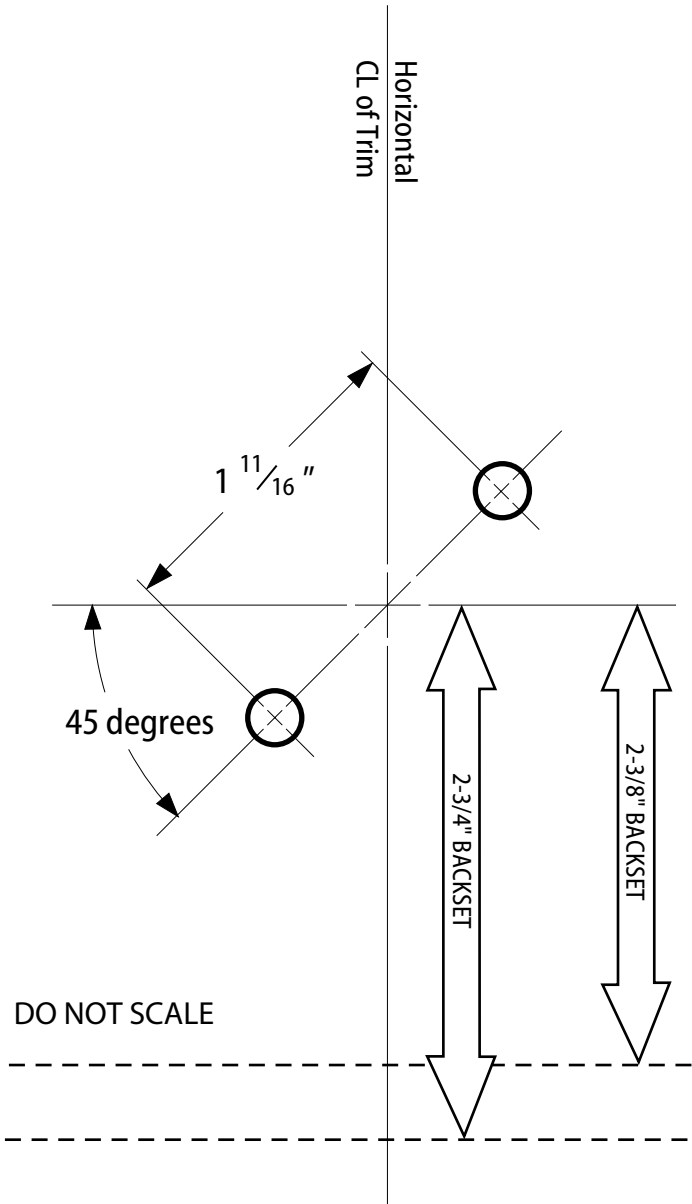

## Notes

- 1 For 1DT, prepare the door for two #8 x 1" screws.
- 2 For 2DT, drill two  $9/32$ " diameter through holes.
- 3 Since the 1DT function is surface-mounted, door thickness does not apply. The 2DT function is for  $1 \frac{3}{4}$ " doors.

## Important

Check the lock for the proper backset before drilling.

Fold along the appropriate dotted line and place on the high edge of the door bevel.