


Template for 3 3/4" and 5" Backset 6K, 7KC, 8K and 9K Cylindrical Locks with RQE

Caution: For 7KC and 9K locks ONLY, drill a 5/16" dia hole above and below the 2 1/8" hole. To ensure proper alignment of the through-bolts and levers, use a KD303 drill jig. The "C" style rose on the 6K and 8K locks will NOT cover these holes.

Drill 1" hole
for all latches

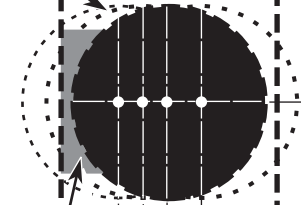

Clear shaded
area 3/8"
deep for 3/4"
throw latch
only.

1 3/8"
1 3/4"
2"
2 1/4"

3-3/4" BACKSET for 64K, 74KC, 84K, 94K

5" BACKSET for 65K, 75KC, 85K, 95K

Drill 2 1/8" dia hole

1 3/16"

1 3/16"

IMPORTANT

Check lock for
proper backset
before drilling.

Fold along the dotted line and
place on high edge of door bevel.

Template to scale 1:1, full size.

Note: For 8K &
9K electrified locks or
request-to-exit (RQE)
wires ONLY, drill a
3/8" dia hole as shown.
If needed, drill this hole
before all others.