

TOT-3A Top H-Latch Template
2200, FL2200, 200 & FL200 Series




Mounting holes 'A'

#10-24 MS or #10 SMS

Fold along the dotted line

Vertical centerline

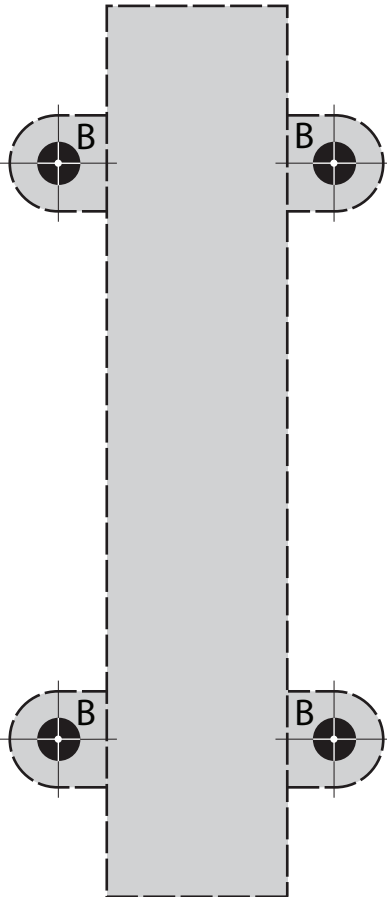

Mounting holes 'B'

Wood door Drill 3/32" dia pilot hole – inside

Metal door #10-24 MS or #10 SMS – inside

Sex bolts Drill 1/4" dia hole thru door
Redrill 5/16" dia hole – outside

Template to scale 1:1, full size.