
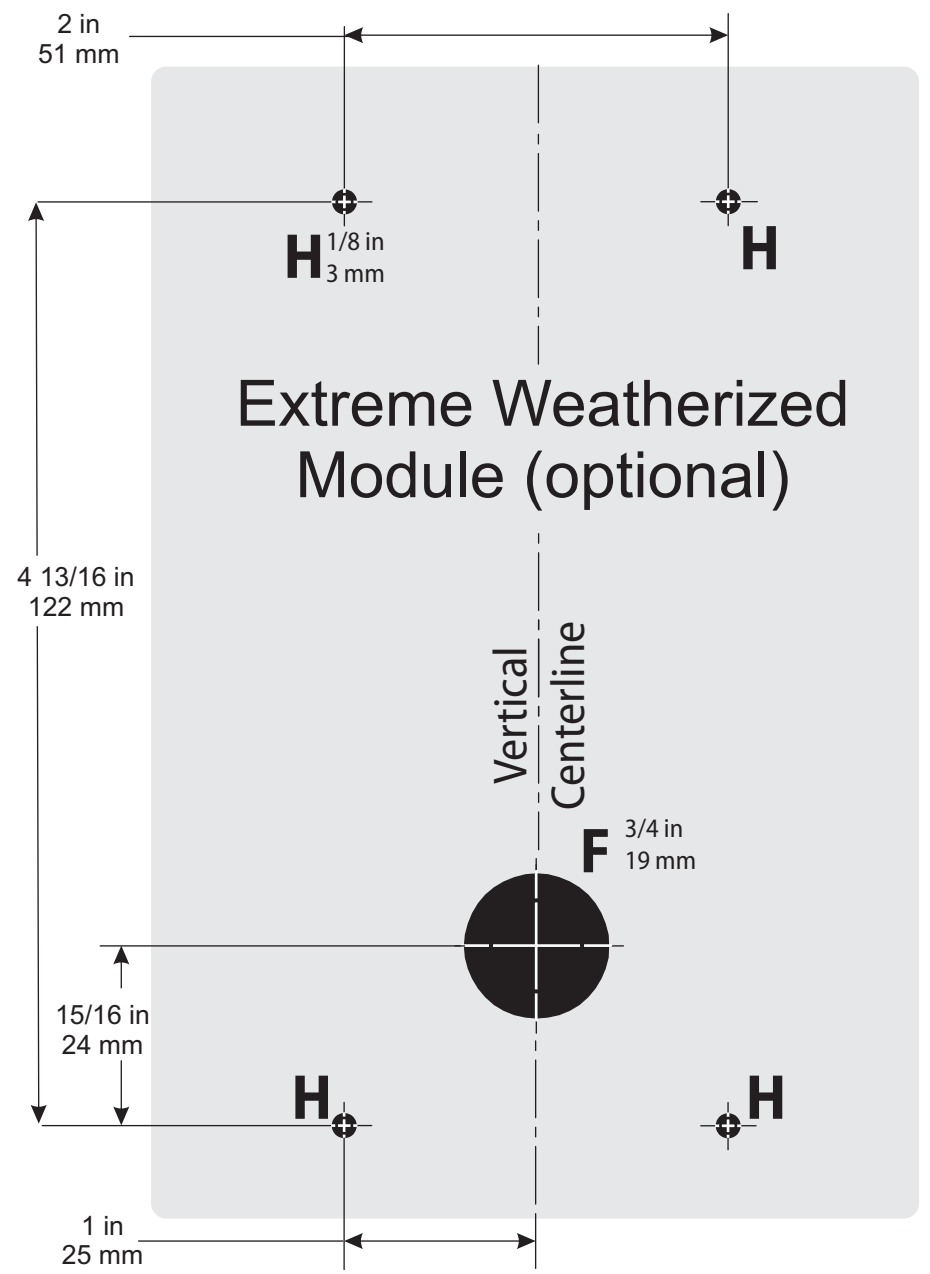


# Inside door preparation

For use with Sargent exit devices

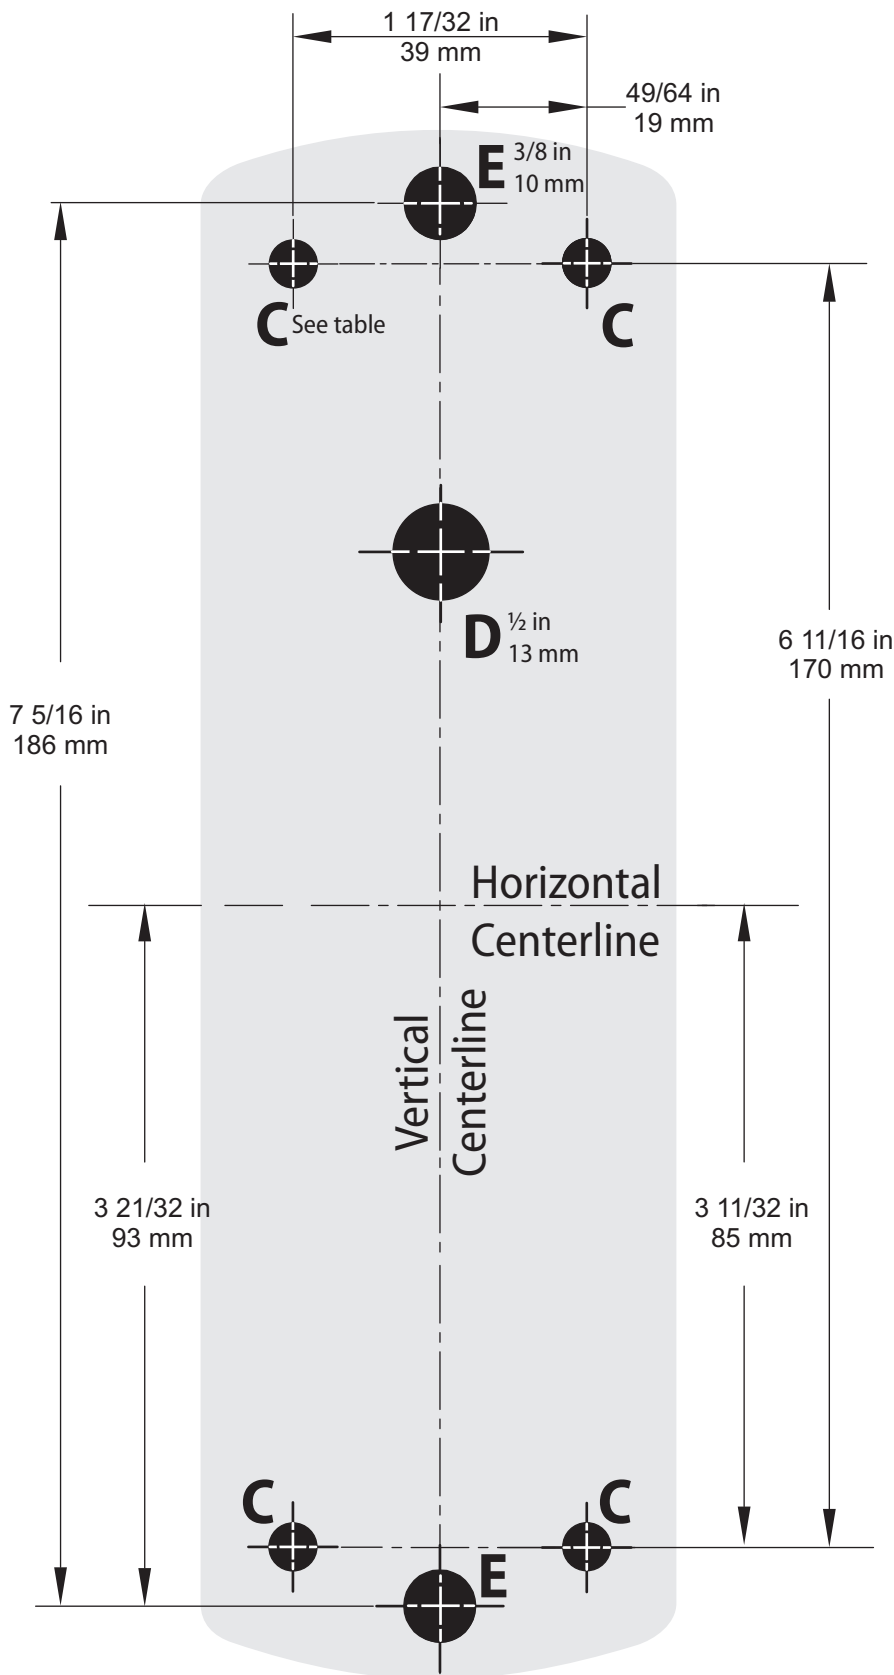

Align the Extreme Weatherized module template as close to the exit device chassis as practical.

## Instructions:


- 1 This template is for use on doors that have previously used the Sargent rim exit device series 9800.
- 2 Remove the chassis and trim from the door, and revise the hole pattern on the door to the pattern on this template. If the existing holes on the door are larger than on this template, they may be used if they meet the exit device manufacturer's specifications.
- 3 Plug all unused mounting holes as desired.
- 4 Refer to *Installation Instructions for Omnilock QAXOM Exit Device Locks (T83325)* for installation of the Omnilock Quick Adapter.

Hole	Diameter	Depth	Additional Information
A	15/32 in (12 mm)	1 9/16 in (40 mm)	Mounting posts
B	1 7/8 in (46 mm)	13/16 in (21 mm)	Bearing clearance hole
C	#10-24 tap	3/4 in (19 mm)	Chassis mount
D	1/2 in (13 mm)	Through door	Access hole
E	3/8 in (10 mm)	1 1/8 in (29 mm)	Mounting posts
F	3/4 in (13 mm)	Through one side	For Extreme Weatherized models on hollow metal door only
G	1/8 in (3 mm)		
H	3/4 in (13 mm)		

Title				<b>OMNILOCK</b>		
Installation Template for QAXOM used with Sargent SA9 Exit Device						
Series	Backset	Trim style	Door thickness	Rev date	Template number	Rev
QAXOM	----	----	----	02/2022	<b>OM9</b>	<b>B</b>

# Outside door preparation

For use with Sargent exit devices

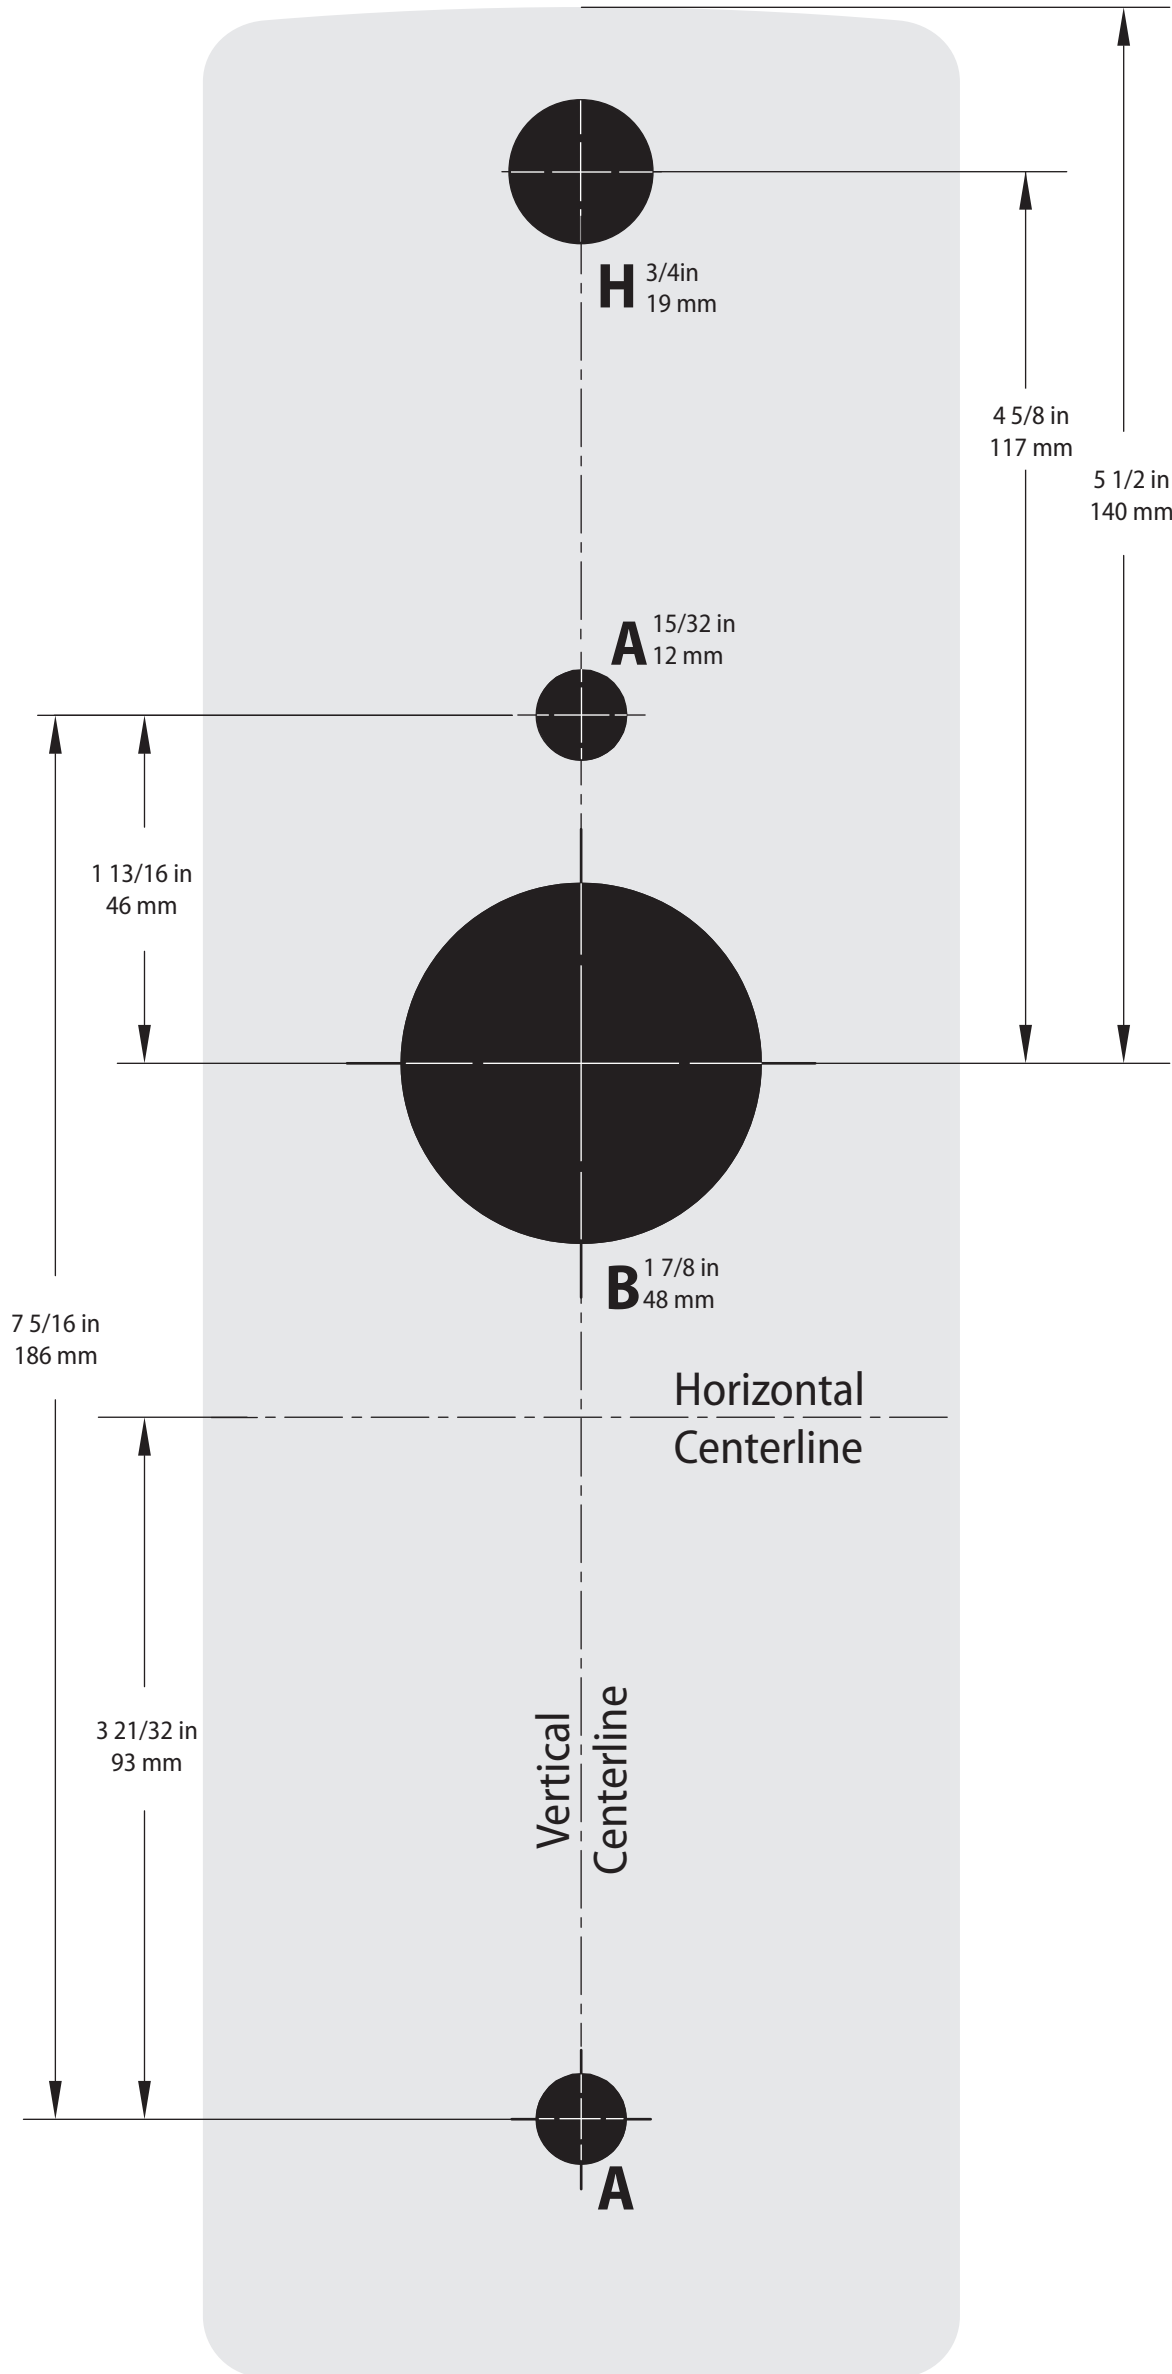

Hole	Diameter	Depth	Additional Information
A	15/32 in (12 mm)	1 9/16 in (40 mm)	Mounting posts
B	1 7/8 in (46 mm)	13/16 in (21 mm)	Bearing clearance hole
C	#10-24 tap	3/4 in (19 mm)	Chassis mount
D	1/2 in (13 mm)	Through door	Access hole
E	3/8 in (10 mm)	1 1/8 in (29 mm)	Mounting posts
F	3/4 in (13 mm)	Through one side	<i>For Extreme Weatherized models on hollow metal door only</i>
G	1/8 in (3 mm)		
H	3/4 in (13 mm)		