


PD250-64 Flush Pull Installation Instructions

Always consult the dormakaba website for the latest instructions at <https://dhwsupport.dormakaba.com/hc/en-us> or call 1-800-392-5209.

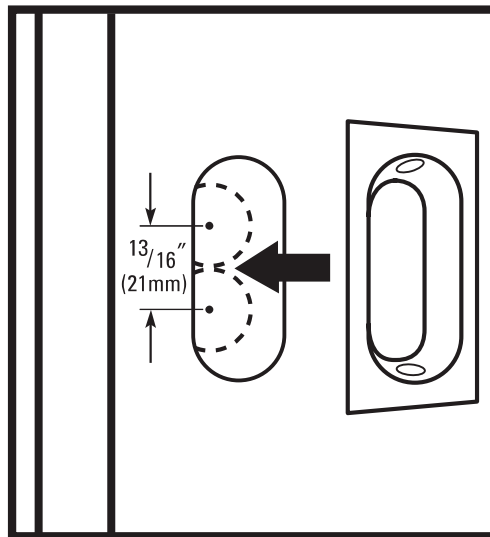

1. Mark screw locations.
2. Drill two 1" (25mm) holes as shown 1/2" (13mm) deep.
3. Chisel and slope ends to accommodate pull.
4. Drill 3/32" pilot holes.
5. Fasten screws.
Only clean with soft cloth, mild soap and water.



Wear Safety Goggles