


# PD250-63

## Installation Instructions



Always consult the dormakaba website for the latest instructions at <https://dhwsupport.dormakaba.com/hc/en-us> or call 1-800-392-5209.

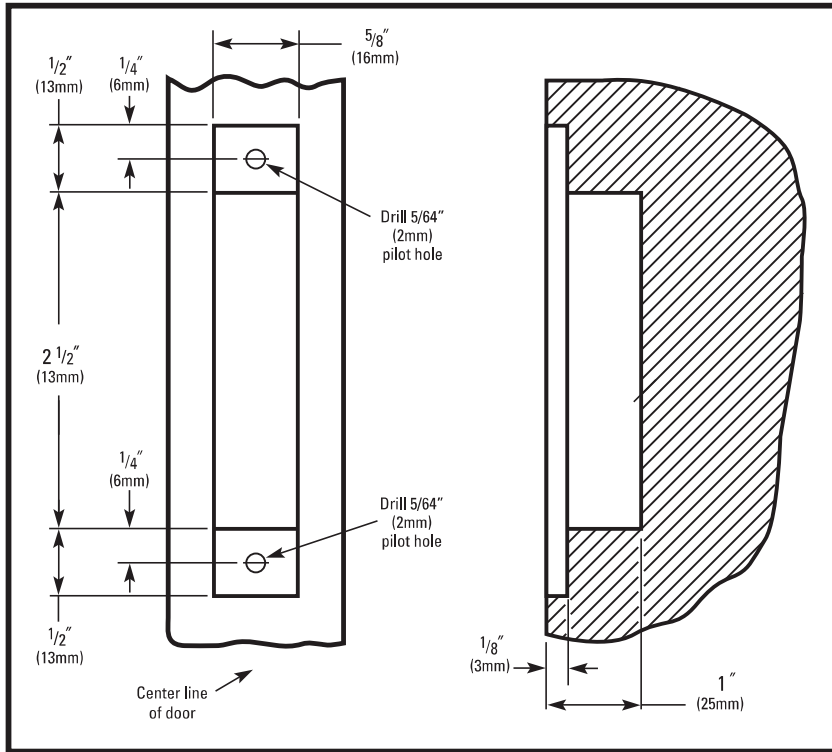

**Wear Safety Goggles**

1. Mortise door edge.
  2. Mark screw locations.
  3. Drill 5/64" pilot holes.
  4. Insert pull and fasten screws.
- Only clean with soft cloth, mild soap and water.

