


Notes

1. For 1DT, prepare the door for two #8 × 1" [25 mm] screws.
2. For 2DT, drill two 9/32" [7 mm] diameter through holes.
3. Since the 1DT function is surface-mounted, door thickness does not apply. The 2DT function is for 1-3/4" [44 mm] doors.

For online instructions, assistance or warranty information:
 Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

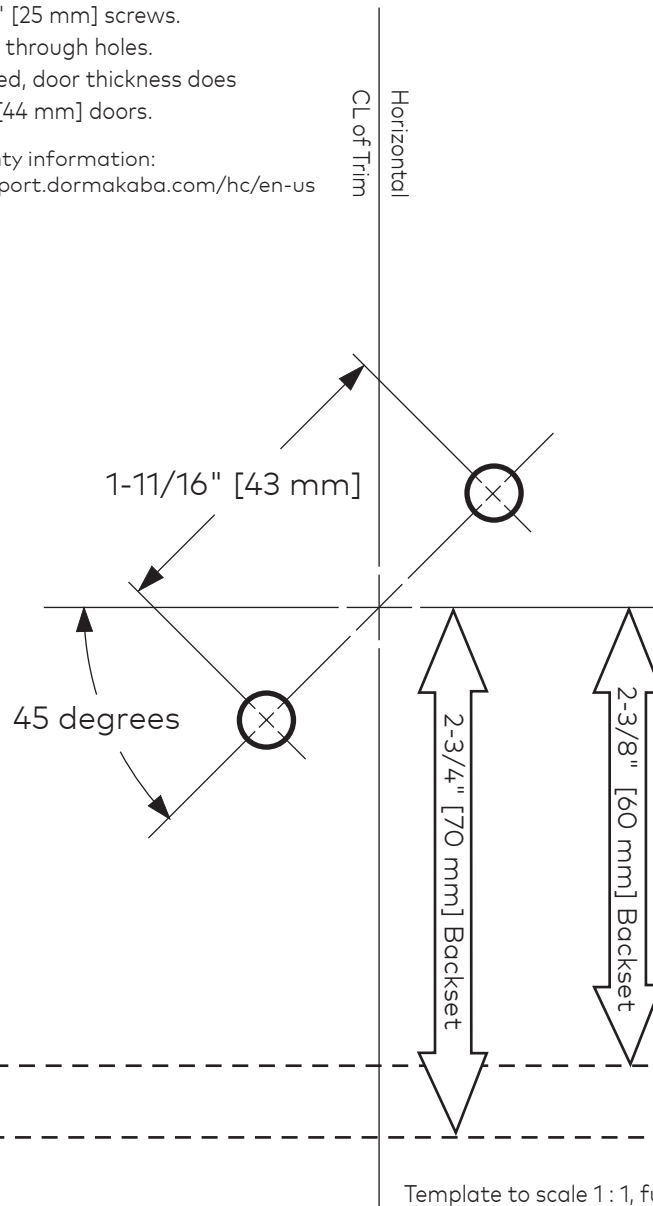

Important

Check the lock for the proper backset before drilling.

Fold along the appropriate dotted line and place on the high edge of the door bevel.

Template to scale 1 : 1, full size.

Template:

C100 dummy trim

Backset: 2-3/4" [70 mm], 2-3/8" [60 mm]
 Door thickness: 1-3/4" [44 mm]