


# Template: 2-3/4" [70 mm] backset C100 cylindrical locks with RQE



For online instructions, assistance or warranty information:  
Call 1-800-392-5209 or visit <https://dhwsupport.dormakaba.com/hc/en-us>

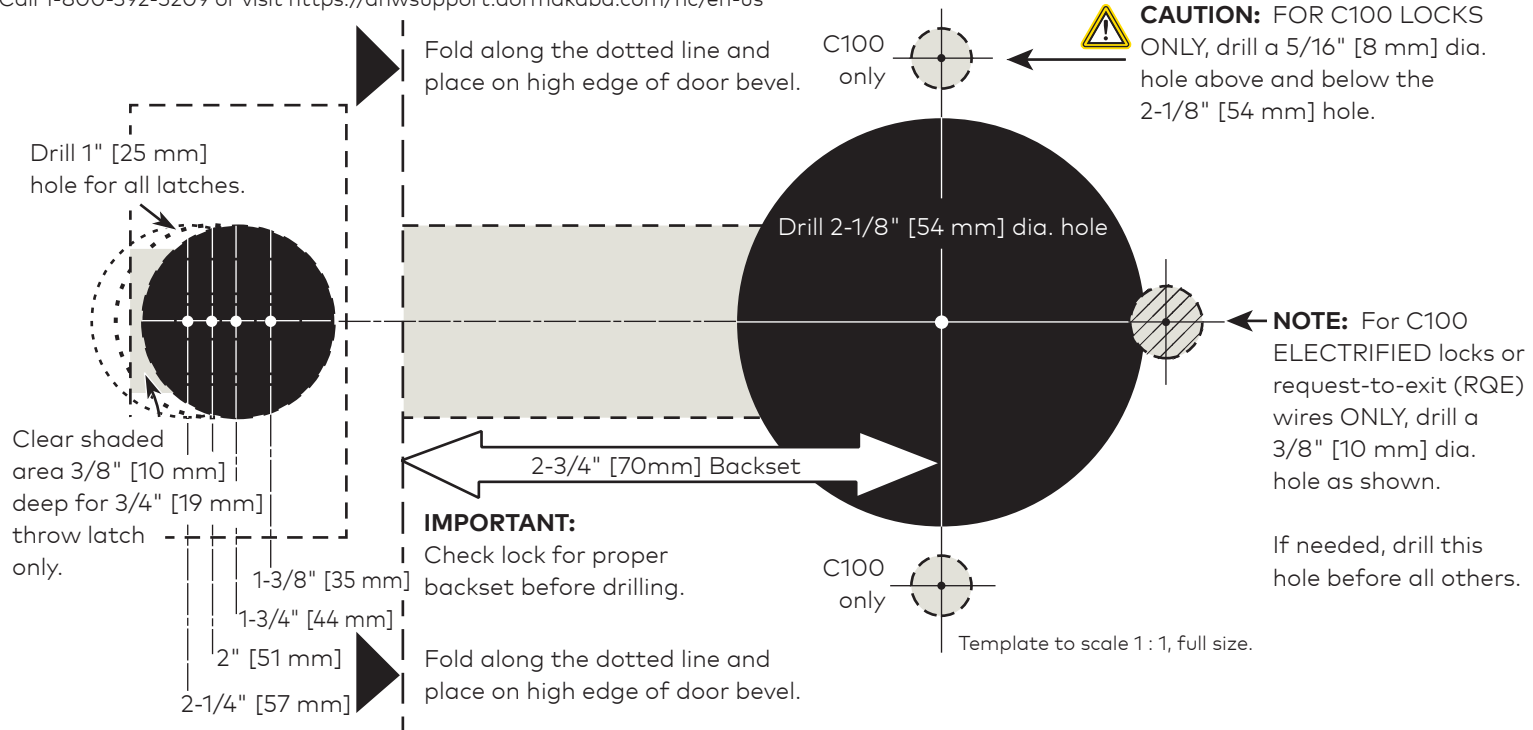

**IMPORTANT:**

Check lock for proper backset before drilling.

Fold along the dotted line and place on high edge of door bevel.