

POCKET DOOR  
 PD-75

STANLEY 99-3900


**Pocket Door Hardware  
 Assembly and Installation Instructions**

We Supply  
 This package contains all the necessary hardware components for installation of your Pocket Door.


For Pocket Hardware Set  
 40-3903 (2) 40-3904 (4)

- 1—Gold-tone Steel Track
- 2—Adjustable Hangers
- 1—Door Guide
- 1—Adjusting Wrench
- 1—Bumper Stop
- All necessary fasteners


cut track.  
 Track is less than opening to reduce need to  
 all necessary fasteners

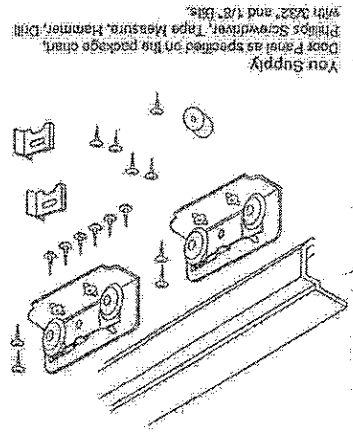


**You Supply**  
 Door Panel as specified on the package chart,  
 Phillips Screwdriver, Tape Measure, Hammer, Drill  
 with #6x2" and #8" bits.

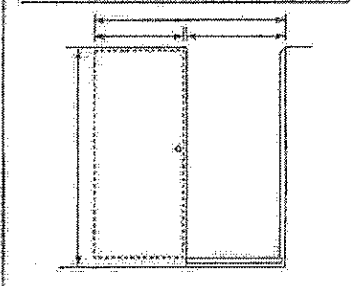


**How to Install your Pocket Door**  
 Please read the complete instructions carefully  
 before you start installation. This track and  
 hardware system may be used for a Pocket Door  
 (in the wall) installation, instructions are for Pocket  
 Door installation rough opening.

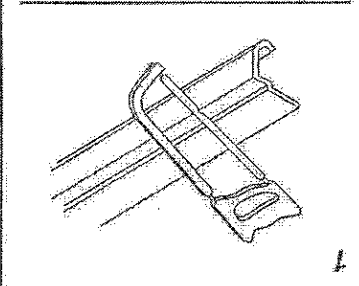


**1. Cut track**  
 If necessary, cut track to 1/8" less than the width of  
 the rough opening. Use a fine-tooth  
 hack saw.

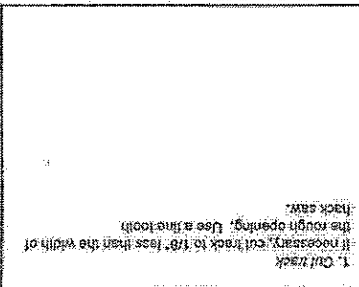


**2. Install track**  
 Align the center of the track with the center of the  
 header and attach with the screws provided.

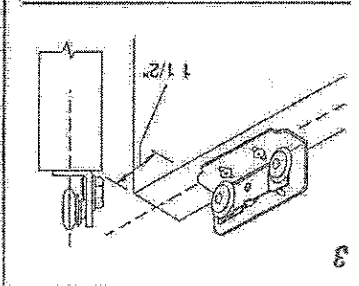

**3. Install hangers**  
 Fasten the adjustable door hangers on the top of  
 the door panel. Hangers should be approximately  
 1-1/2" from door edge with wheels located along  
 center line of door.

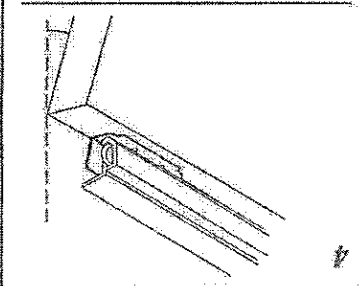

**4. Install door**  
 Lift the door into the track. Door must be angled  
 approximately 15° to engage in track.

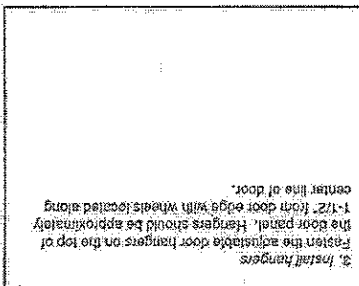

**5. Adjust door**  
 Using the wrench included, adjust hangers so that  
 door is plumb with the jamb and has proper floor  
 clearance. Clockwise turns will raise the door,  
 counterclockwise turns will lower the door. This  
 adjustment is self locking.

