




Wear Safety Goggles

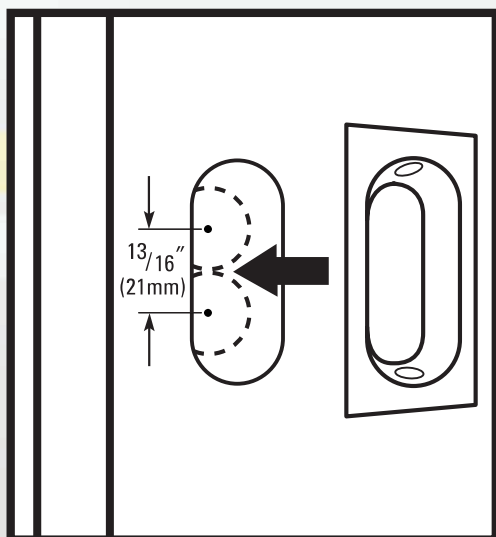

1. Mark screw locations.
2. Drill two 1" (25mm) holes as shown 1/2" (13mm) deep.
3. Chisel and slope ends to accommodate pull.
4. Drill 3/32" pilot holes.
5. Fasten screws.
Only clean with soft cloth, mild soap and water.