



# Outside door preparation

For use with Sargent exit devices

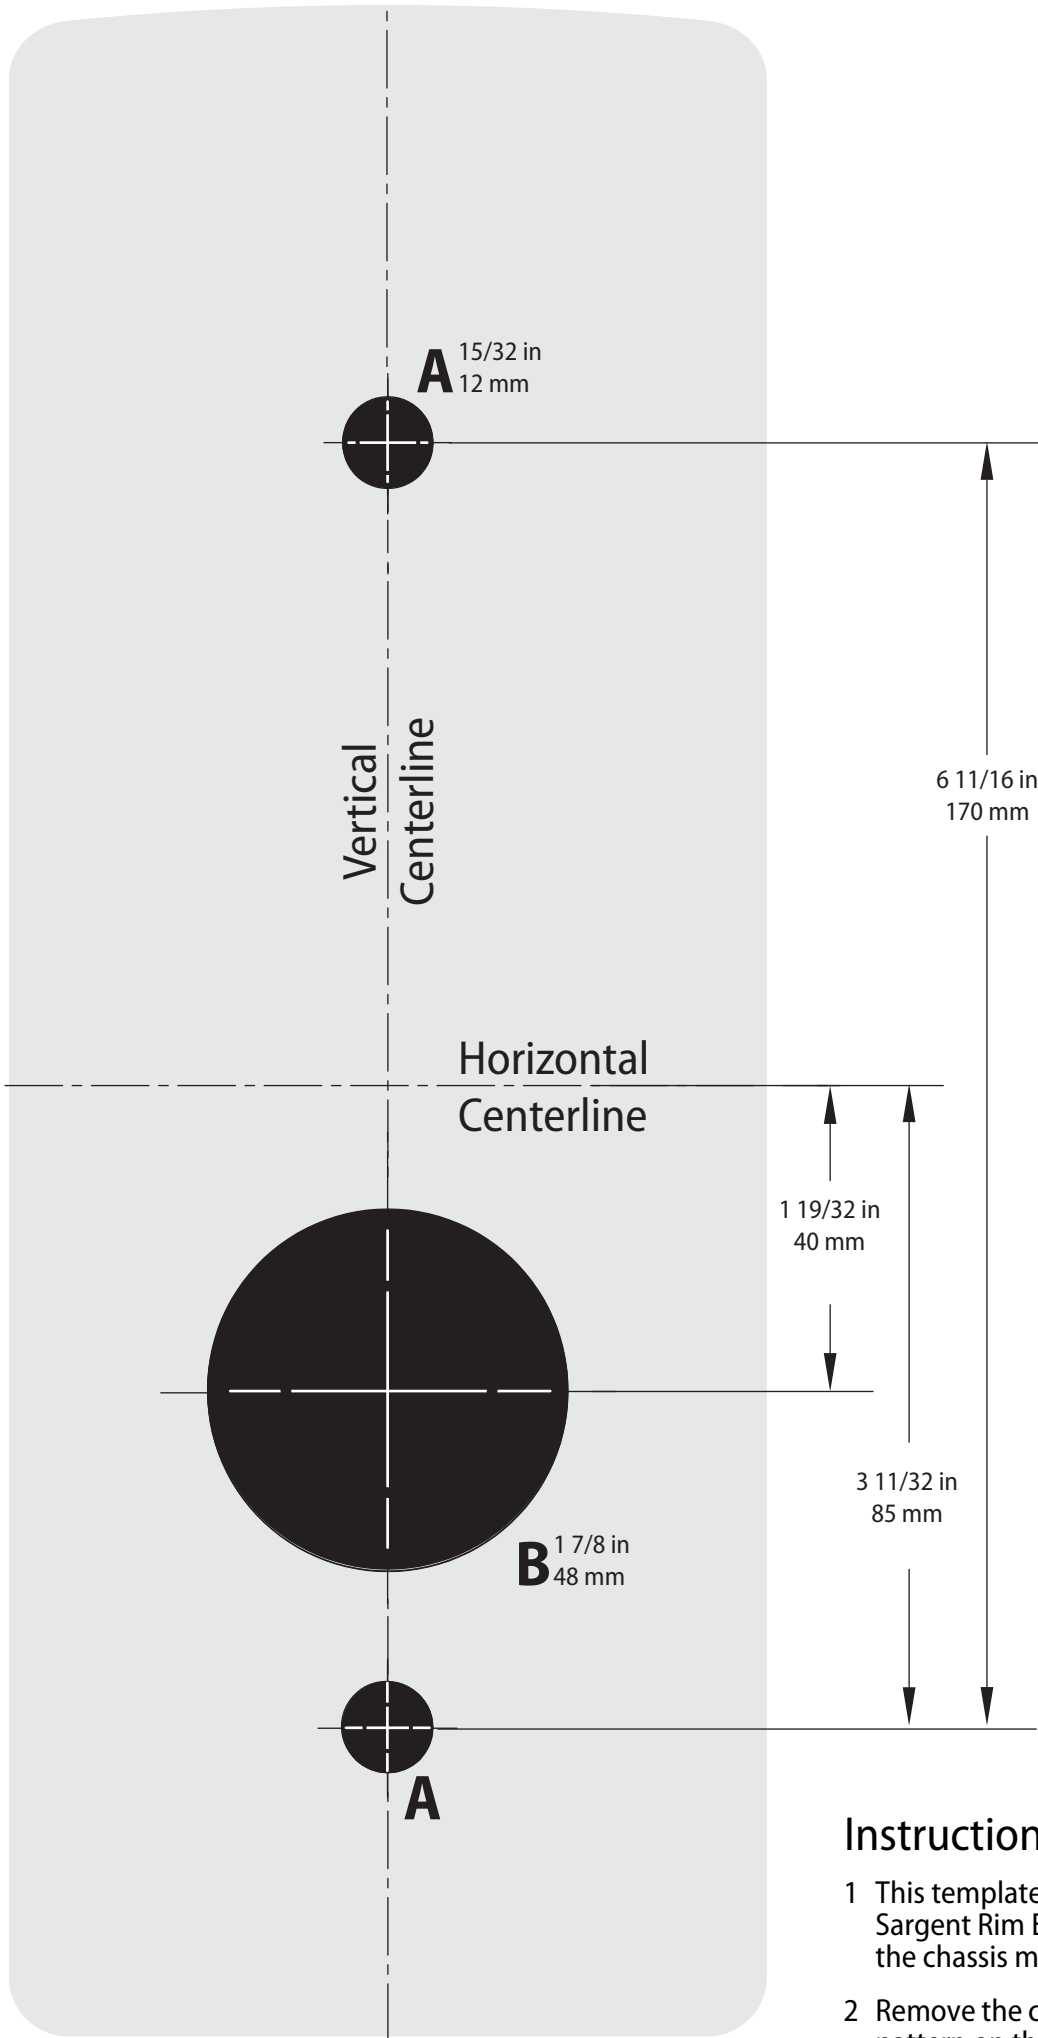

# Inside door preparation

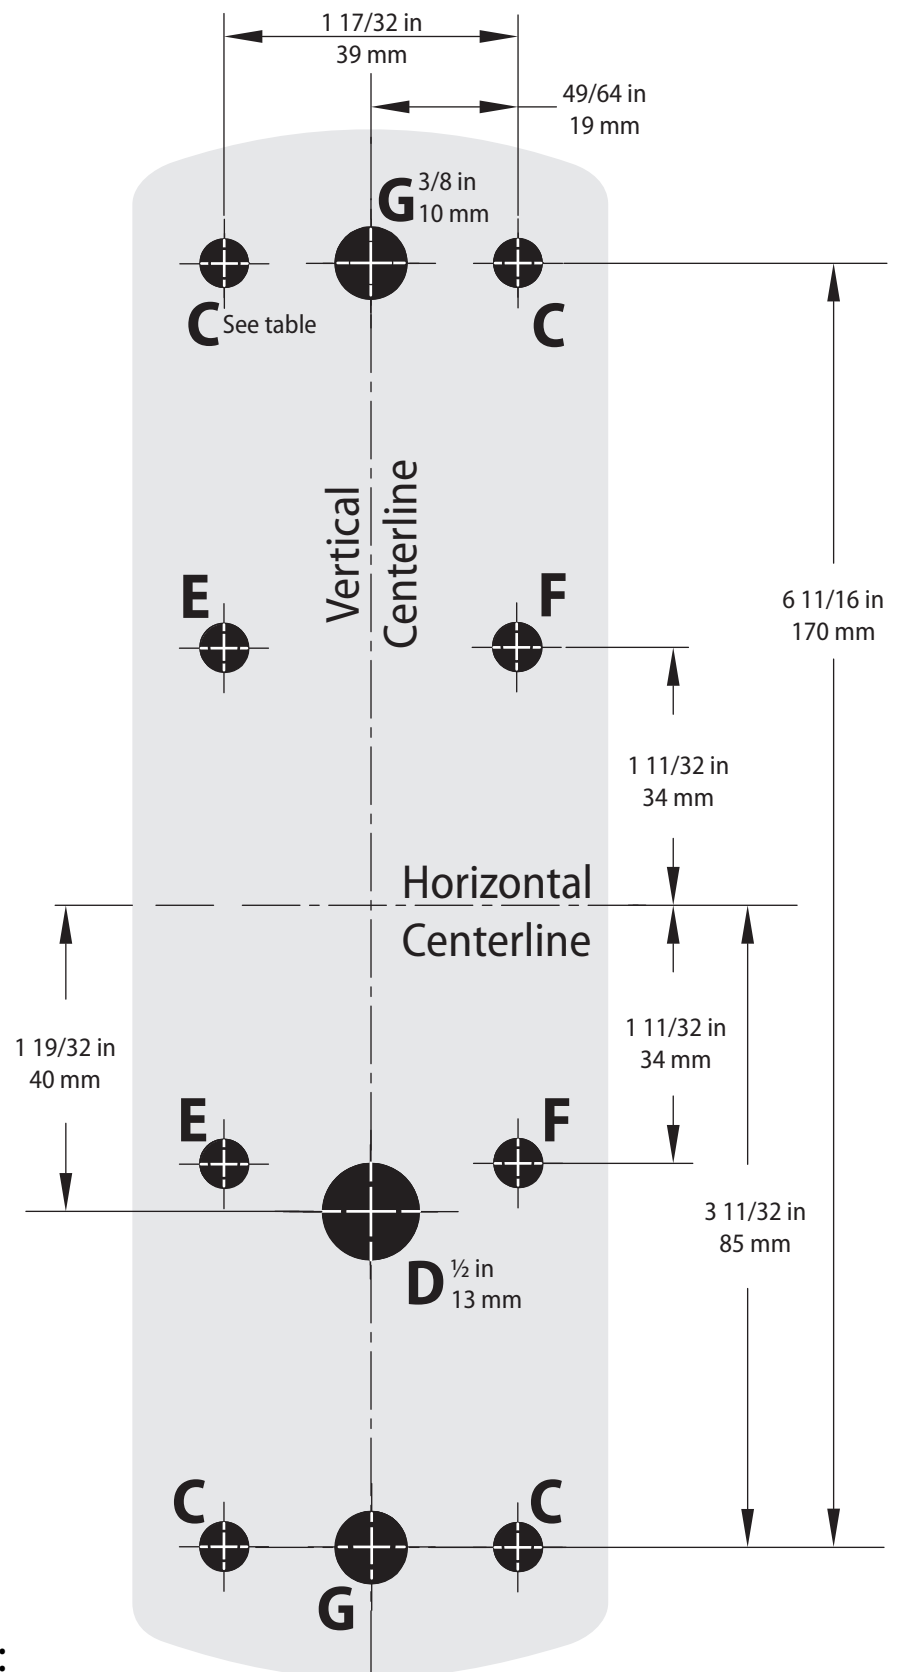

### Instructions:

- 1 This template is for use on new construction, or doors that have previously used the Sargent Rim Exit Series 12-8800 and 12-8888, using trim ET, 88, FLL, FLW, MAL, PTB; the chassis must be a non-thumbpiece chassis.
- 2 Remove the chassis and trim from the door. Revise the hole pattern on the door to the pattern on this template. Reinstall the exit device on the door using holes E or F as applicable. Reinstall the end cap mounting bracket using the original hardware.
- 3 Plug the unused lower mounting hole of trim FLL, FLW, MAL, or PTB as desired.
- 4 Refer to *Installation Instructions for Stanley Omnilock QAXOM Exit Device Locks (T83325)* for installation of the Omnilock Quick Adapter.

Hole	Diameter	Depth	Additional Information
A	15/32 in (12 mm)	1 9/16 in (40 mm)	Mounting posts
B	1 7/8 in (46 mm)	13/16 in (21 mm)	Bearing clearance hole
C	#10-24 tap	3/4 in (19 mm)	Chassis mount
D	1/2 in (13 mm)	Through door	Tailpiece access hole
E	#10-24 tap	5/8 in (16 mm)	Left hand door
F			Right hand door
G	3/8 in (10 mm)	1 1/8 in (29 mm)	Mounting posts

Title <b>Installation Template for QAXOM used with Sargent/Arrow SA7 Exit Device</b>				<b>STANLEY OMNILOCK</b>		
Series <b>QAXOM</b>	Backset ----	Trim style ----	Door thickness ----	Rev date <b>02/2010</b>	Template number <b>OM7</b>	Rev <b>A</b>