


Mark and drill holes

- 1 Determine the inside and outside of the door, then mark and drill each side of the door according to proper function. See *H03 or H14 Installation Specifications* and *H04 Hole Pattern Chart*.
- 2 For best results, cut the template along the dotted lines and align the arrows with the marked centerlines.
- 3 Use the other side of this template for marking the other side of the door.
- 4 Mark the horizontal centerline of the strike 3/8" above the horizontal centerline of the lock. See the *Installation Instructions* and the *H03 and H14 Installation Specifications*.

- 1 **Cylinder hole**
1 1/4" dia. Drill only if the cylinder hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- 1 **High security cylinder hole**
1 3/4" dia. Drill only for 36H and 37H mortise locks. See *H04 Hole Pattern Chart*.
- 2 **Turn knob or emergency entrance hole**
1/2" dia. Drill only if the turn knob or emergency entrance hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- 3 **Hotel indicator hole**
1/2" dia. Drill only if the hotel indicator hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- 5 **Through-bolt hole**
3/8" dia x 2 holes. Drill through the door. See *H04 Hole Pattern Chart*.
- 4 **Knob hole**
7/8" dia. Drill only if the knob hole is required on this side of the door. See *H04 Hole Pattern Chart*.

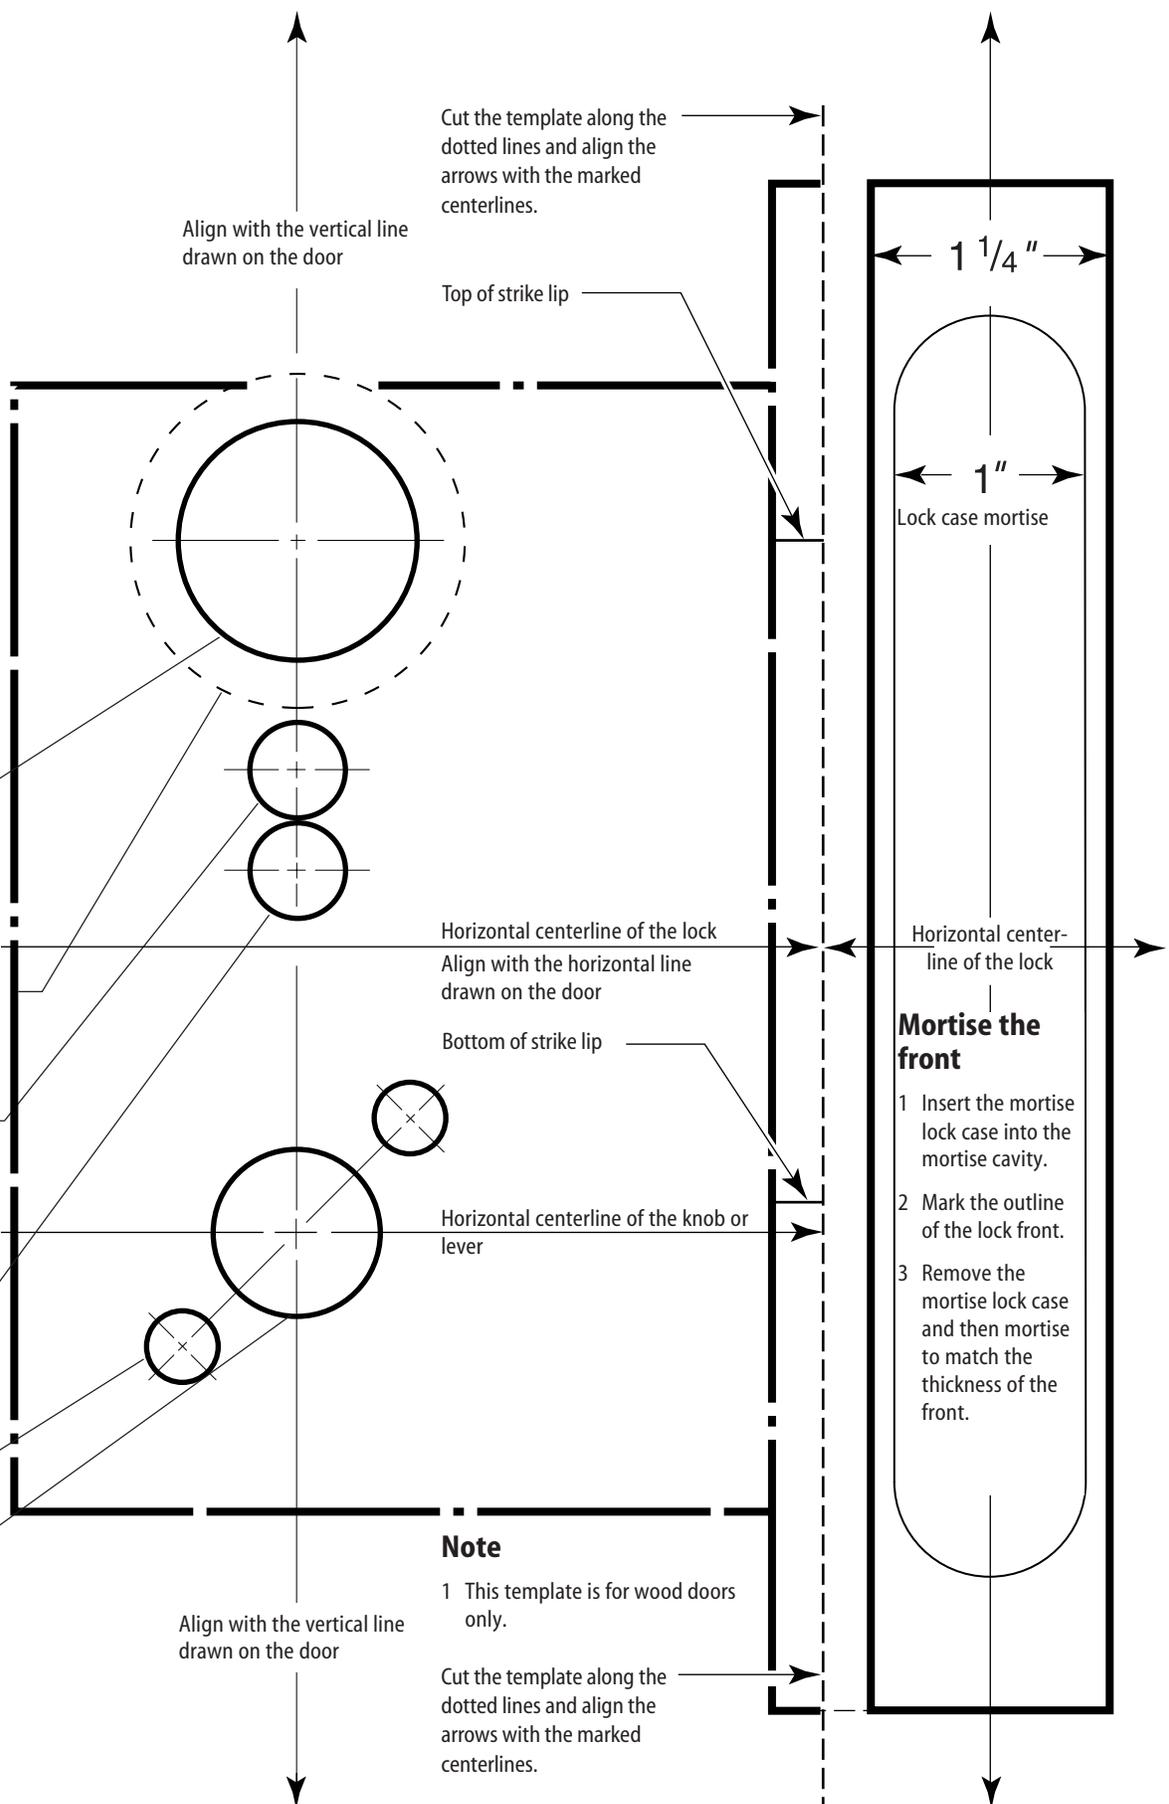

Note

- 1 This template is for wood doors only.

Cut the template along the dotted lines and align the arrows with the marked centerlines.


Mortise the front

- 1 Insert the mortise lock case into the mortise cavity.
- 2 Mark the outline of the lock front.
- 3 Remove the mortise lock case and then mortise to match the thickness of the front.

Title Installation Template for 34H-37H Mortise Locks				BEST ACCESS SYSTEMS		
Series 34H-37H	Backset 2 3/4"	Trim style A, B, C, D, H, S	Door thickness 1 3/4"-5"	Rev date 04/2000	Template number H09	Rev G

Note: To ensure accurate door preparation, use only factory-printed or laser-printed templates. Do not use copies or facsimilies.

T61954/Rev G 1794690 ER-7991-9 Apr 2000

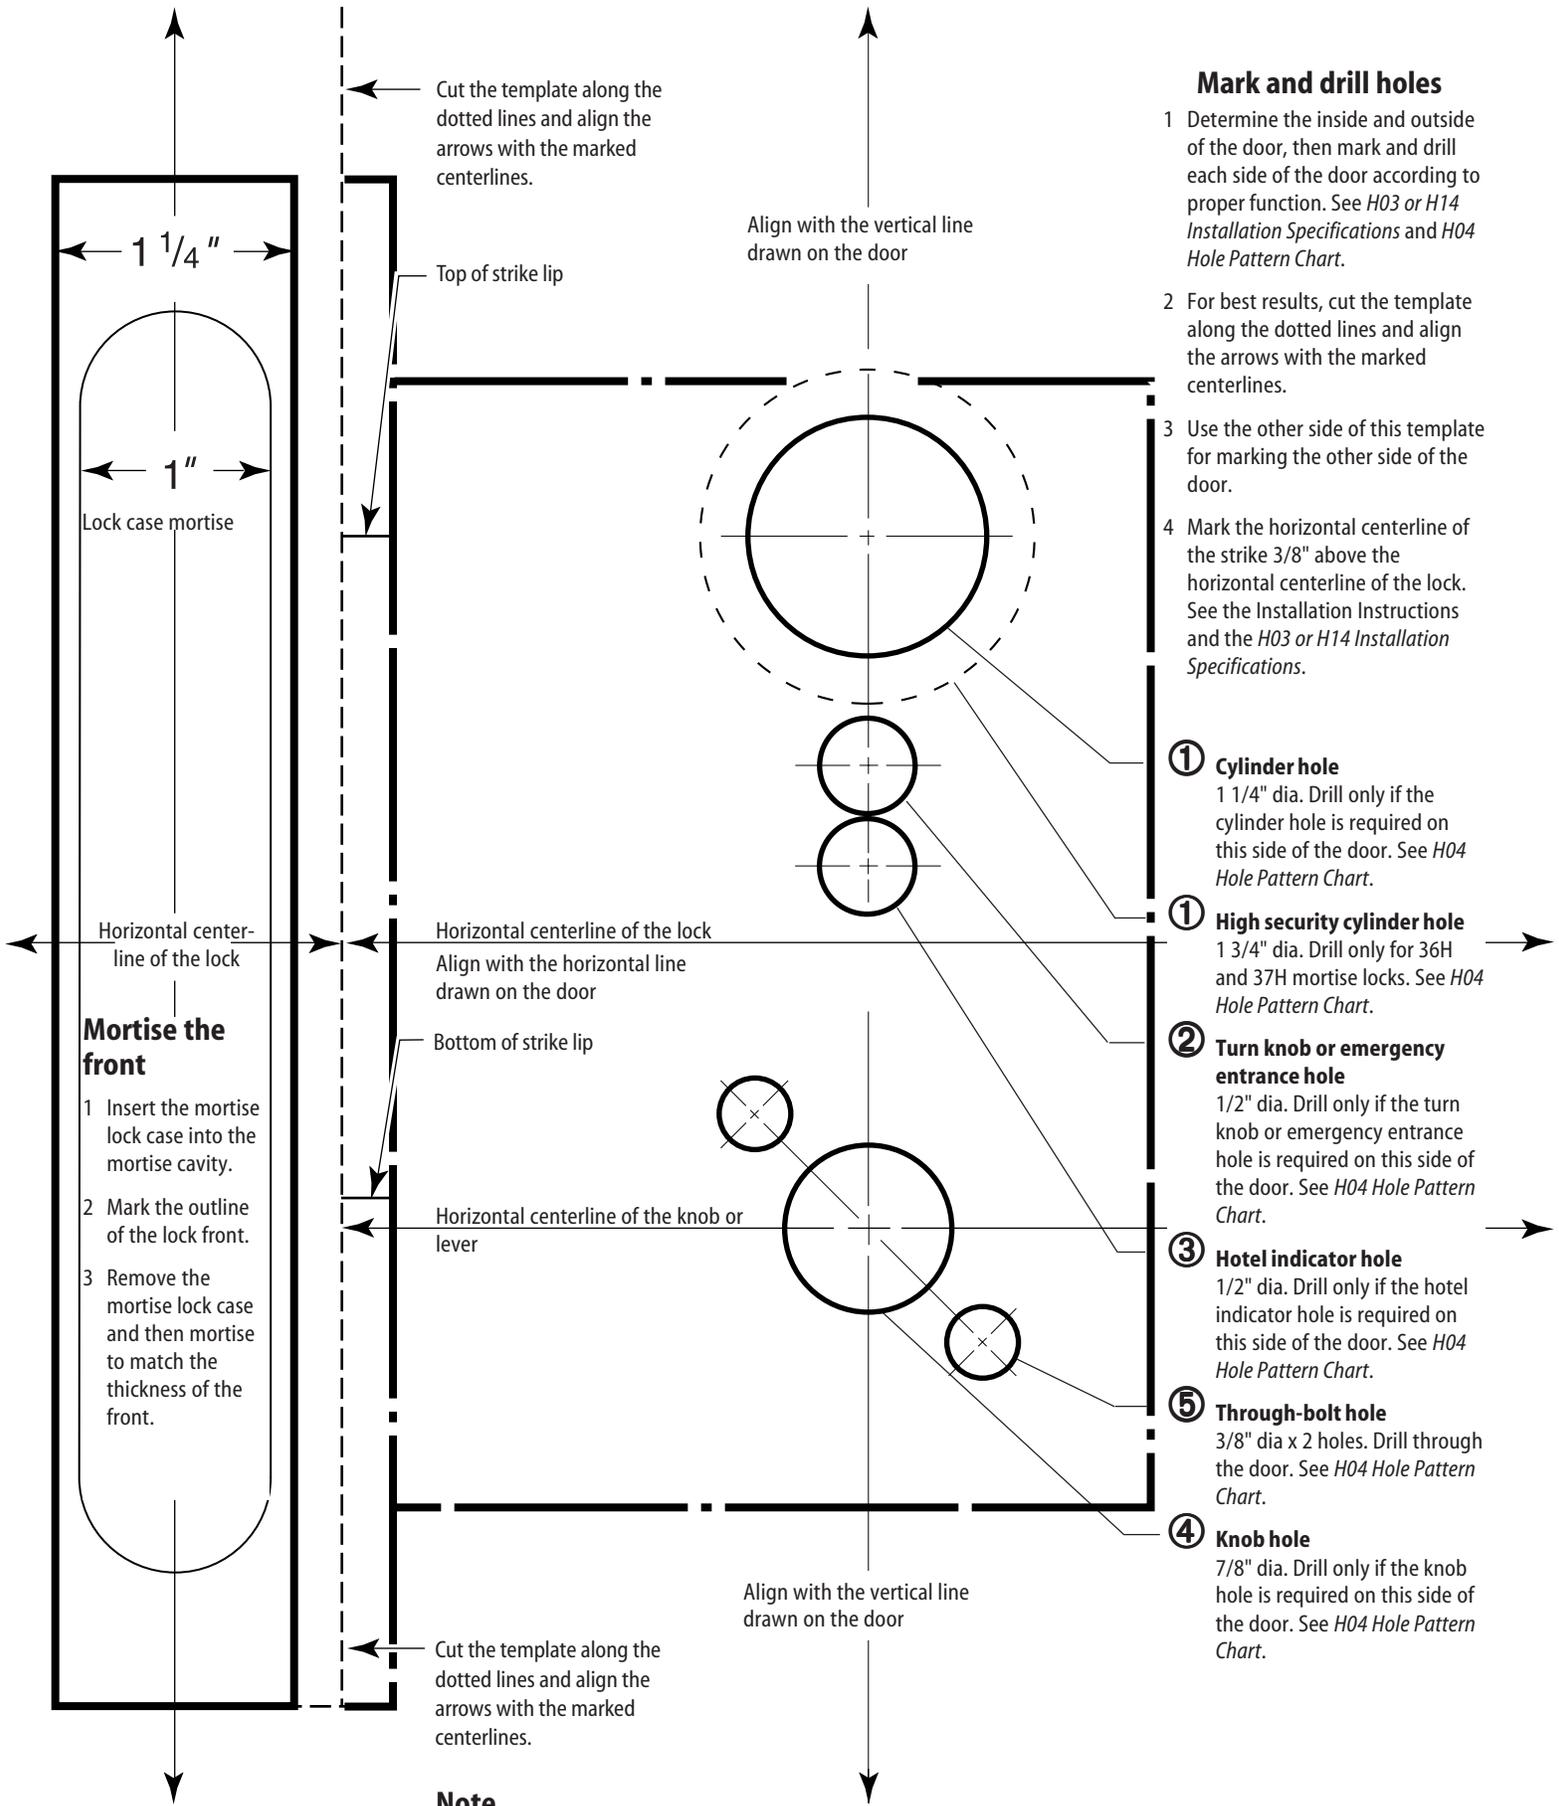

Mortise the front

- 1 Insert the mortise lock case into the mortise cavity.
- 2 Mark the outline of the lock front.
- 3 Remove the mortise lock case and then mortise to match the thickness of the front.

Mark and drill holes

- 1 Determine the inside and outside of the door, then mark and drill each side of the door according to proper function. See *H03 or H14 Installation Specifications* and *H04 Hole Pattern Chart*.
- 2 For best results, cut the template along the dotted lines and align the arrows with the marked centerlines.
- 3 Use the other side of this template for marking the other side of the door.
- 4 Mark the horizontal centerline of the strike 3/8" above the horizontal centerline of the lock. See the *Installation Instructions* and the *H03 or H14 Installation Specifications*.

- ① **Cylinder hole**
1 1/4" dia. Drill only if the cylinder hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- ① **High security cylinder hole**
1 3/4" dia. Drill only for 36H and 37H mortise locks. See *H04 Hole Pattern Chart*.
- ② **Turn knob or emergency entrance hole**
1/2" dia. Drill only if the turn knob or emergency entrance hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- ③ **Hotel indicator hole**
1/2" dia. Drill only if the hotel indicator hole is required on this side of the door. See *H04 Hole Pattern Chart*.
- ⑤ **Through-bolt hole**
3/8" dia x 2 holes. Drill through the door. See *H04 Hole Pattern Chart*.
- ④ **Knob hole**
7/8" dia. Drill only if the knob hole is required on this side of the door. See *H04 Hole Pattern Chart*.

Note

- 1 This template is for wood doors only.

