


# Template for 23F76 Sequence Lock with 360° Rotation Outside Cyl

- 1 Use the back plate to locate and drill the three 9/64" dia. holes making sure that you allow enough space for the strike to be located next to the back plate.
- 2 Aligning the three holes to the template, mark and drill the 1 1/4" hole.

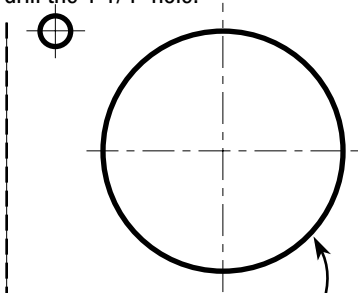

Drill one 1 1/4" dia. hole  
through the door.

Drill three 9/64" dia. holes  
7/8" deep.

**Best Access Systems**  
Indianapolis, Indiana