

7 Through-bolt hole
3/8" dia. Drill only for 'J' full-plate escutcheons. See H04 Hole Pattern Chart.

1 Cylinder hole
1 1/4" dia. Drill only if the cylinder hole is required on this side of the door. See H04 Hole Pattern Chart.

2 Turn knob or emergency entrance hole
1/2" dia. Drill only if the turn knob or emergency entrance hole is required on this side of the door. See H04 Hole Pattern Chart.

3 Hotel indicator hole
1/2" dia. Drill only if the hotel indicator hole is required on this side of the door. See H04 Hole Pattern Chart.

4 Knob hole
7/8" dia. Drill only if the knob hole is required on this side of the door. See H04 Hole Pattern Chart.

5 Through-bolt hole
3/8" dia x 2 holes. Drill through the door. See H04 Hole Pattern Chart.

Mark and drill holes

- Determine the inside and outside of the door, then mark and drill each side of the door according to proper function. See H03 or H14 Installation Specifications and H04 Hole Pattern Chart.
- For best results, cut the template along the dotted lines and align the arrows with the marked centerlines.
- Use the other side of this template for marking the other side of the door.
- Mark the horizontal centerline of the strike 3/8" above the horizontal centerline of the lock. See the Installation Instructions and the H03 or H14 Installation Specifications.

Align with the vertical line drawn on the door

Cut the template along the dotted lines and align the arrows with the marked centerlines.

Top of strike lip

Horizontal centerline of the lock
Align with the horizontal line drawn on the door

Bottom of strike lip

Horizontal centerline of the knob or lever

Align with the vertical line drawn on the door

Note

1 This template is for wood doors only.

Cut the template along the dotted lines and align the arrows with the marked centerlines.

1 1/4"

1"

Lock case mortise

Horizontal centerline of the lock

Mortise the front

- Insert the mortise lock case into the mortise cavity.
- Mark the outline of the lock front.
- Remove the mortise lock case and then mortise to match the thickness of the front.


Title
Installation Template for 34H-35H Mortise Locks

BEST ACCESS SYSTEMS

Series 34H-35H	Backset 2 3/4"	Trim style J	Door thickness 1 3/4"-5"	Rev date 04/2000	Template number H12	Rev D
-------------------	-------------------	-----------------	-----------------------------	---------------------	-------------------------------	-----------------

Note: To ensure accurate door preparation, use only factory-printed or laser-printed templates. Do not use copies or facsimilies.

T61956/Rev D 1794773 ER-7991-10 Apr 2000

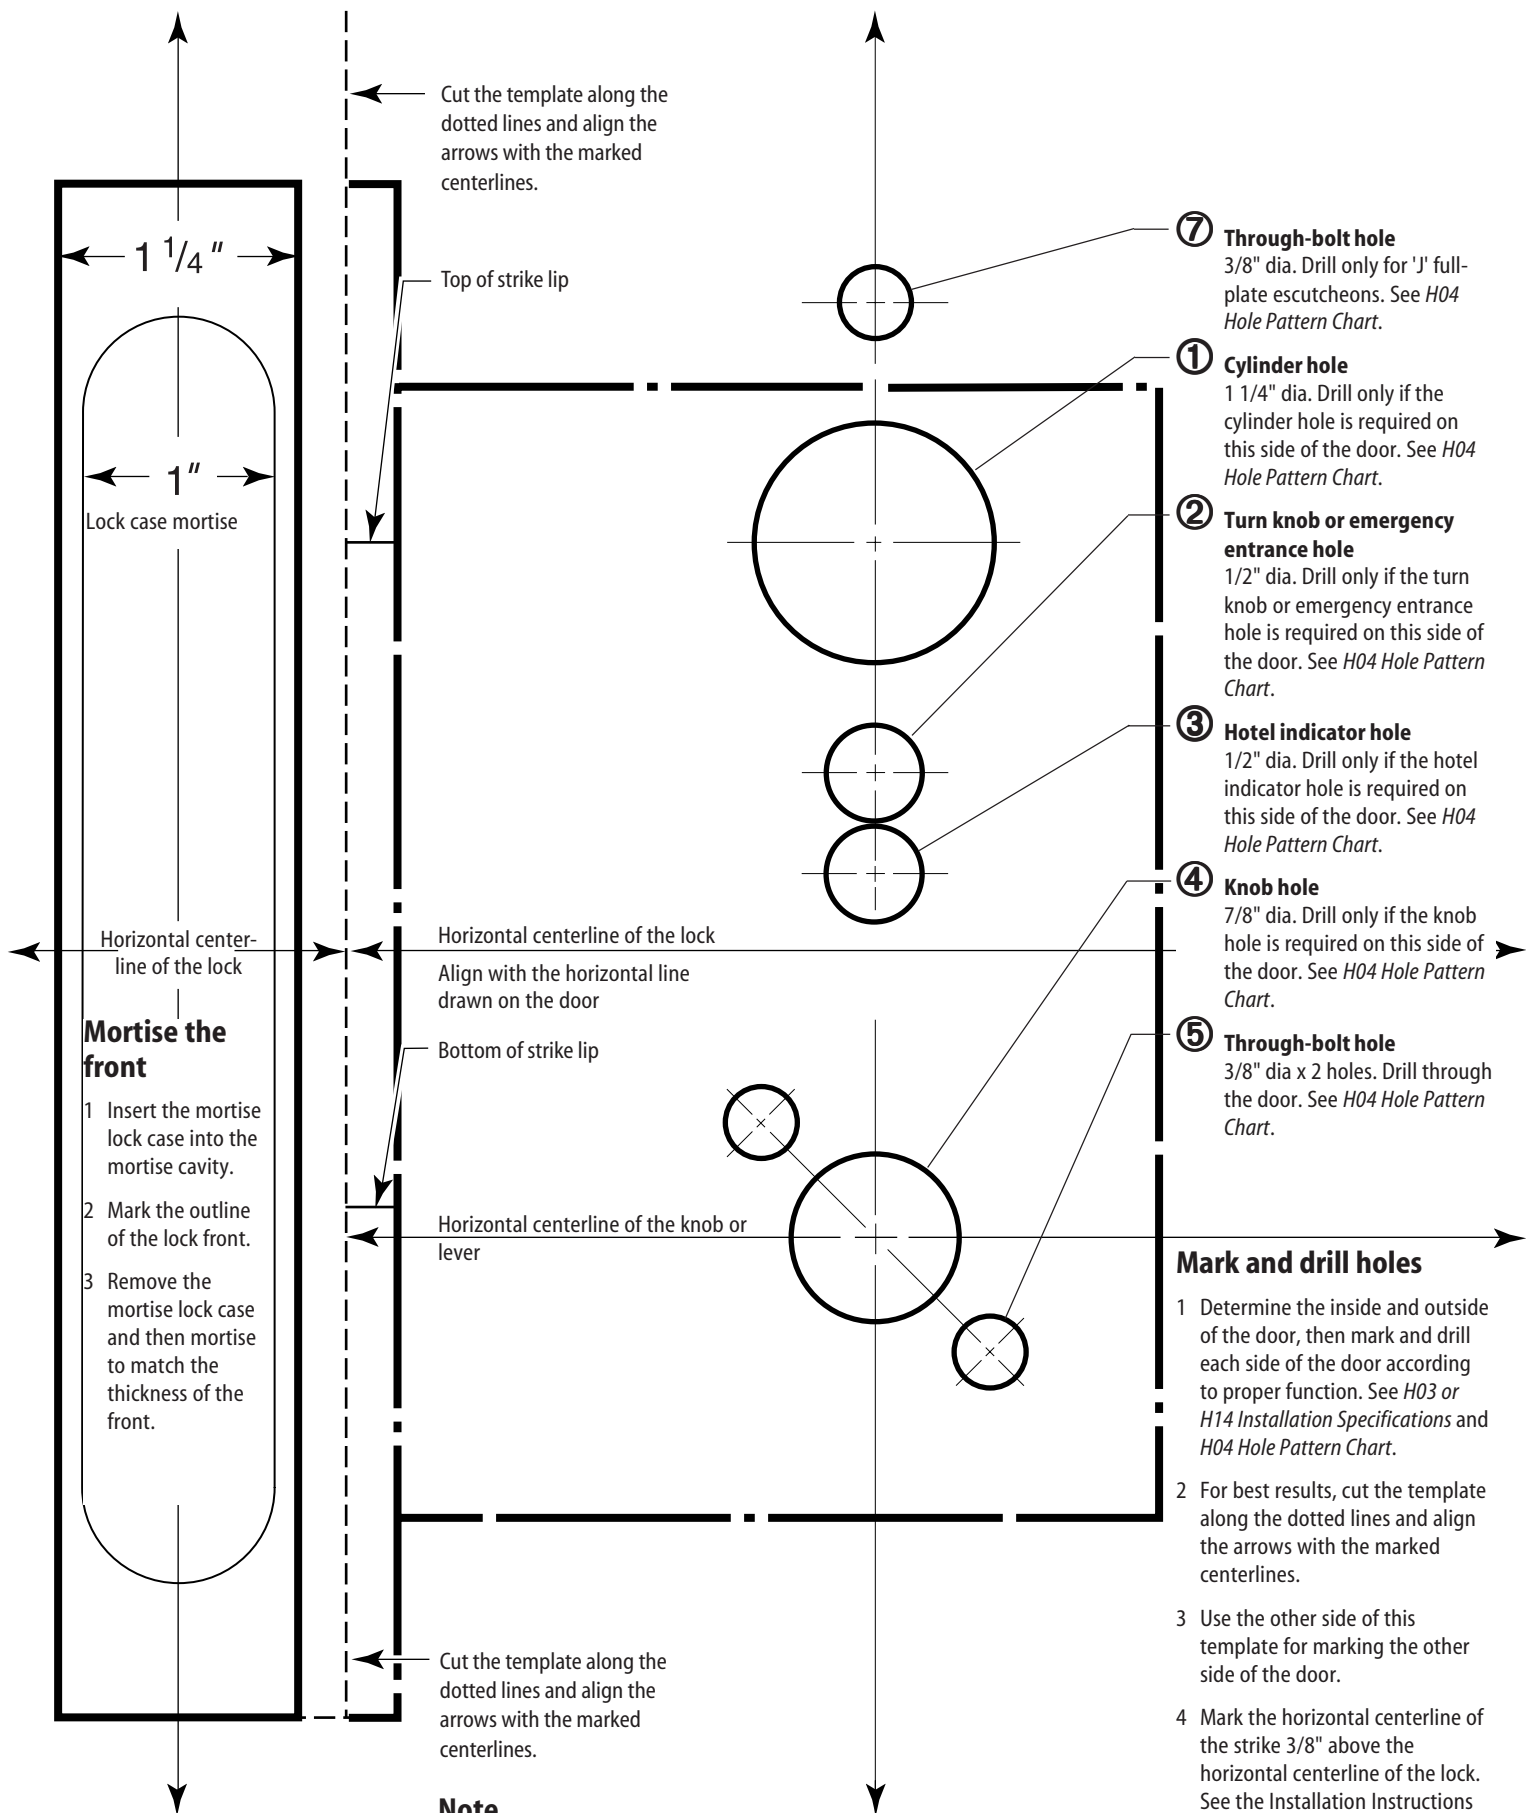

Note

1 This template is for wood doors only.