


5 Determine the Mullion Length and cut from the TOP of the tube.

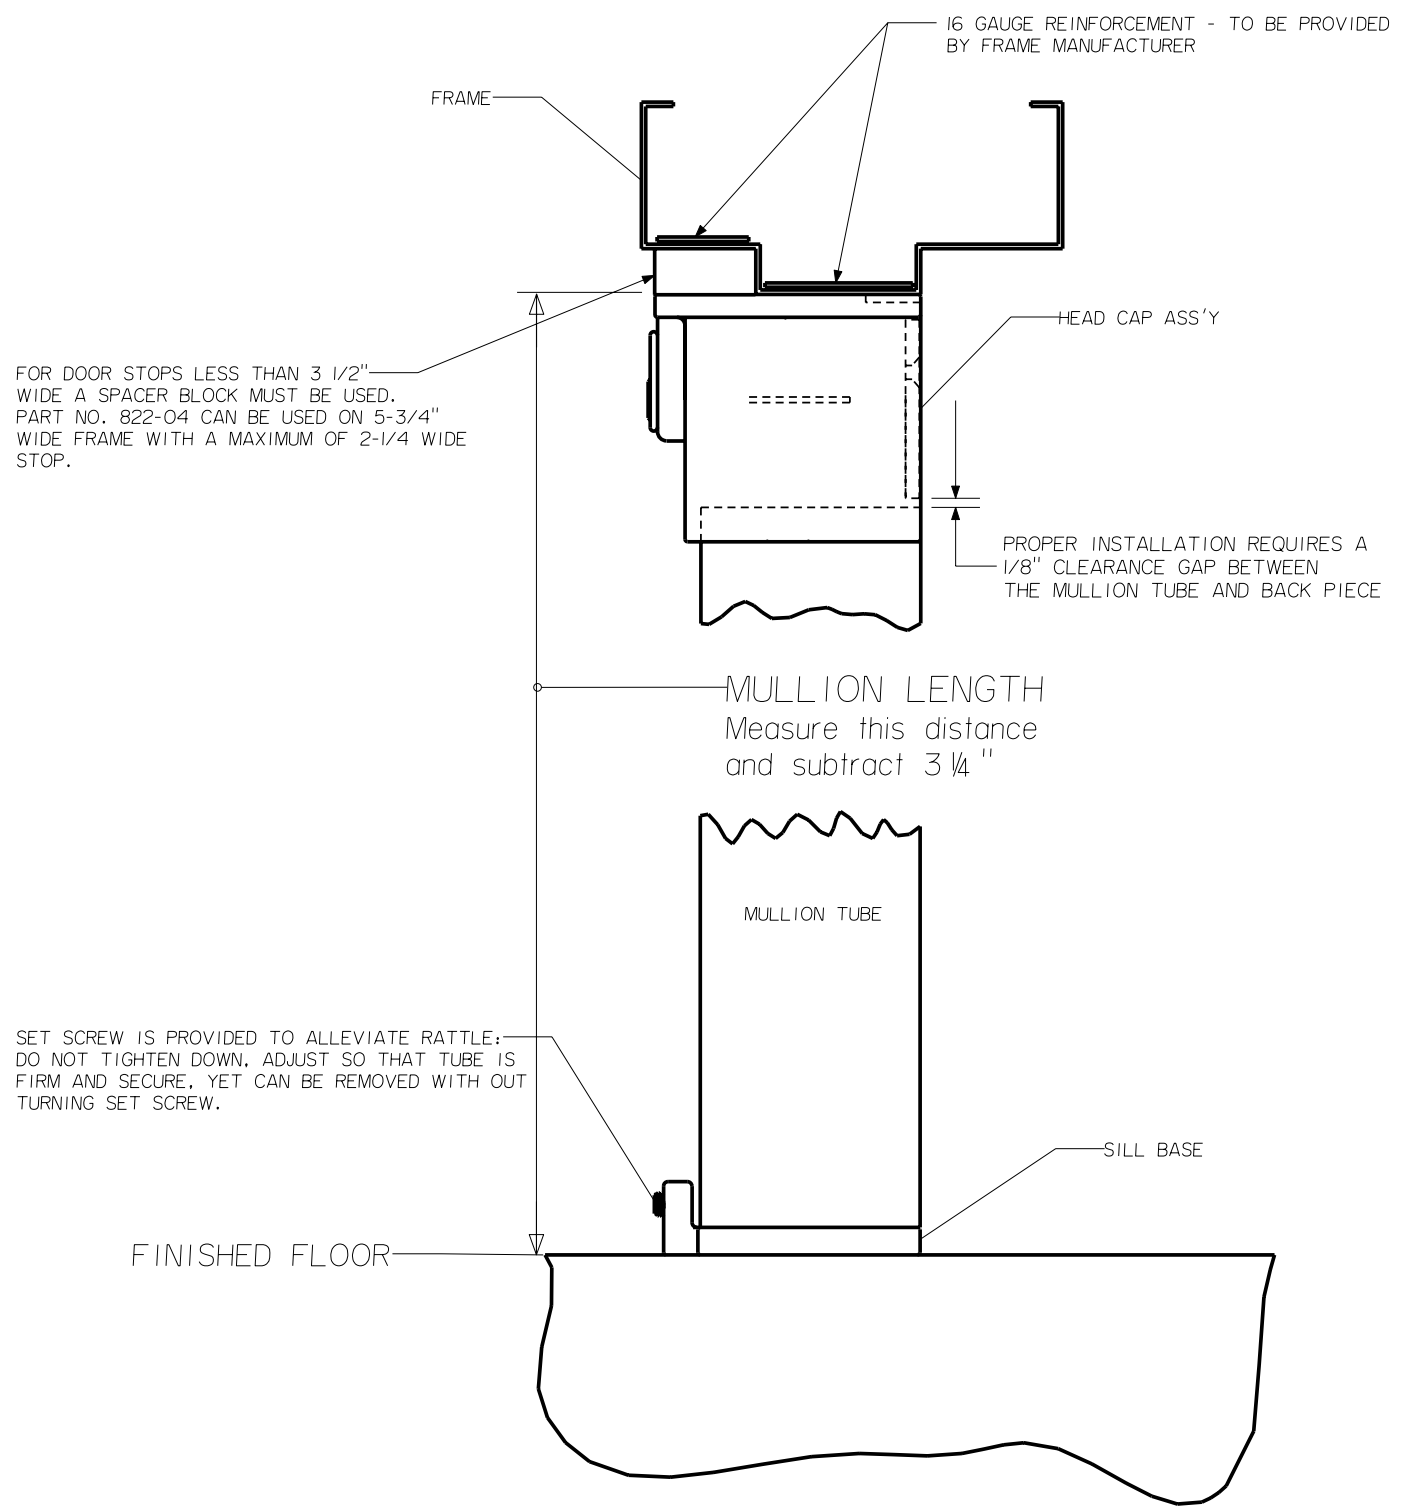

6 OPERATION: Place the bottom of the tube into the Sill Base and pivot the top into the Head Cap, the tube should latch securely, and turning the key clockwise should allow the tube to release.