


Template No. T98-600

600 SERIES CONTINUOUS PINNED HINGE CONCEALED WIRE TRANSFER

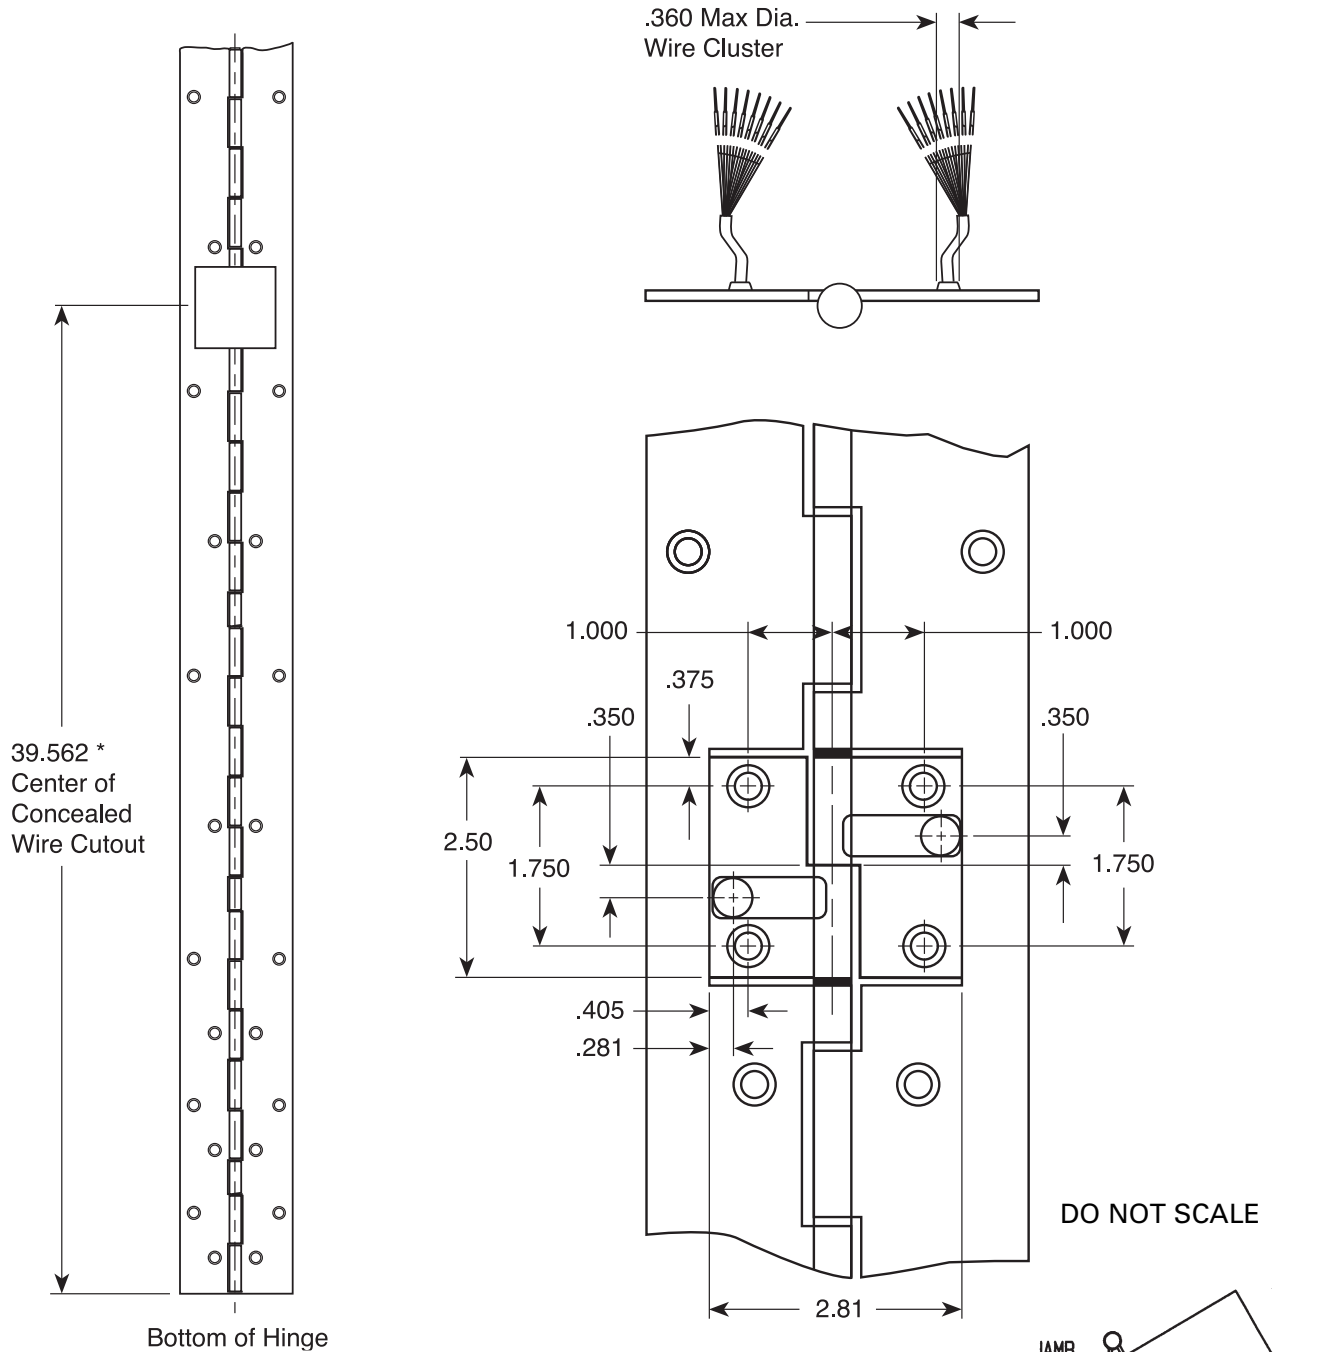

NOTES:

- 1 Drill a hole (1/2" maximum diameter) into the jamb and door for the wires and connectors.
- 2 Both faces of the hole should be deburred and primed to help avoid damaging wire insulation.
- 3 When using CE600 with 651HD, 652HD, 653HD, add SHCE600 shims.

* For a non-standard hinge length, the position of the cut-out may vary ± 1.000 .

TOP VIEW
LEFT HAND DOOR
LEFT HAND DOOR TAKES LEFT HAND HINGE
RIGHT HAND REVERSE DOOR TAKES LEFT HAND HINGE

TOP VIEW
RIGHT HAND DOOR
RIGHT HAND DOOR TAKES RIGHT HAND HINGE
LEFT HAND REVERSE DOOR TAKES RIGHT HAND HINGE
HANDING 643/653 CONTINUOUS HINGE
WITH CONCEALED WIRE TRANSFER