





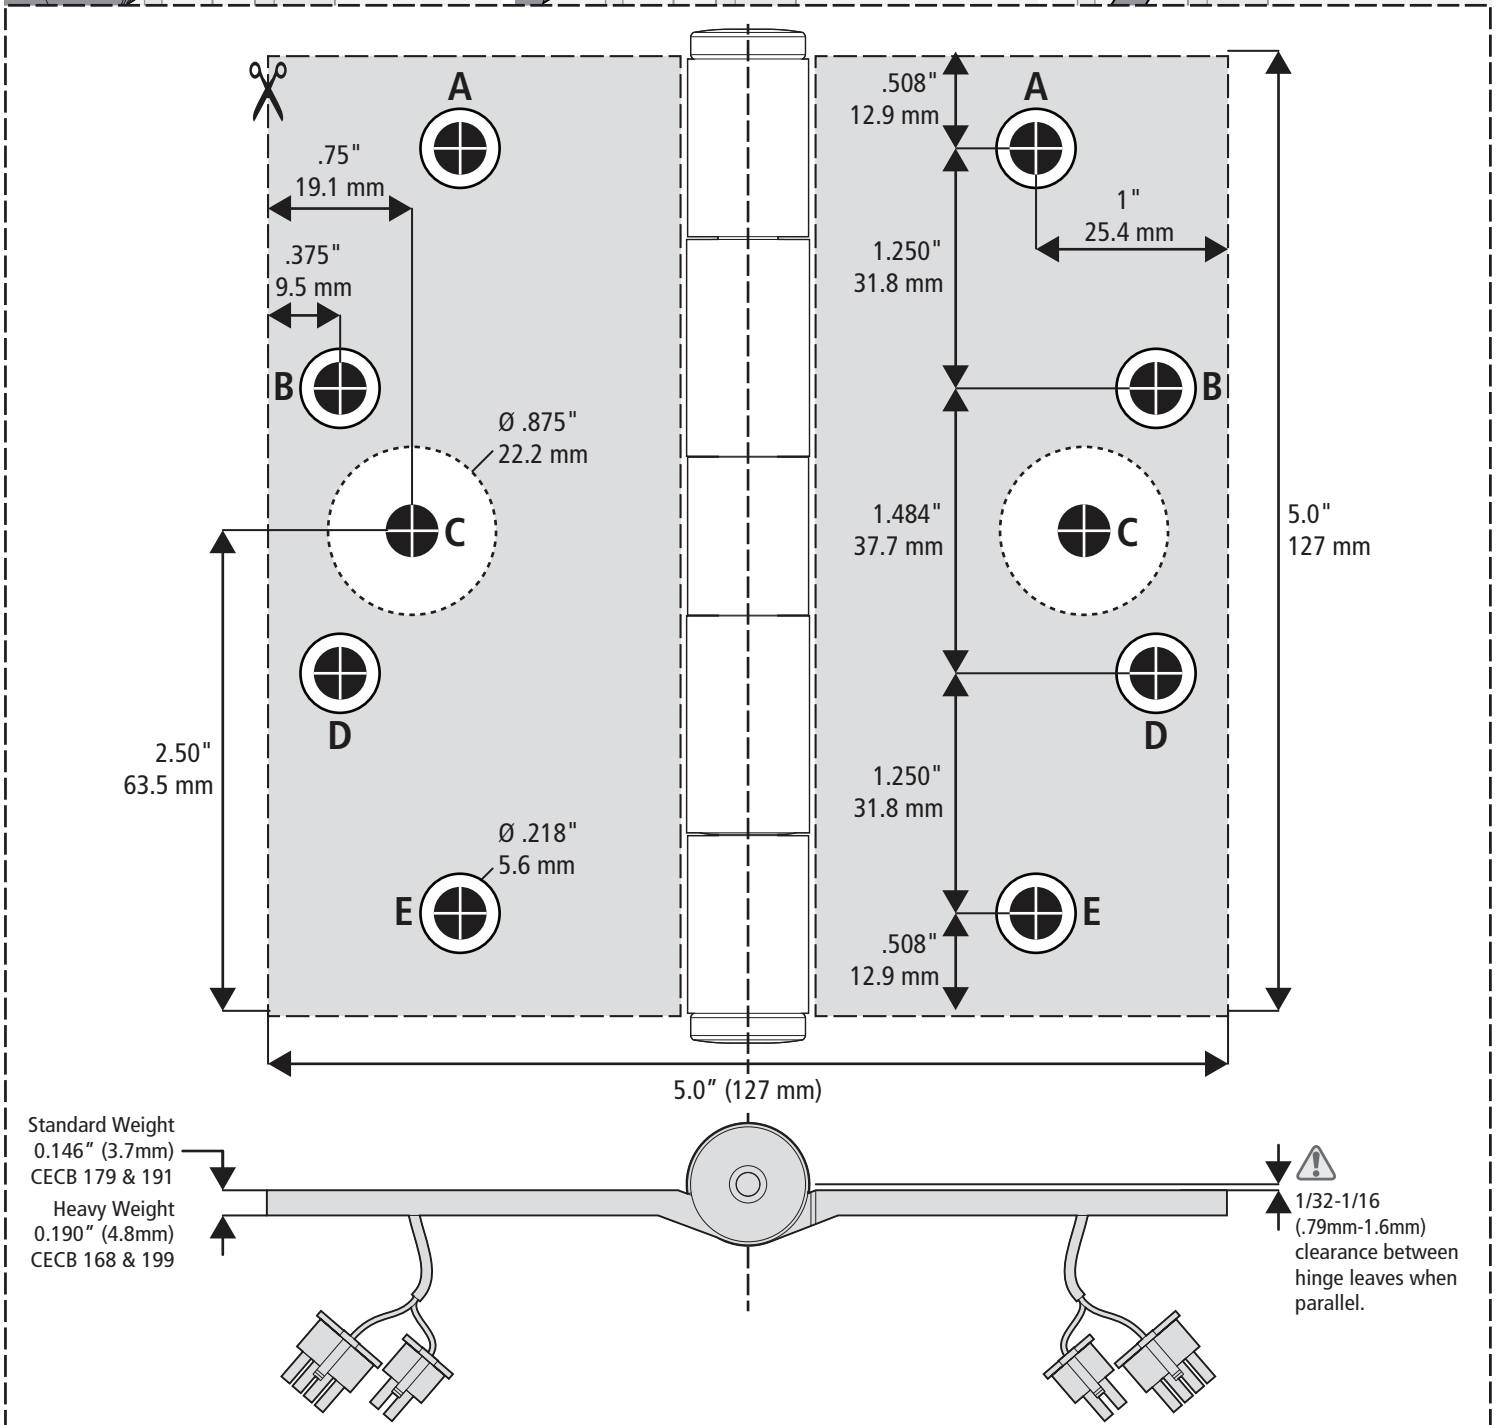


#### Tools Needed

Herramientas necesarias  
Outils nécessaires

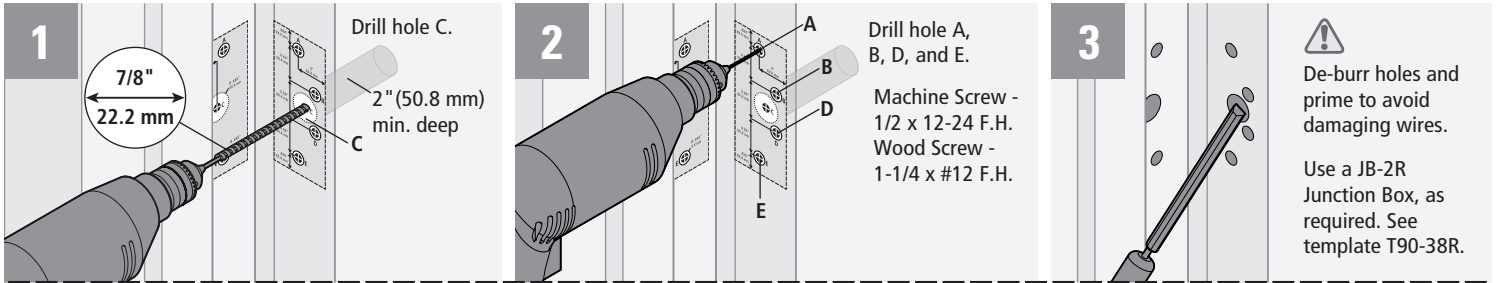


File





De-burr holes and  
prime to avoid  
damaging wires.

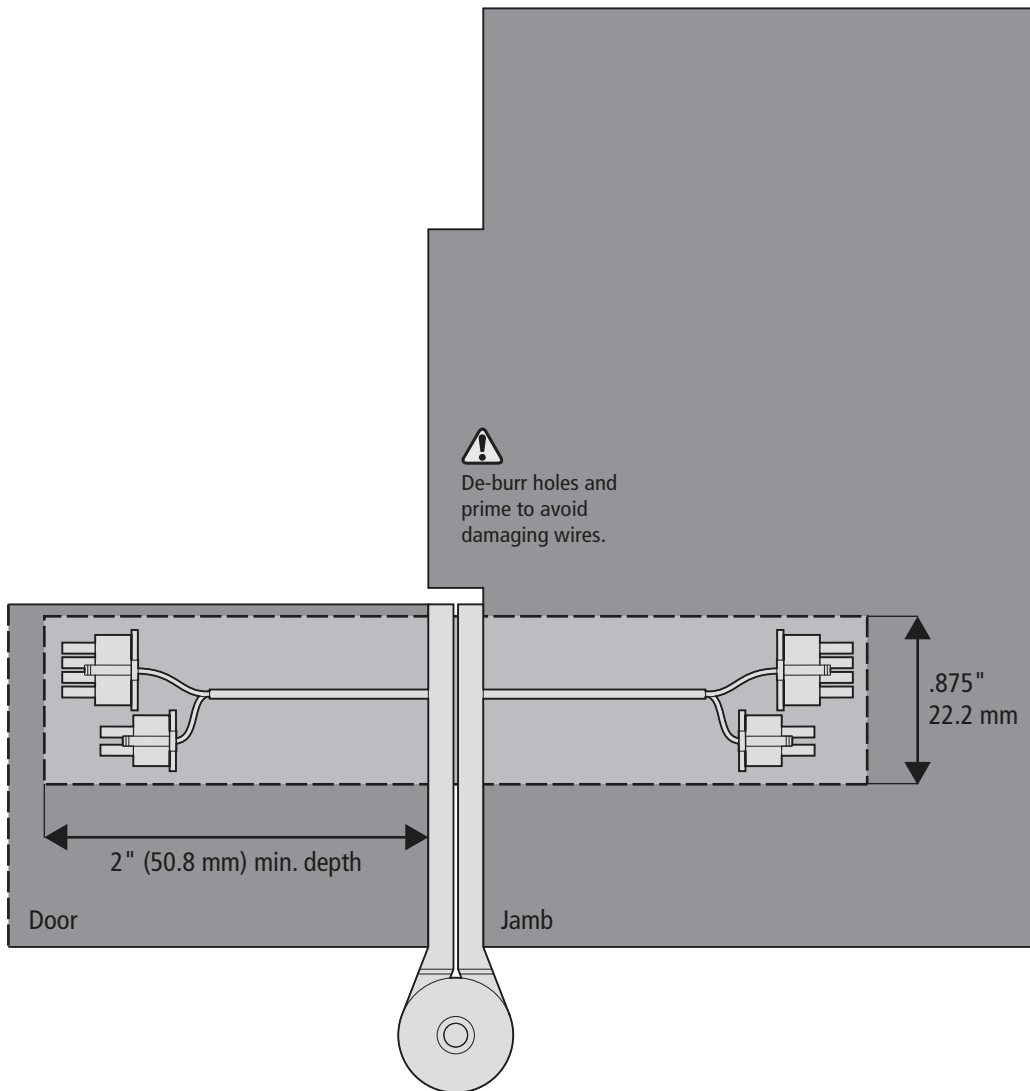

2" (50.8 mm) min. depth

.875"  
22.2 mm

Door

Jamb